



## 8652 – SPEED 1500 VINTAGE

### USER MANUAL

LB8652\_IM\_V2\_UK



**Thank you for buying our product.**

**Before using your device, please read this manual carefully and keep it  
properly for future use.**

# 1. SAFETY INSTRUCTIONS

**READ CAREFULLY BEFORE USE – risk of injury or burn if misused. Use not in accordance with the instructions for use would relieve the manufacturer of any liability.**

- This appliance can be used by children aged 8 years or older **if they are supervised, instructed on how to use the appliance safely, and aware of the hazards involved.**
- The devices may be used by persons with reduced physical, sensory or mental capabilities or who lack knowledge, **if they are supervised, instructed on how to use the device safely, and aware of the hazards involved.**
- Do not allow children to play with the appliance – supervise children.
- Only children over 8 years of age can clean and maintain under adult supervision.
- Keep the appliance and power cord out of the reach of children under 8 years of age.
- Check that the voltage of the network corresponds to that noted on the rating plate of the appliance.
- Plug your device into a grounded power outlet. Failure to do so may result in electric shock and possibly serious injury. It is essential for your safety that the earthing connection corresponds to the electrical installation standards in force in your country. If your installation does not have a grounded power outlet, it is imperative that you intervene, before any connection, an approved body that will bring your electrical installation into compliance
- The device must be used with an RCD power supply not exceeding 30 mA (IEC 60335-2-78)
- Unwind the cord completely. If using an extension cord, it is imperative to use a model equipped with an earthing socket and wires with a cross-section equal to or greater than 1 mm<sup>2</sup>.
- Do not store or use flammable products or sprays near the device when in use.
- Do not use the device in easily flammable atmospheres (e.g. aerosol cans).
- Place the device away from easily flammable objects (curtains, etc.).
- Do not use the appliance in rooms with a bathtub, shower or swimming pool, or near sinks or faucets.



- Do not place the appliance on a hot surface or near a flame.
- Do not leave the appliance unattended while it is in operation.
- Use the appliance exclusively for household use and as directed in the instructions for use.
- Never immerse the appliance in water or any other liquid, either for cleaning or for any other reason. Never put it in the dishwasher.
- Be careful not to use or store the appliance outdoors in the rain. Store it in a dry place.
- Never move the appliance by pulling on its cable. Make sure that the power cord cannot be accidentally snagged to prevent the appliance from falling. Do not wrap the cord around the appliance, do not twist it, and make sure that it does not come into contact with the hot parts of the appliance.
- Do not touch the metal parts of the appliance when it is working as they are very hot.
- Place the device in a place where it cannot be accidentally touched.
- Caution: The surface of the appliance has residual heat after use. After unplugging, allow to cool before cleaning or storing.
- This appliance is not intended to be operated by means of an external timer or by a separate remote control system.
- This device can be used in environments such as:
  - Staff kitchen areas in shops, offices and other professional environments
  - Farms
  - hotels, motels, and other residential environments
  - Bed and breakfast or similar environment
- This appliance is only intended for cooking waffles. Do not place anything on the trays other than waffle batter.
- Watch out for any grease splashes.
- Do not use plastic cutlery to put food on the plate, flip it over, or remove it.
- Never cover the appliance when it is in operation, for example with aluminum foil. Risk of overheating.
- Never use the appliance as an auxiliary heater.
- Unplug your device as soon as you stop using it and when you clean it.
- Do not use the appliance if:
  - it has a damaged or defective cord
  - it has fallen and has deterioration or malfunctions

In each of these cases, the device must be sent to the nearest service center in order to avoid any danger.

- Any intervention other than the usual cleaning and maintenance by the customer must be carried out by an authorized service center.
- Do not leave the power cable hanging within easy reach of children.
- The power cable should never be near or in contact with hot parts of the appliance, near a heat source, or at a sharp angle.
- The power cable should be regularly examined for signs of defects or degradation. If the power cable or plug is damaged, do not use the device (IEC 60335-2-78). In order to avoid any danger, it is mandatory to have them replaced by an authorized service center.
- Do not unplug the appliance by pulling on the cord.
- The power outlet must be easily accessible at all times to allow the device to be quickly disconnected from the power supply.
- Use only an extension cord in good condition, with a grounded outlet, and with a lead wire with a cross-section at least equal to the wire supplied with the product.
- Never place paper, cardboard or plastic in the appliance or place anything on it.
- If parts of the product do catch fire, never try to extinguish them with water. Unplug the device. Smother the flames with a damp cloth.
- Do not place the product on/near a hot electric or gas burner, or in a hot oven.
- Do not touch the non-stick cooking plates while the appliance is in operation:  
**BURNS!**
- The external surfaces of the device may also become hot during operation, be sure to handle it by the handle until it has cooled down: **BURNS!**
- Always let the appliance cool down before handling/cleaning/storing:  
**BURNS/FIRE!**
- The device should not be used or stored in a humid environment.
- Do not leave any part of the packaging accessible to children: risk of absorption, choking, etc.

## **2. BEFORE FIRST USE**

- Before first use, check that the appliance is unplugged and clean the non-stick plates with a soft, damp cloth
- Let the moisture evaporate, then heat the plates for a few minutes to let any residue escape.
- Light smoke may form.

### **3. USING THE WAFFLE MAKER**

- While the appliance is unplugged, lightly grease the plates (oil, butter, margarine, grease, etc.).
- Plug in the unit, the circular thermostatic indicator lights up green, indicating the correct connection to the electrical grid.
- The temperature control is thermostatic: to preheat the plates, turn the thermostat knob to the maximum. The circular thermostatic indicator will then turn red.
- The thermostatic indicator will light up green again when the plates have reached the selected temperature (preheating takes about 3 minutes)
- Control the temperature and browning of the first waffles to adjust the temperature.
- Open the lid and pour the batter onto the bottom plate. Make sure there are no empty gaps and close the lid. If you have put too much batter, it will naturally drain as it flows out of the unit.
- Check the waffles while cooking: position yourself sideways in relation to the appliance (to avoid possible steam releases), open the lid slightly and close it if you think the cooking needs to be prolonged.
- The waffles take between 3 and 10 minutes to cook depending on different parameters
  - ✓ Amount of dough
  - ✓ Fluidity of the dough
  - ✓ Temperature Adjustment
  - ✓ Individual chewy or crispy taste

- When the waffles are ready, remove them from the baking sheets using a wooden utensil, but do not use a metal object.
- Be careful, the hobs are hot, and the external surfaces of the appliance can also become very hot
- Unplug the appliance as soon as you are done using it.
- Allow the device to cool before handling.

## **4. CLEANING AND MAINTENANCE**

- Before cleaning, make sure the unit is unplugged and has cooled completely.
- Clean the plates with a damp cloth
- Clean the external surfaces with a damp sponge.

## **CAREFUL**

- Never immerse the appliance or its cord in water or other liquids
- Never use metal objects
- Do not use a scouring sponge or abrasive product

## **DISPOSAL OF USED APPLIANCES**

Do not dispose of this device in municipal waste systems. Drop it off at a recycling and collection point for electronic and electrical devices. Check the symbol on the product, the user manual and the packaging. The plastics used to build the device can be recycled according to the packaging logo. By choosing to recycle, you are making a significant contribution to protecting our environment. Find the nearest collection point at your distributor or local government.