

ASTERIA

floor | user guide




UMAGE






ASSEMBLY GUIDE

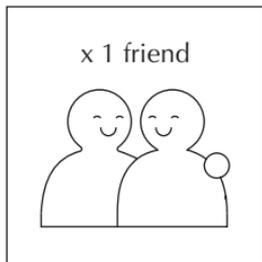

Ⓒ x 1 pc.




Ⓑ x 1 pc.

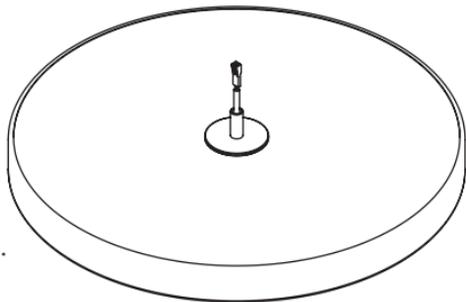


Ⓕ x 1 pc.




Ⓐ x 1 pc.

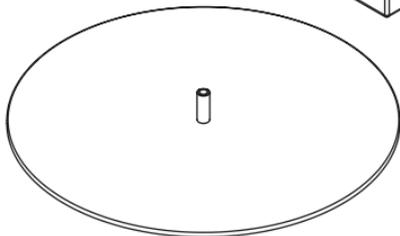


Ⓓ x 1 pc.



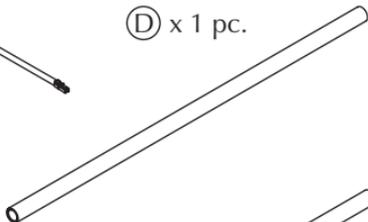



Ⓔ x 2 pcs.

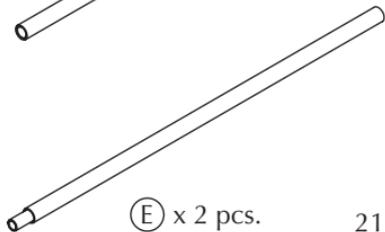





Find assembly video
by using the QR code



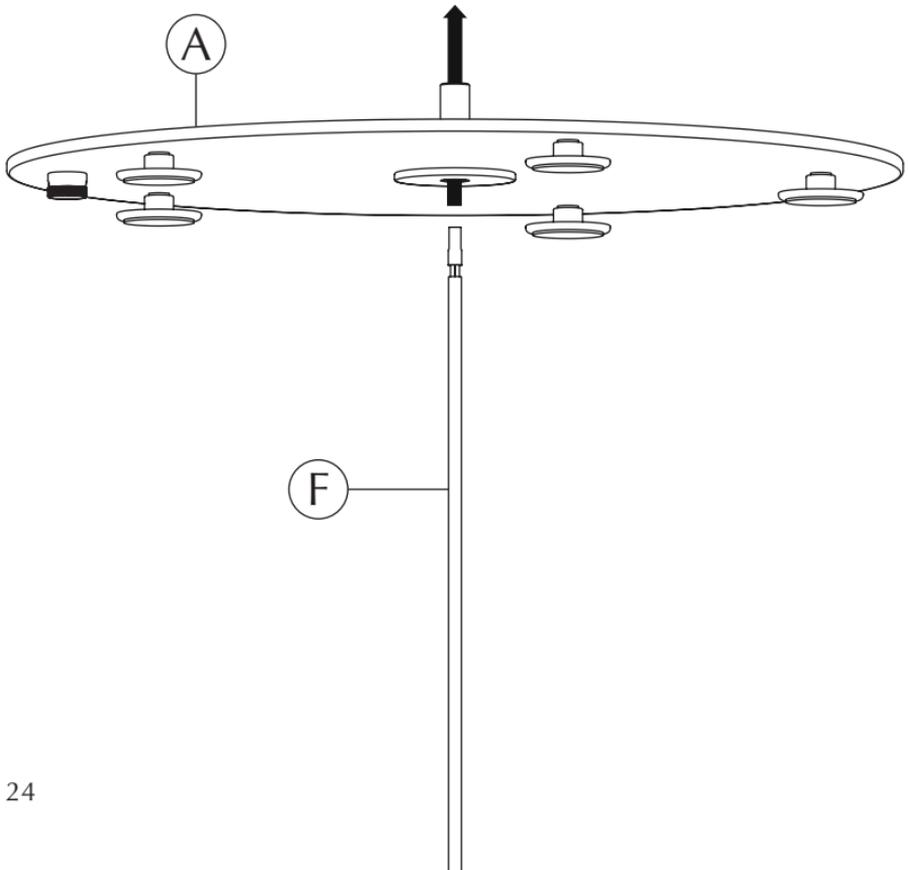


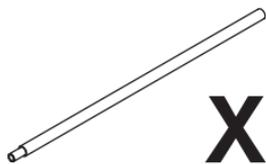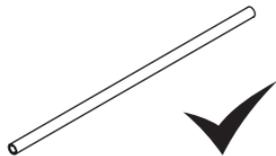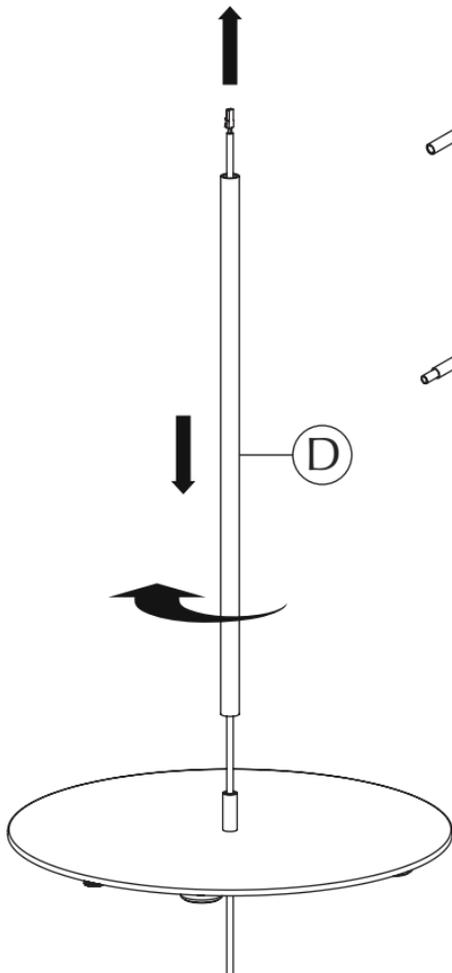


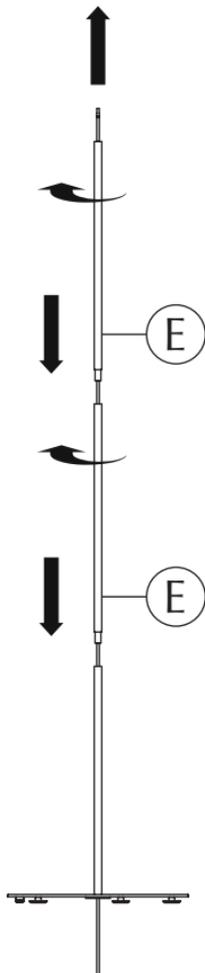


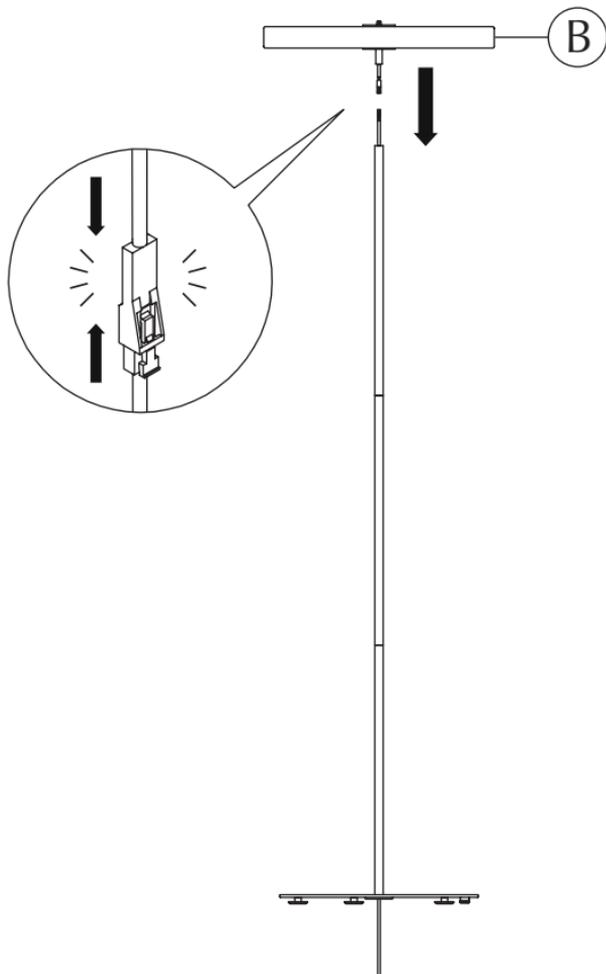


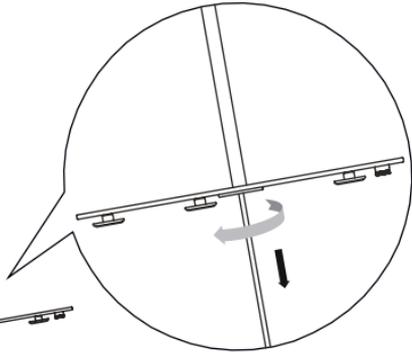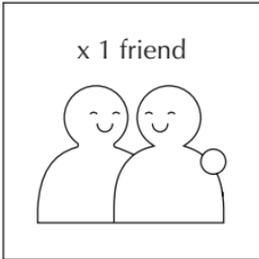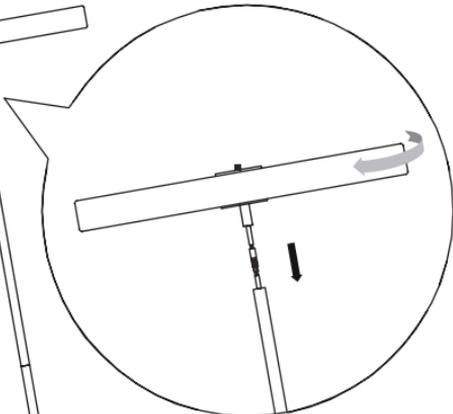


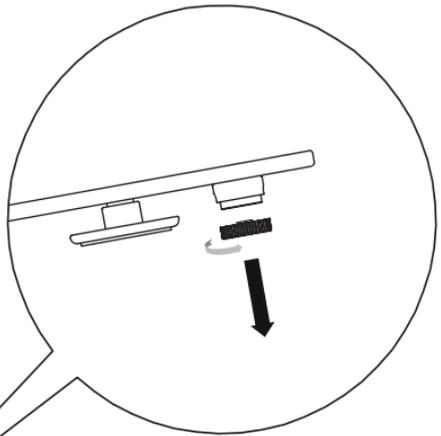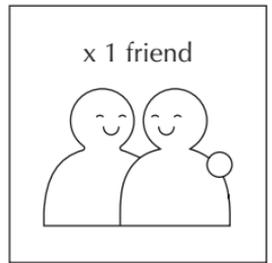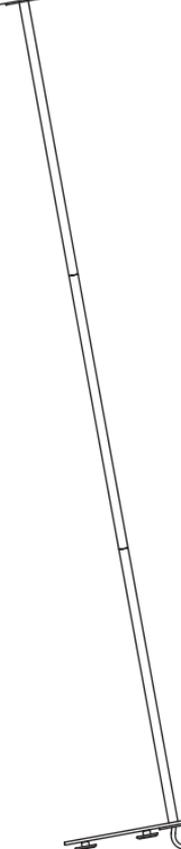

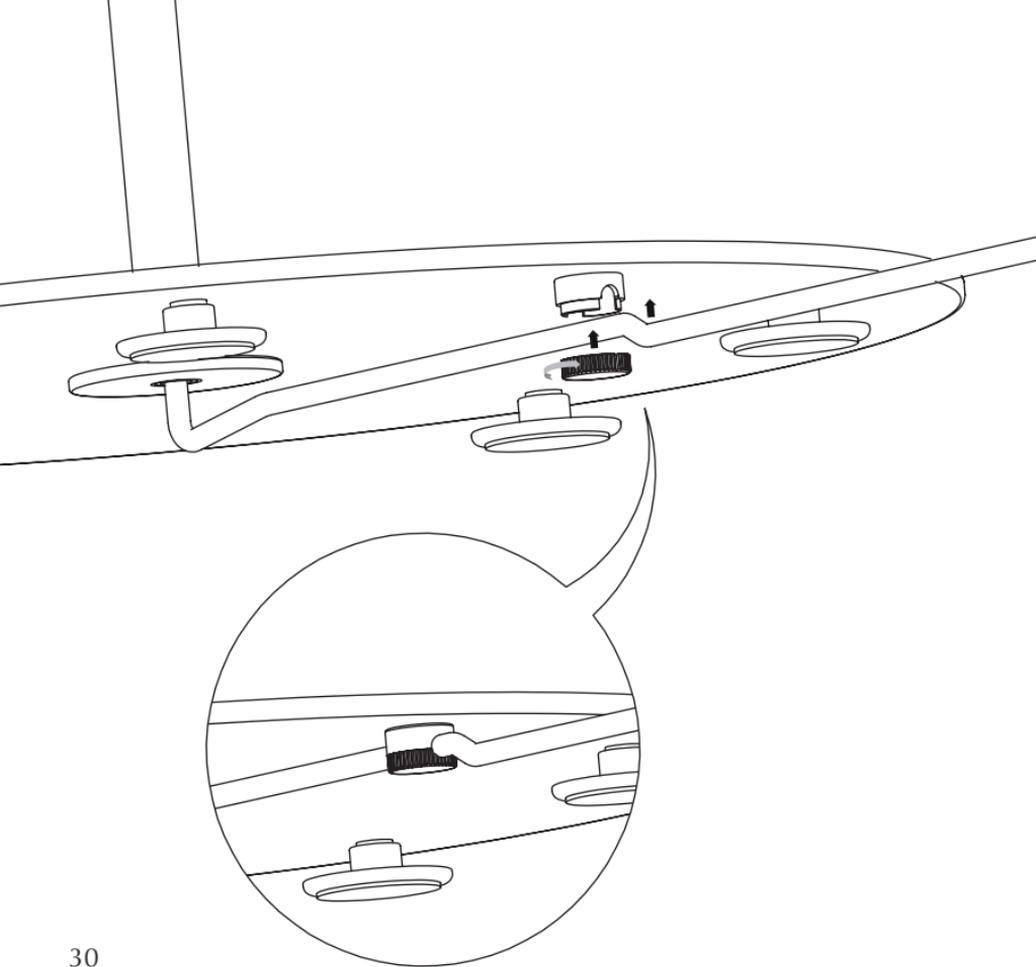

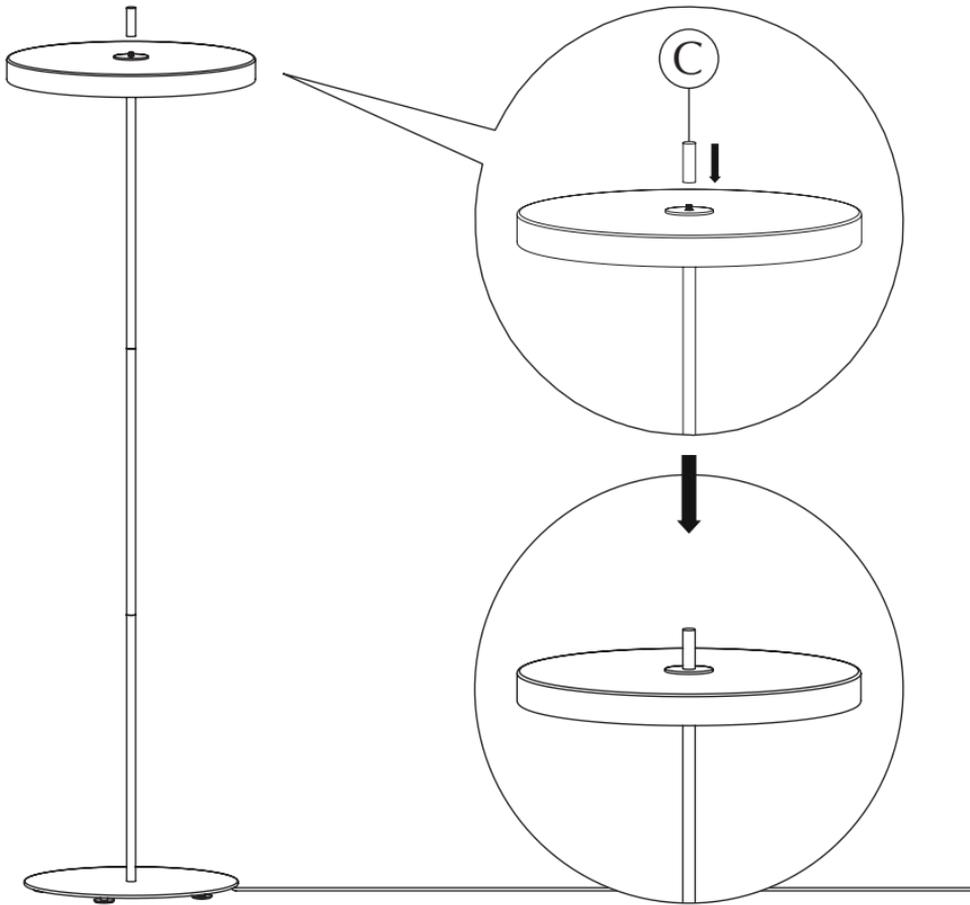


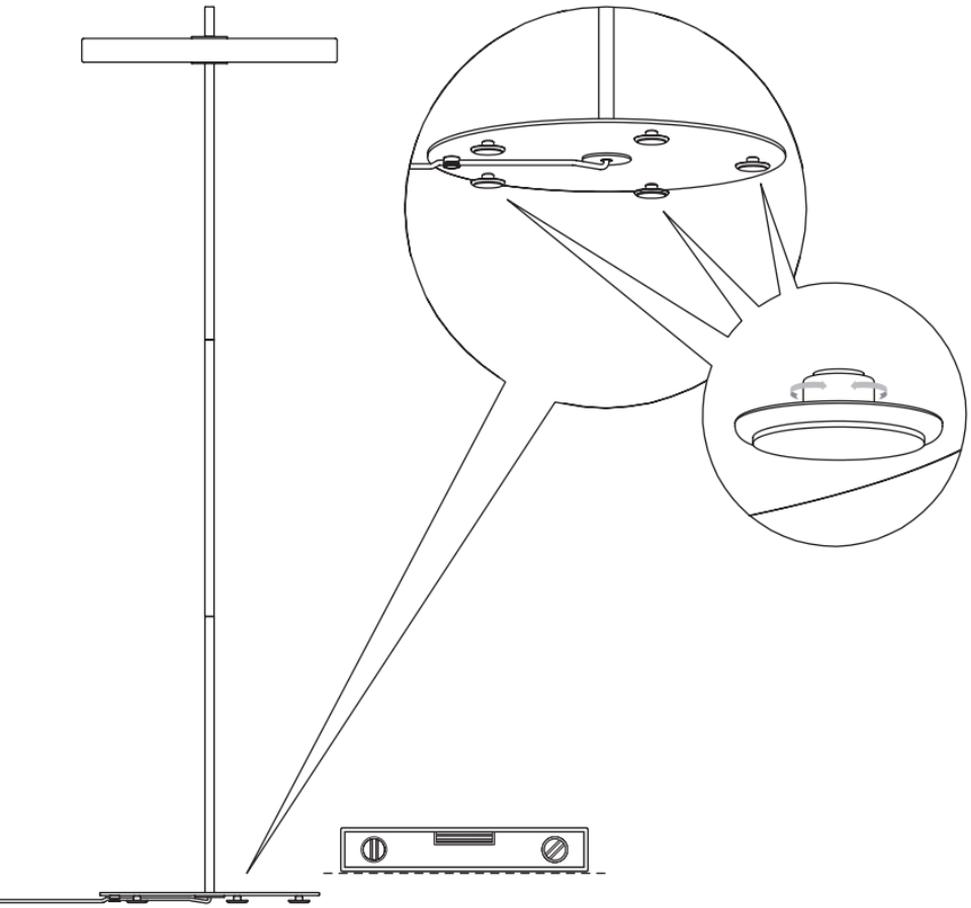


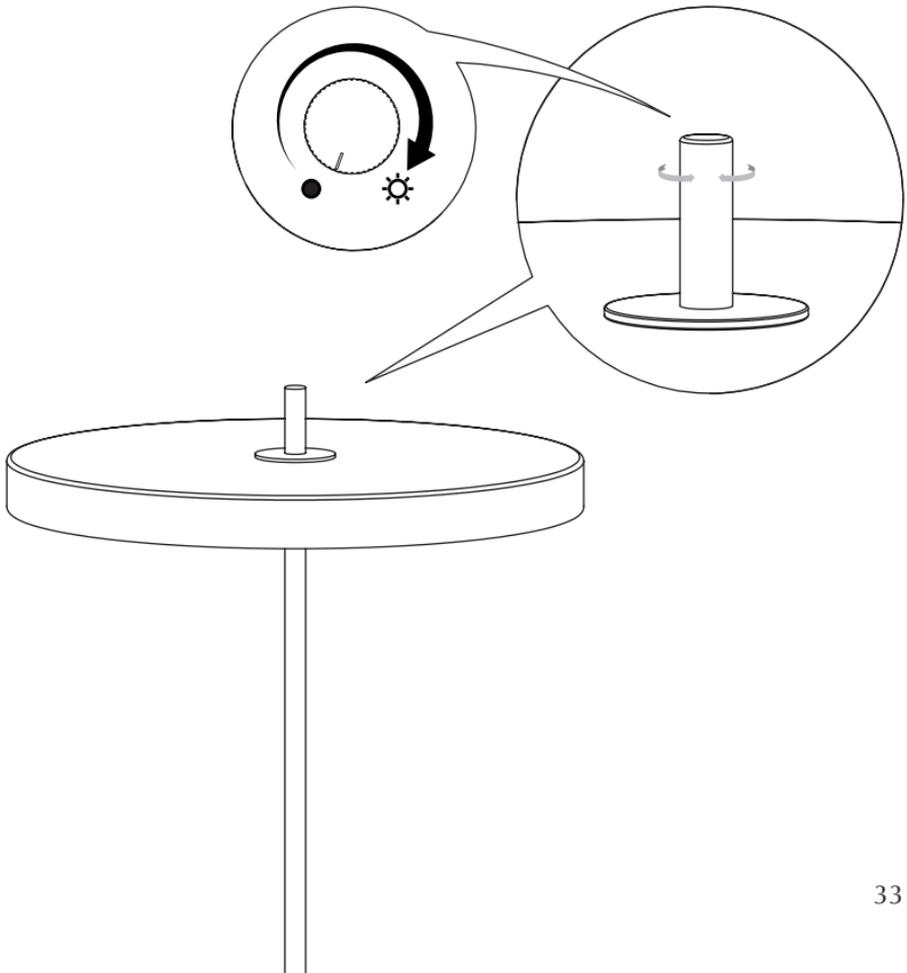

HOW TO REMOVE / REPLACE SEPARATE CONTROL GEAR


Only use control gear from UIMAGE

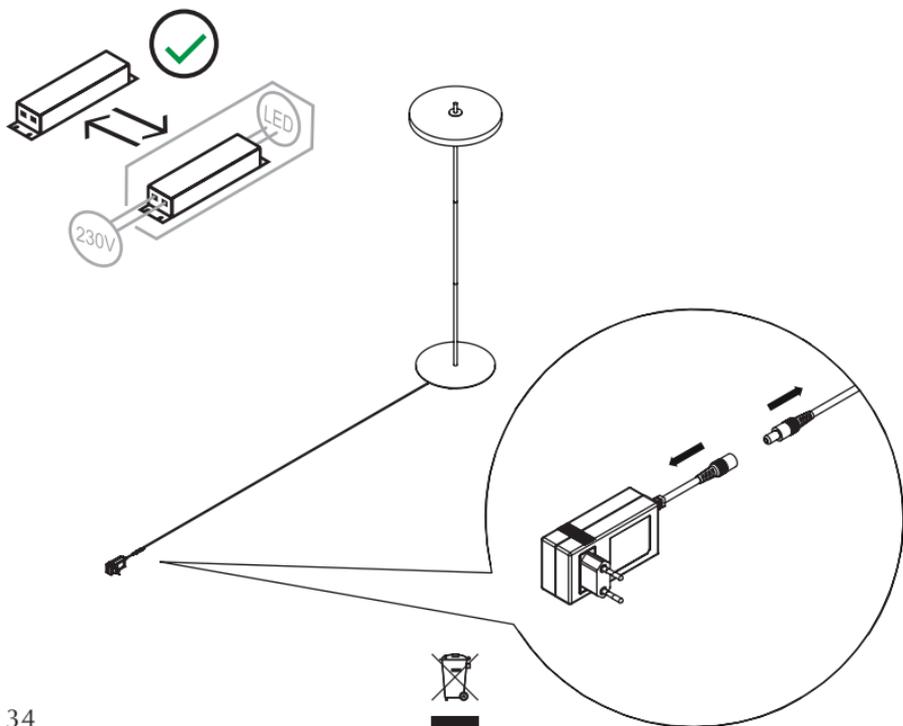


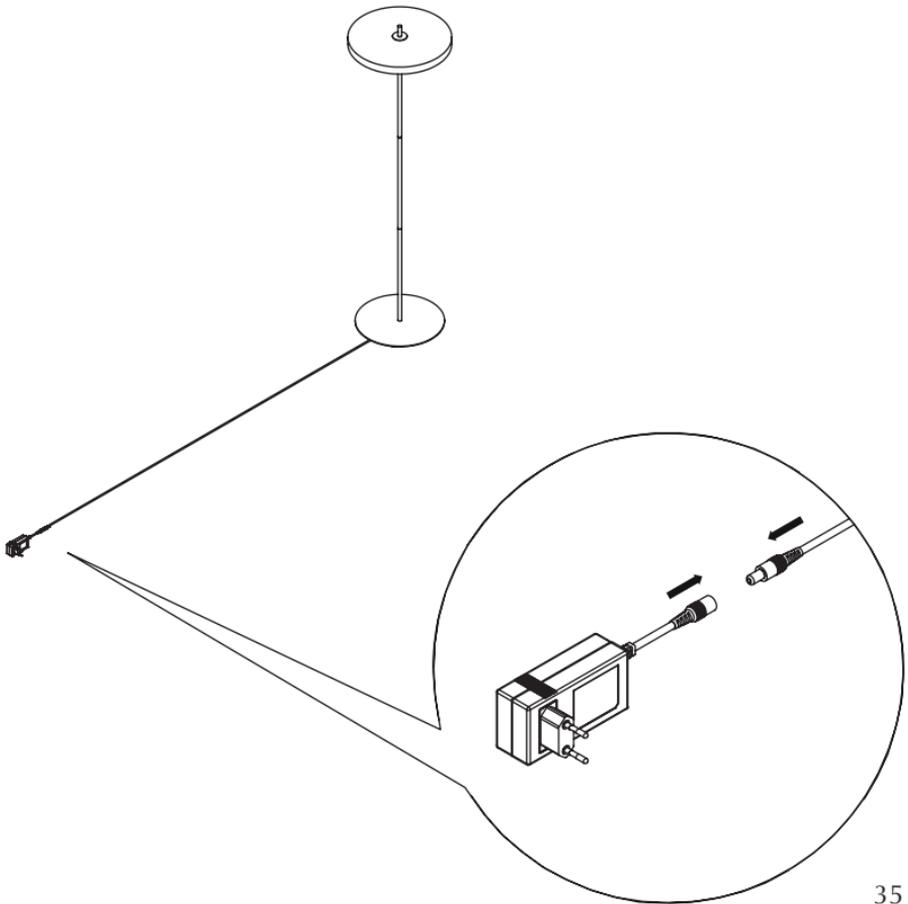






HOW TO REMOVE LIGHT-SOURCE AT END-OF-LIFE


The following operation might permanently damage the outside shell – only do the following when product needs to be disposed of.

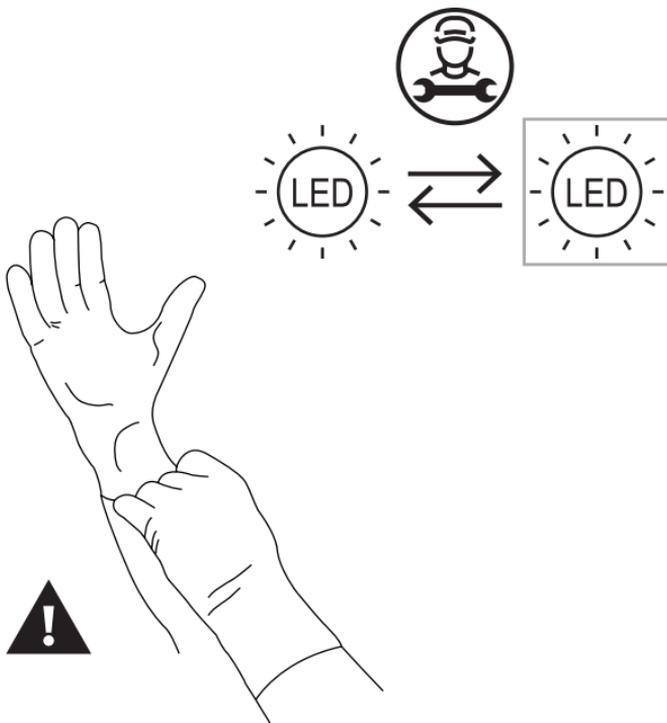



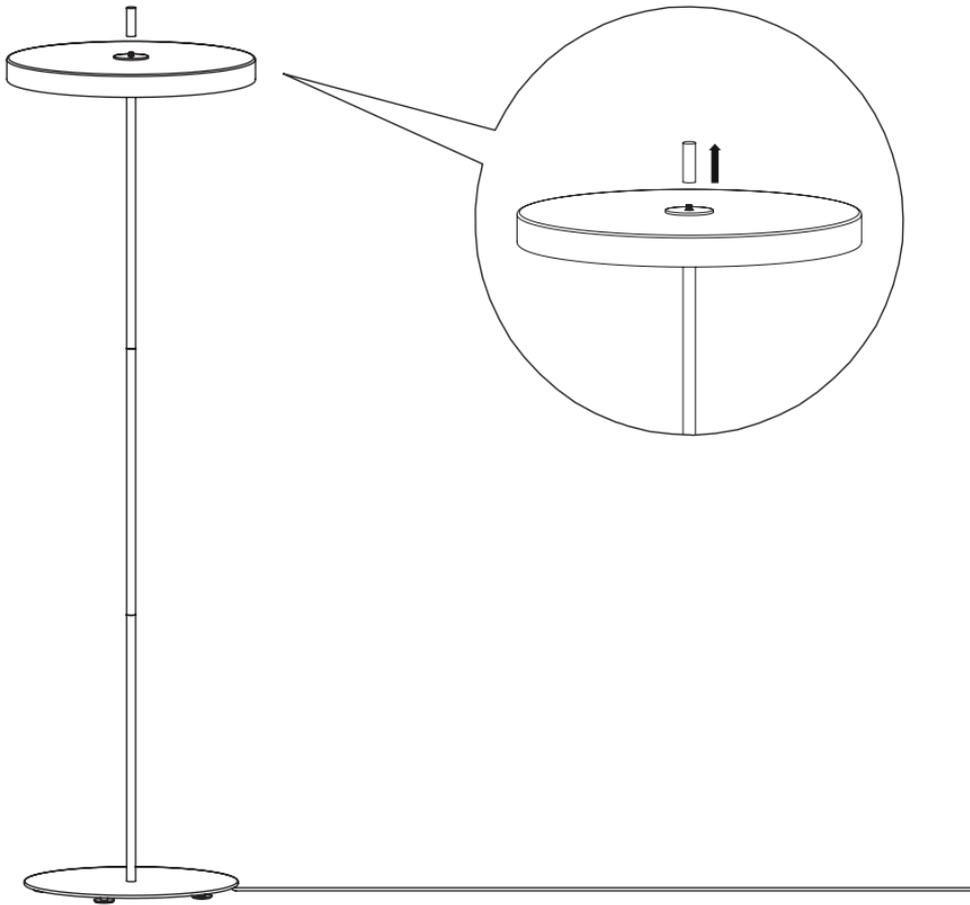



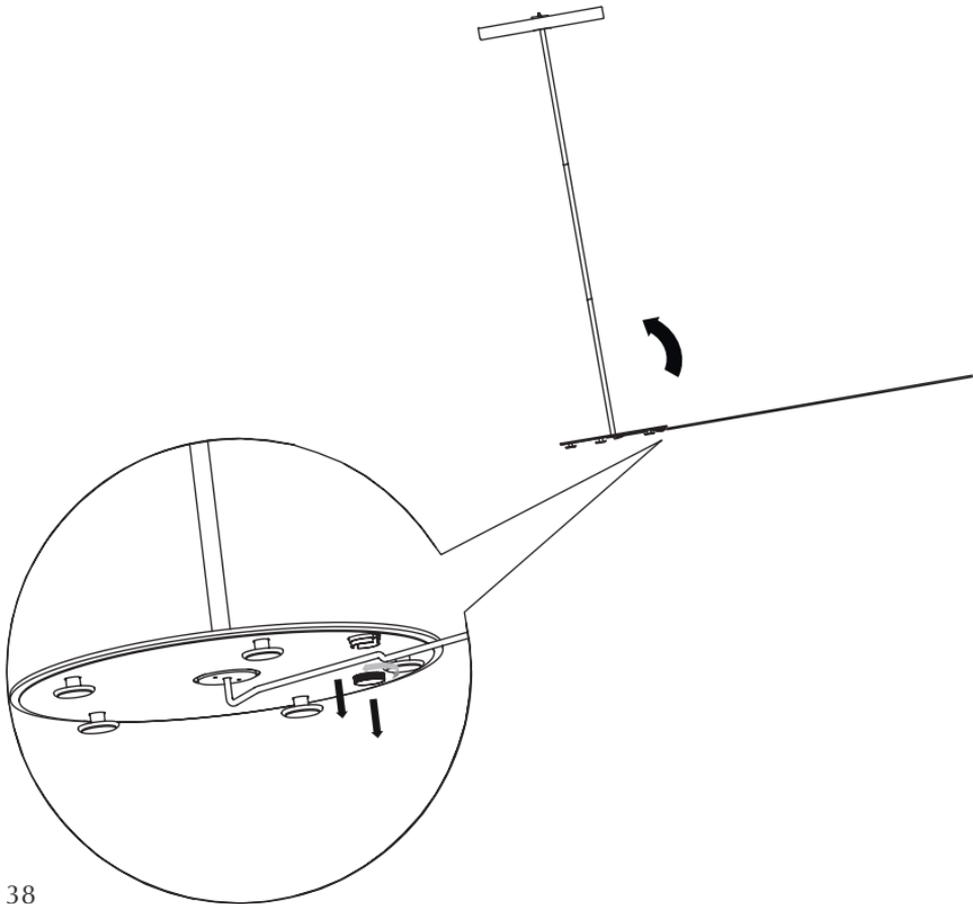


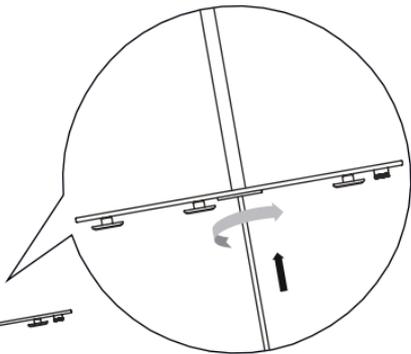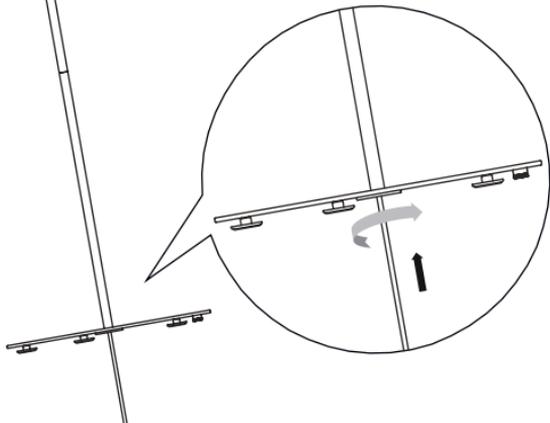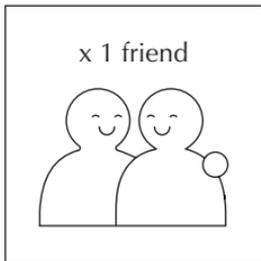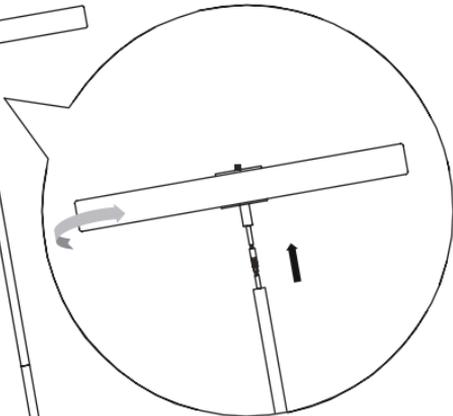



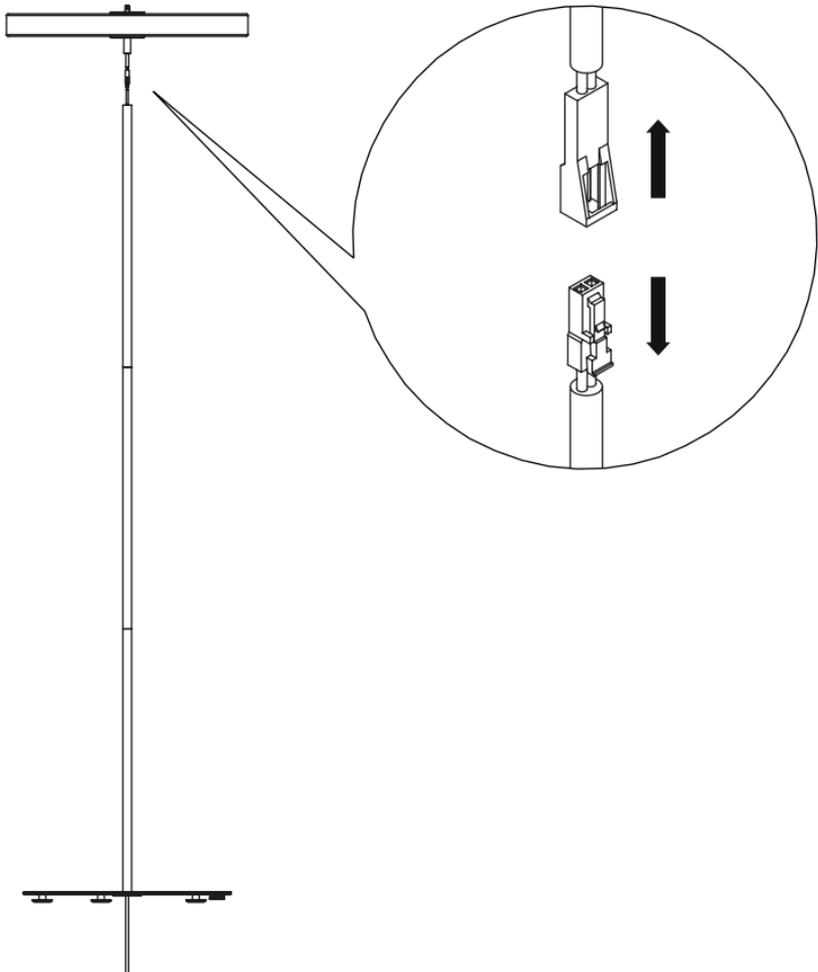


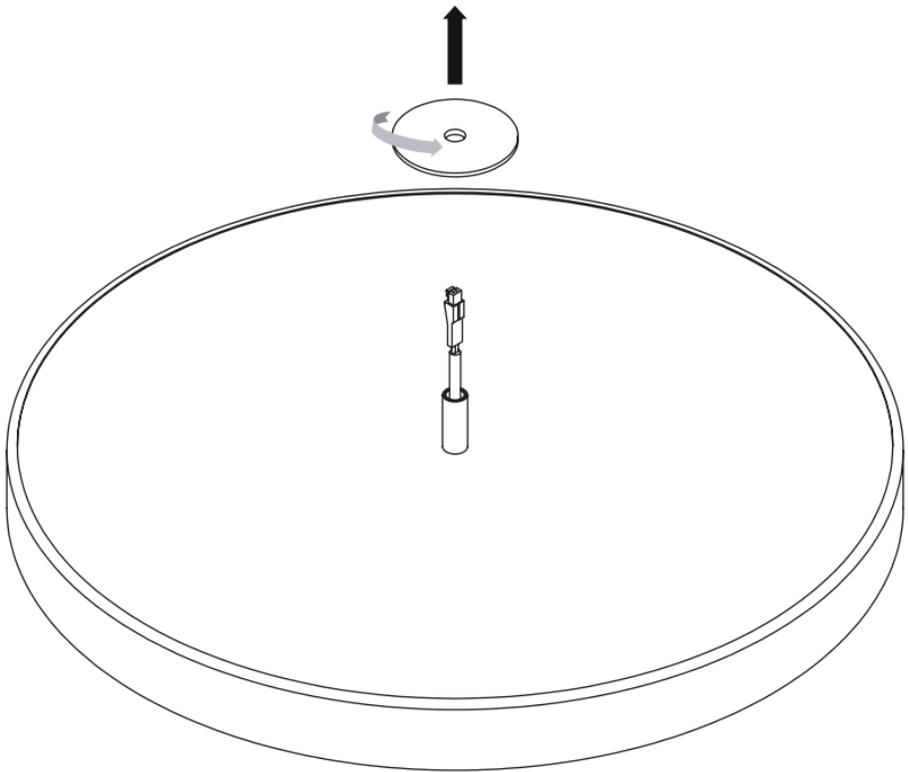


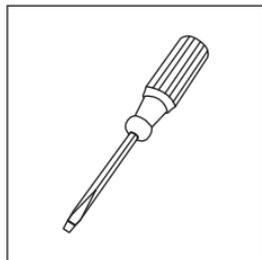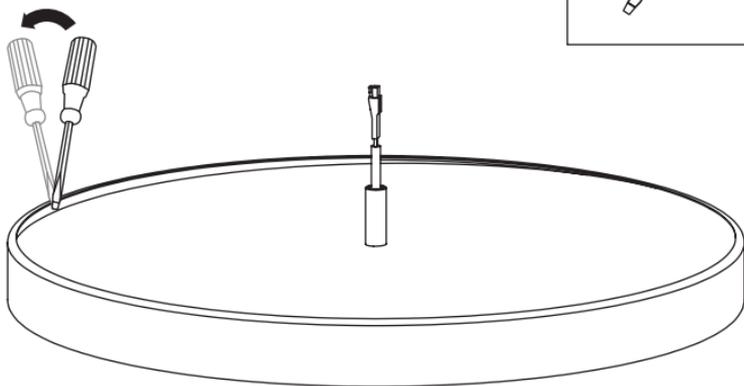


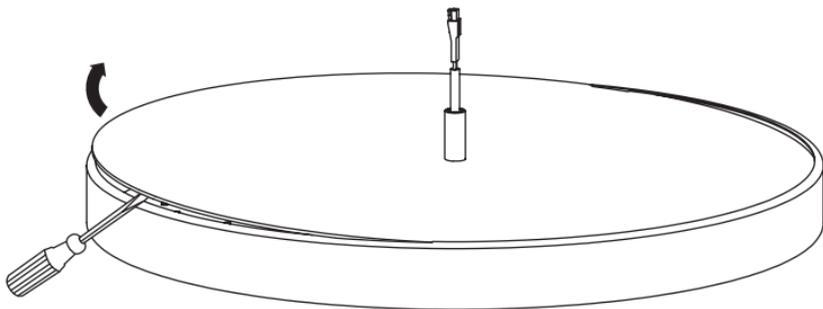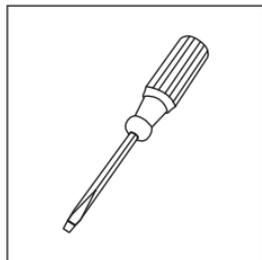

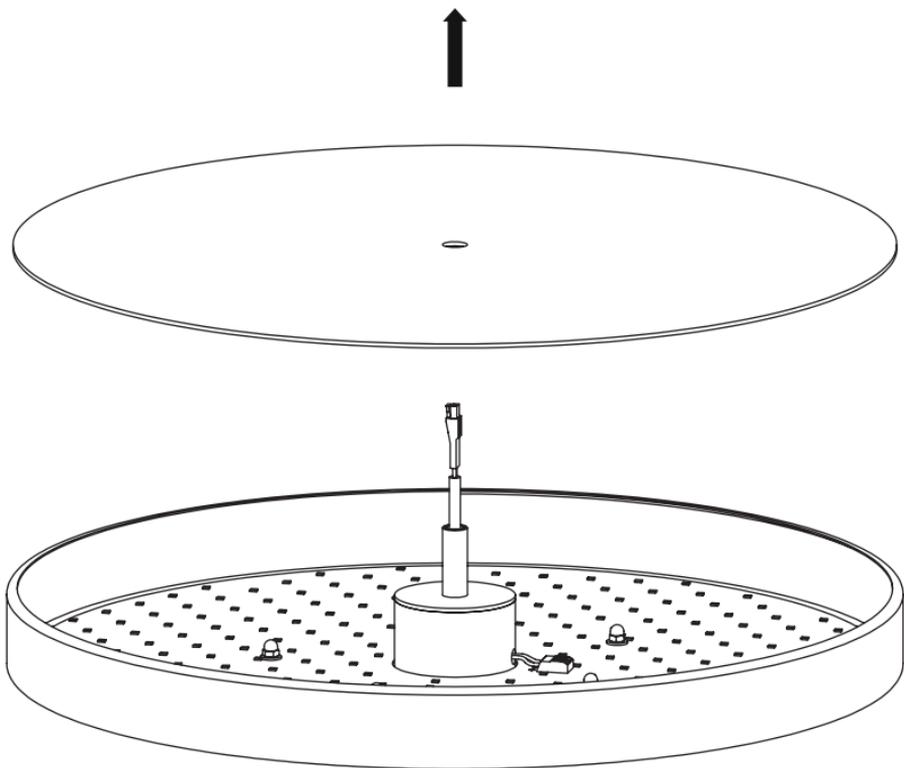

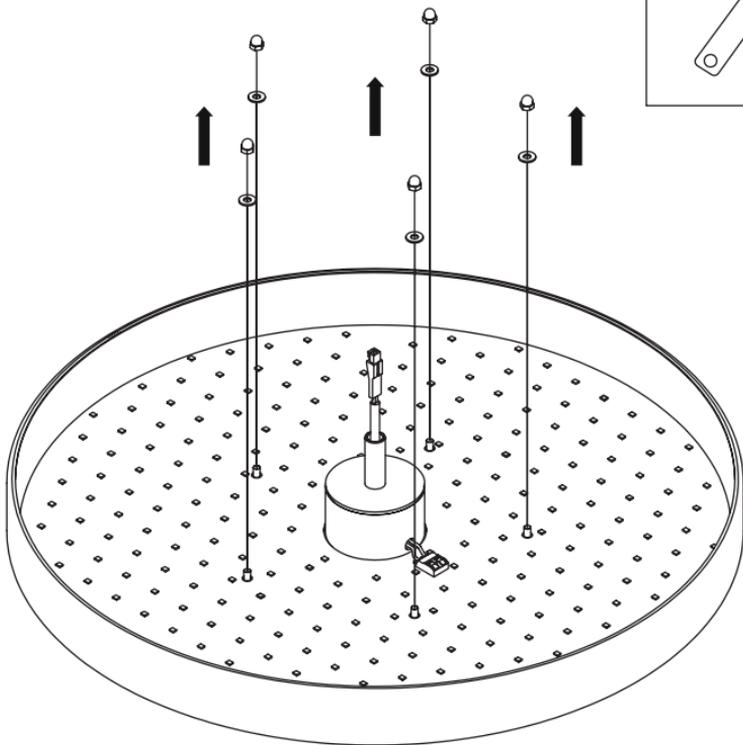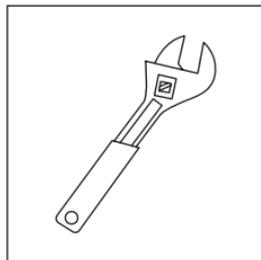

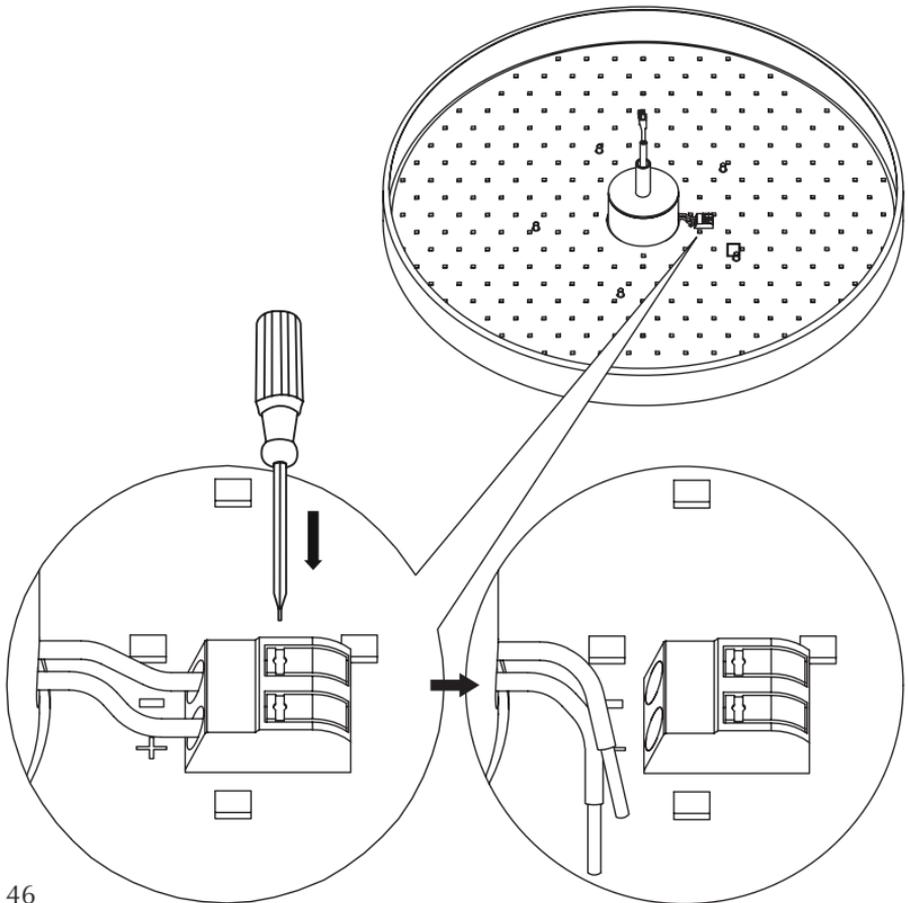

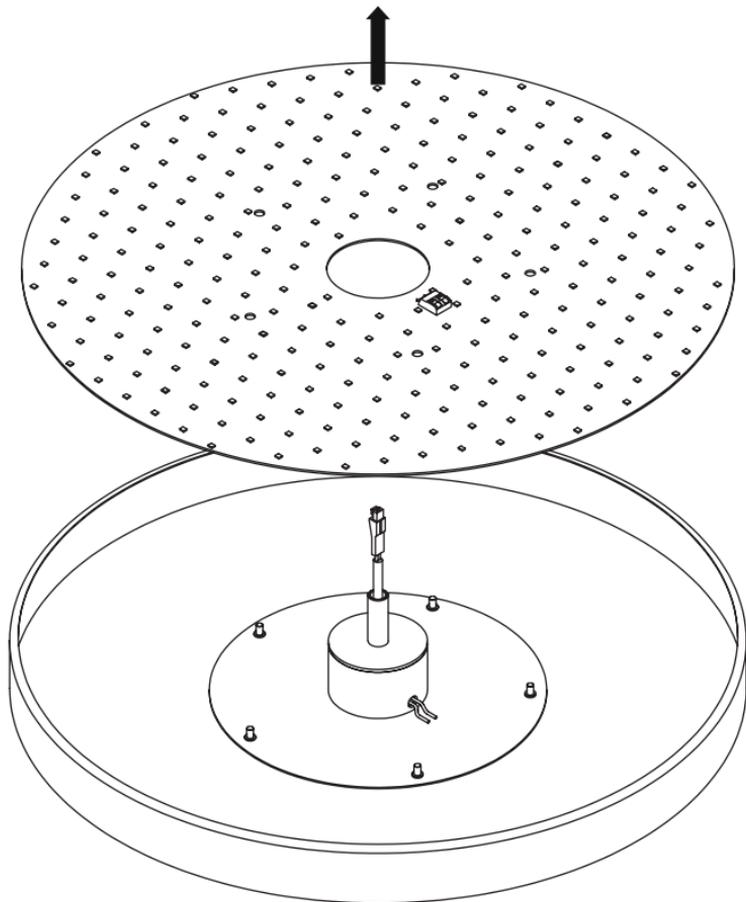

FOLLOW US ON SOCIAL MEDIA



@umagedesign | #umagedesign | umage.com




UMAGE



22.01.27