

ASTERIA



table | user guide




UIMAGE


ASSEMBLY GUIDE

Ⓒ x 1 pc.

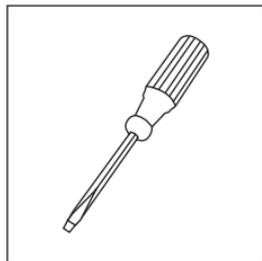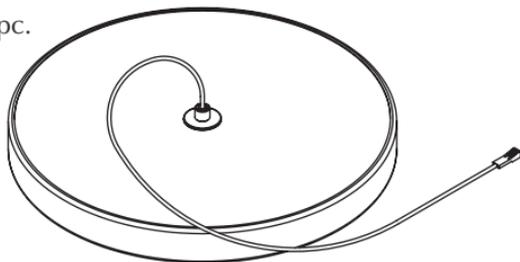


Ⓐ x 1 pc.

 
Ⓔ x 1 pc.




Ⓑ x 1 pc.

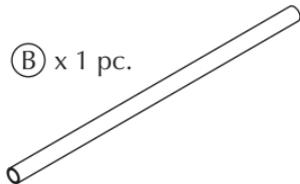



Ⓓ x 1 pc.

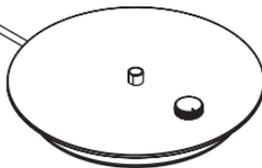



Find assembly videos by using the QR code or by going online at our website
umage.com/instructions

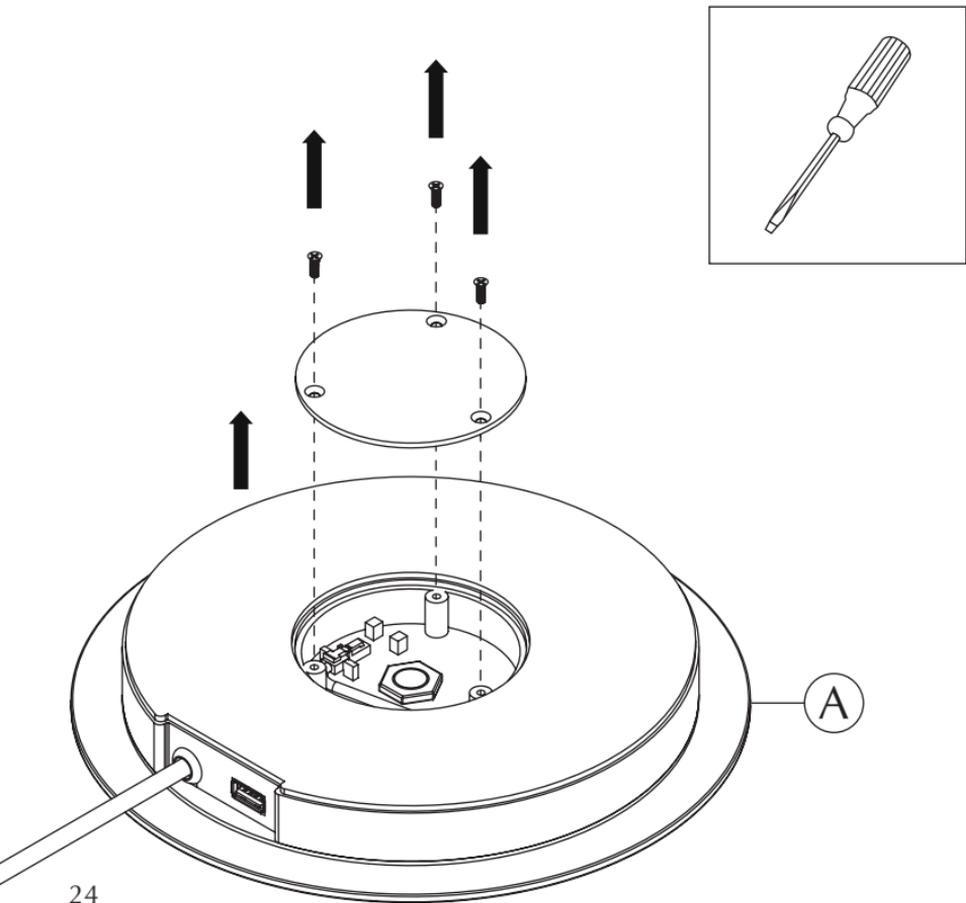


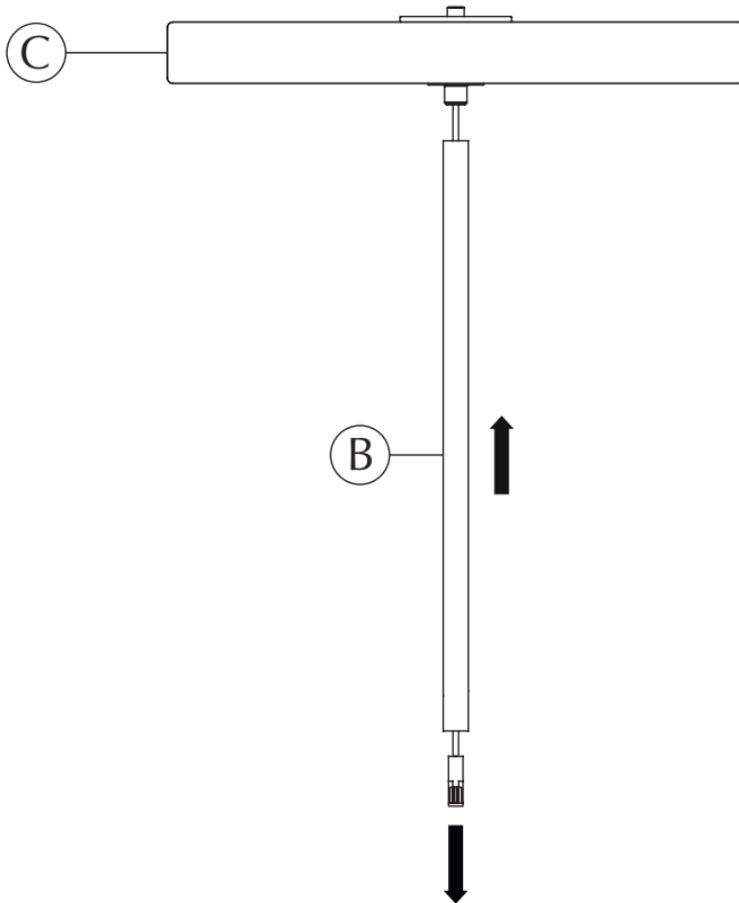


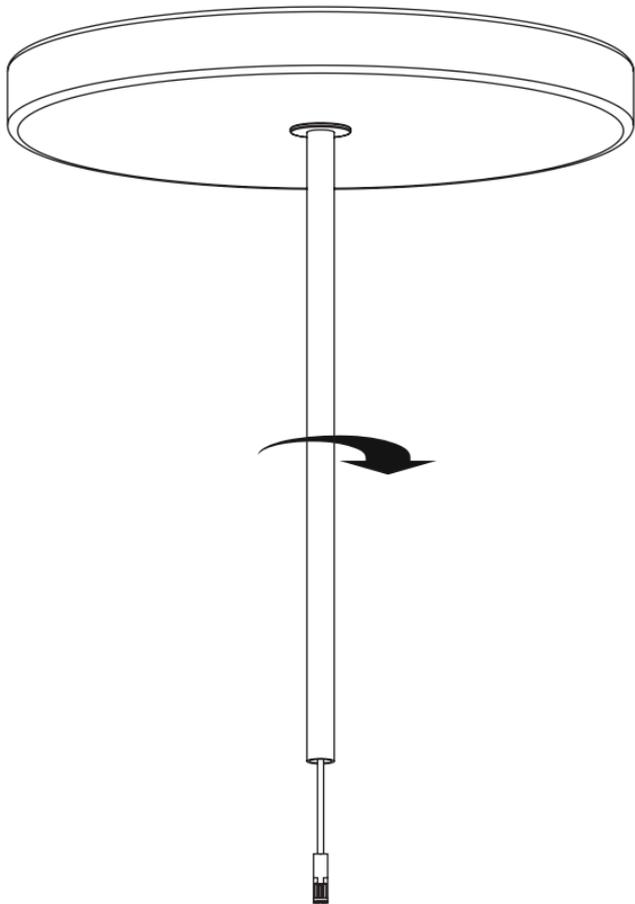


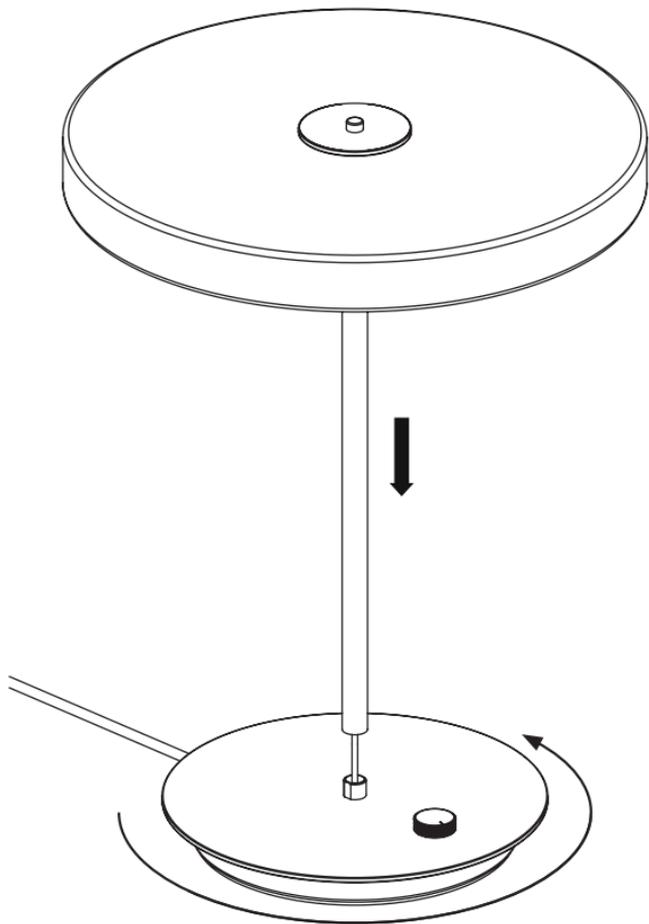


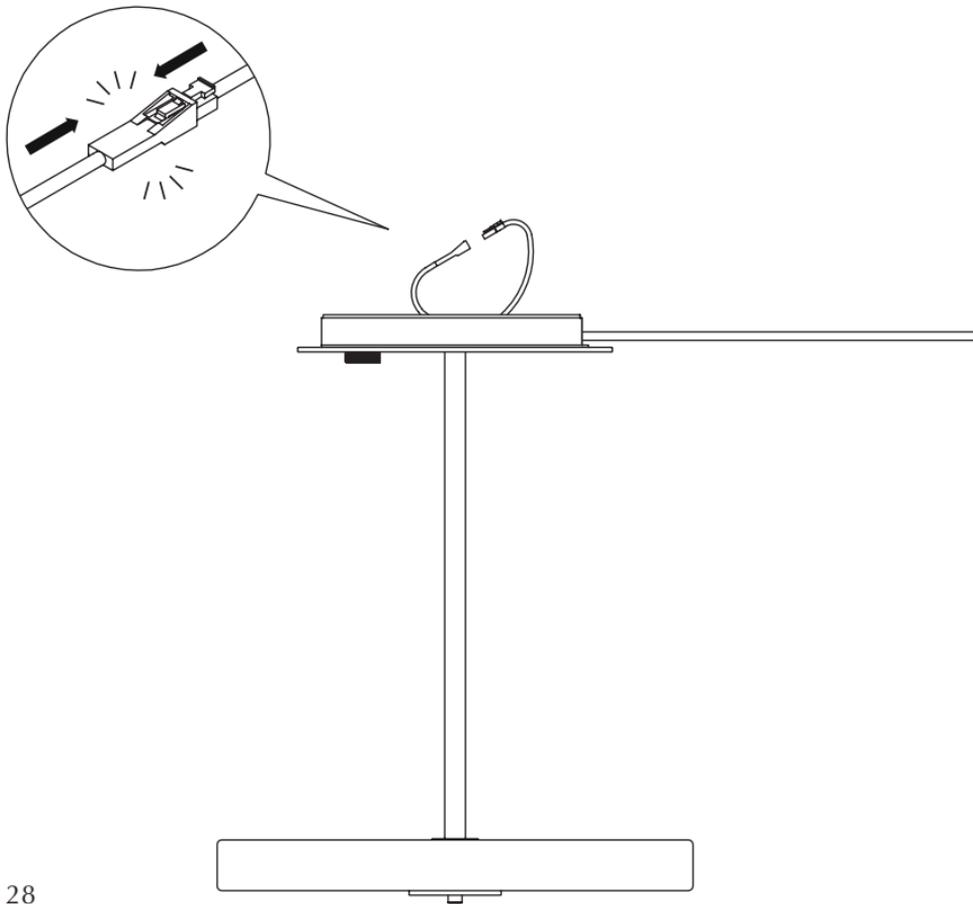

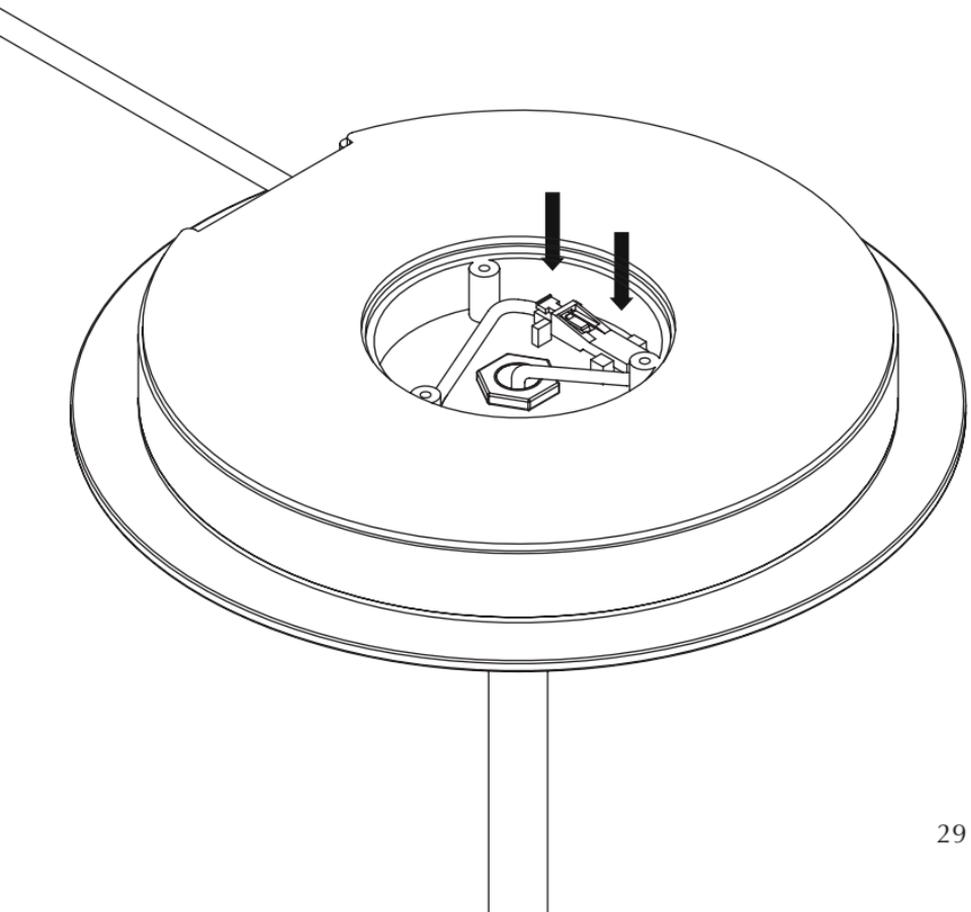

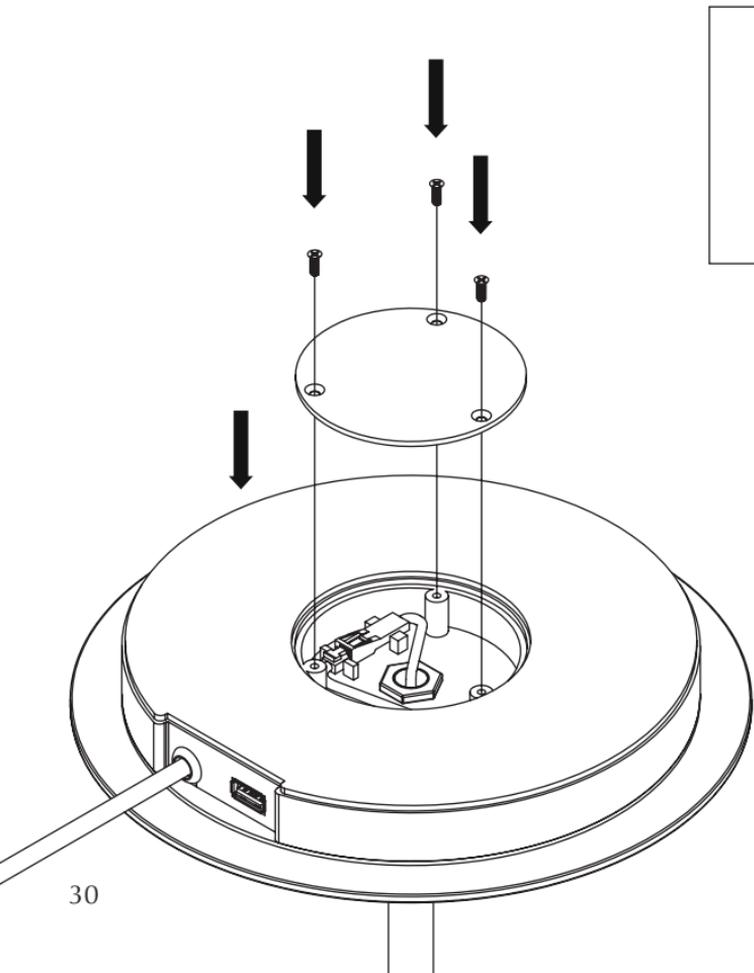

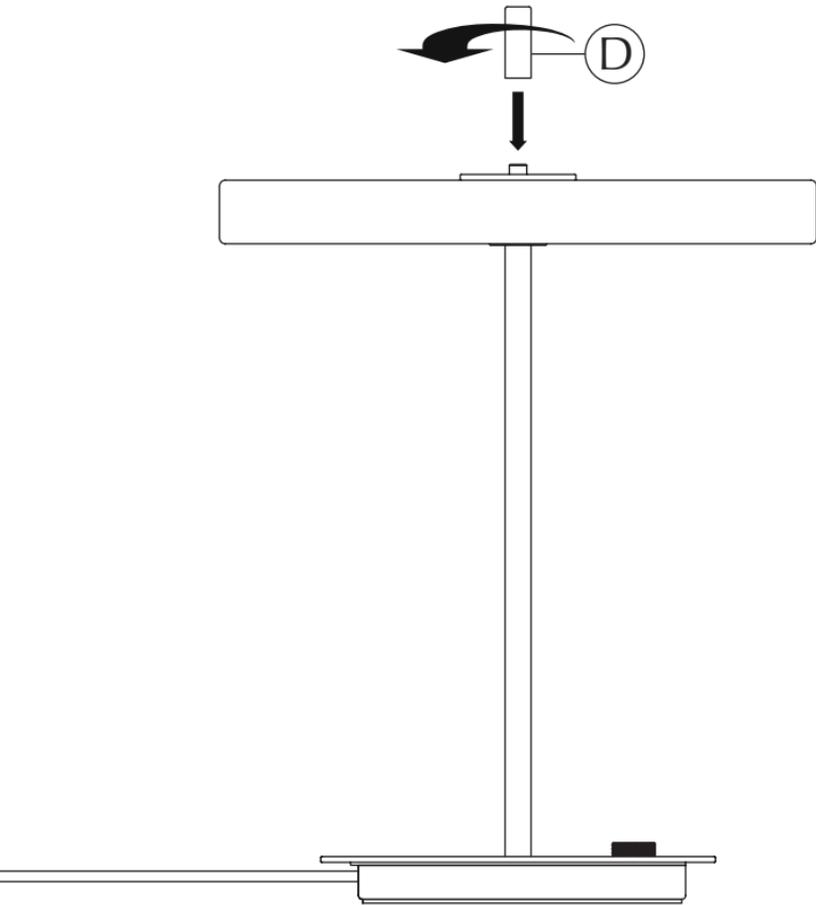


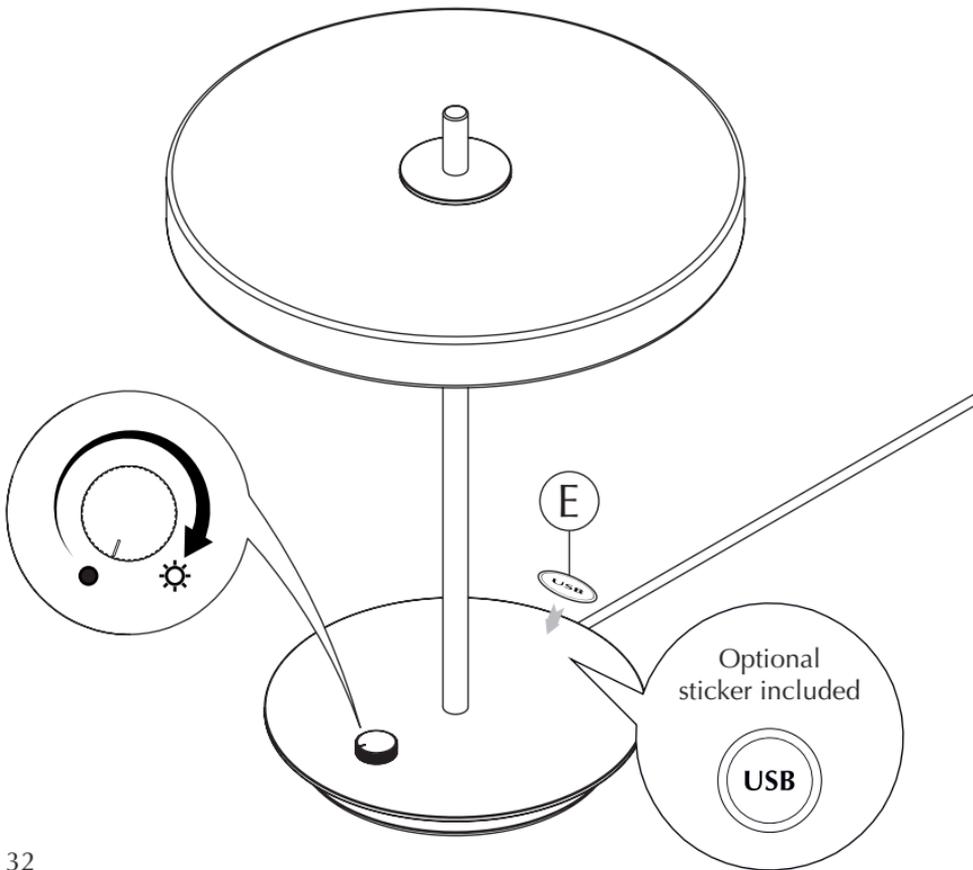




HOW TO REMOVE / REPLACE SEPARATE CONTROL GEAR


Only use control gear from UIMAGE

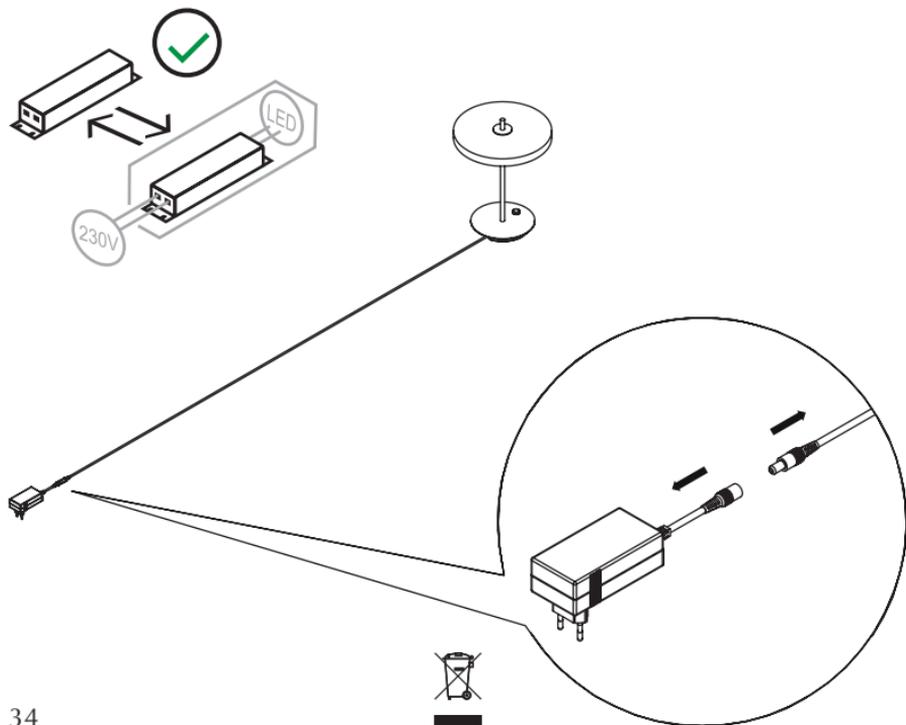


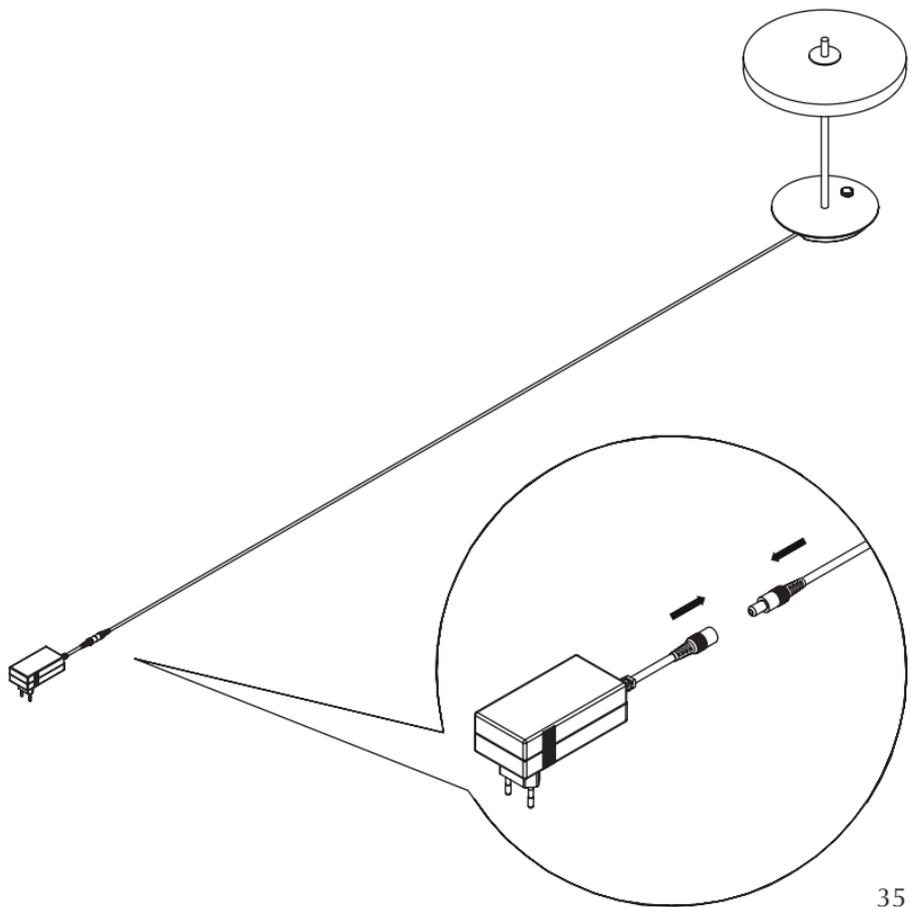



HOW TO REMOVE LIGHT-SOURCE AT END-OF-LIFE


The following operation might permanently damage the outside shell – only do the following when product needs to be disposed of.

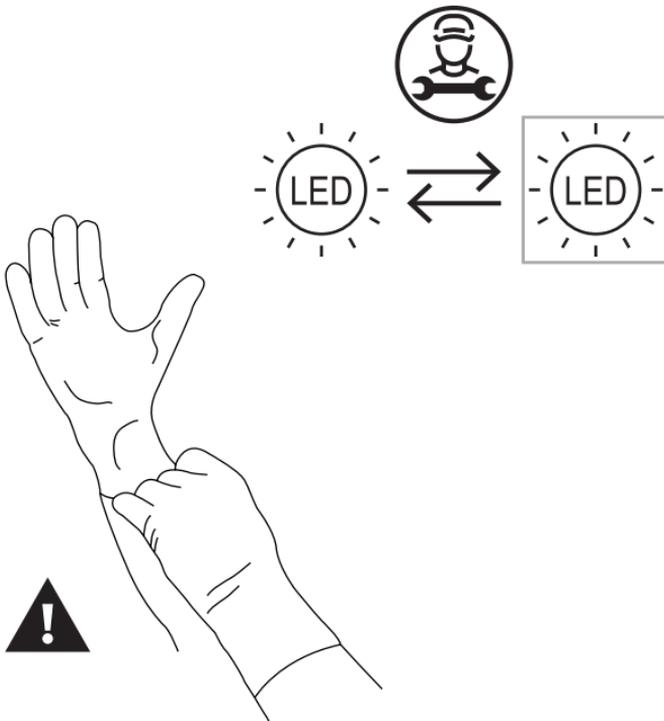


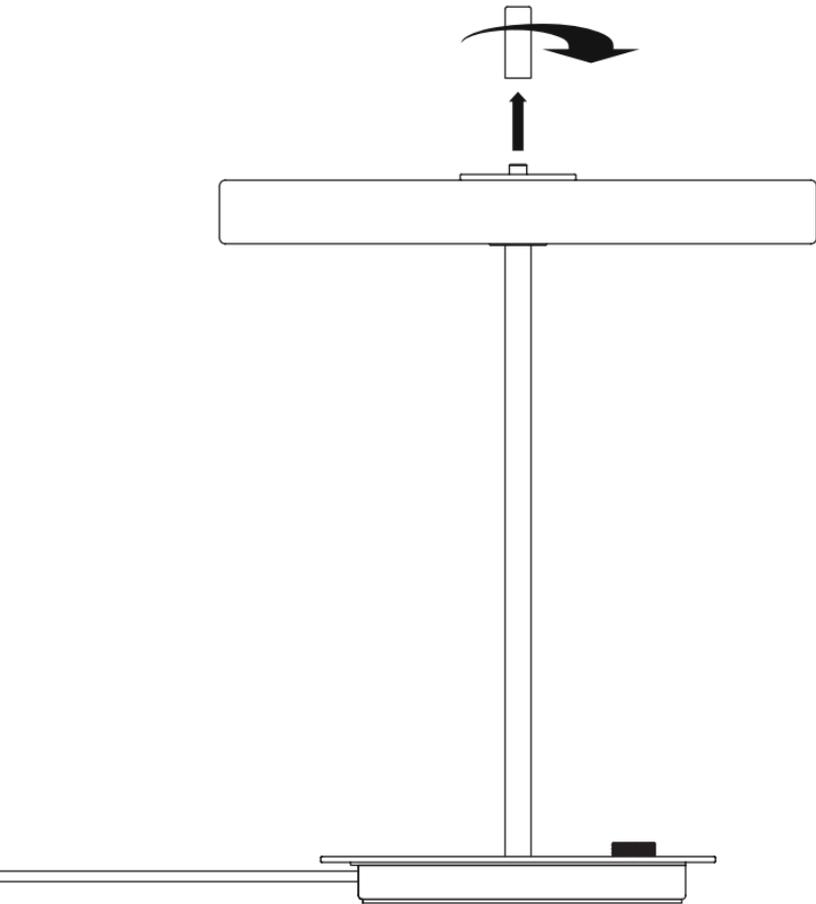


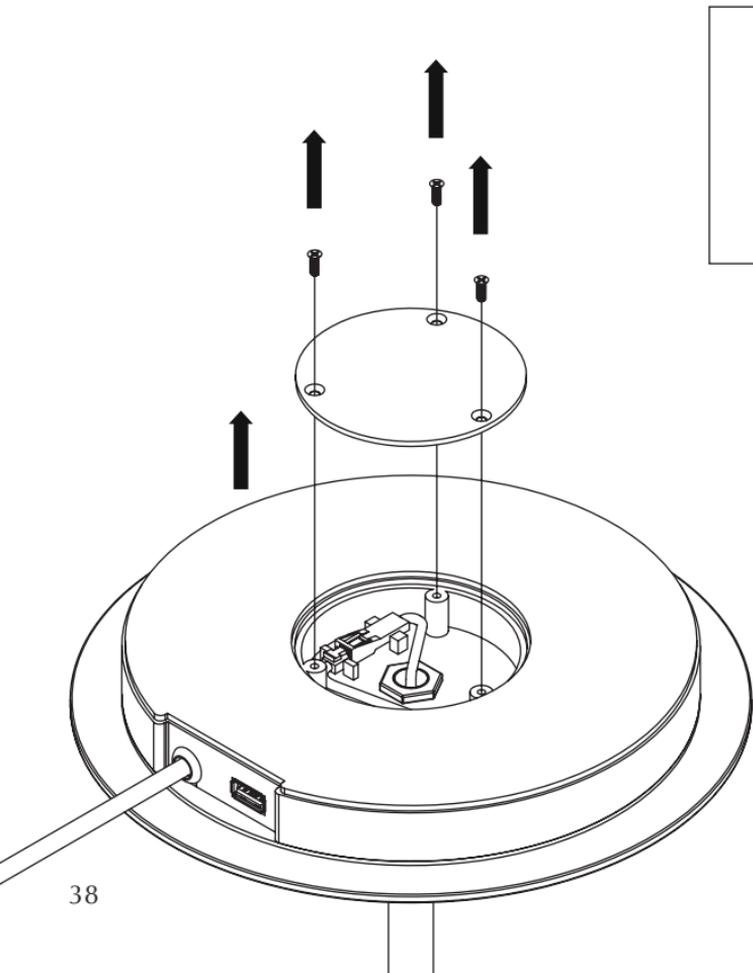


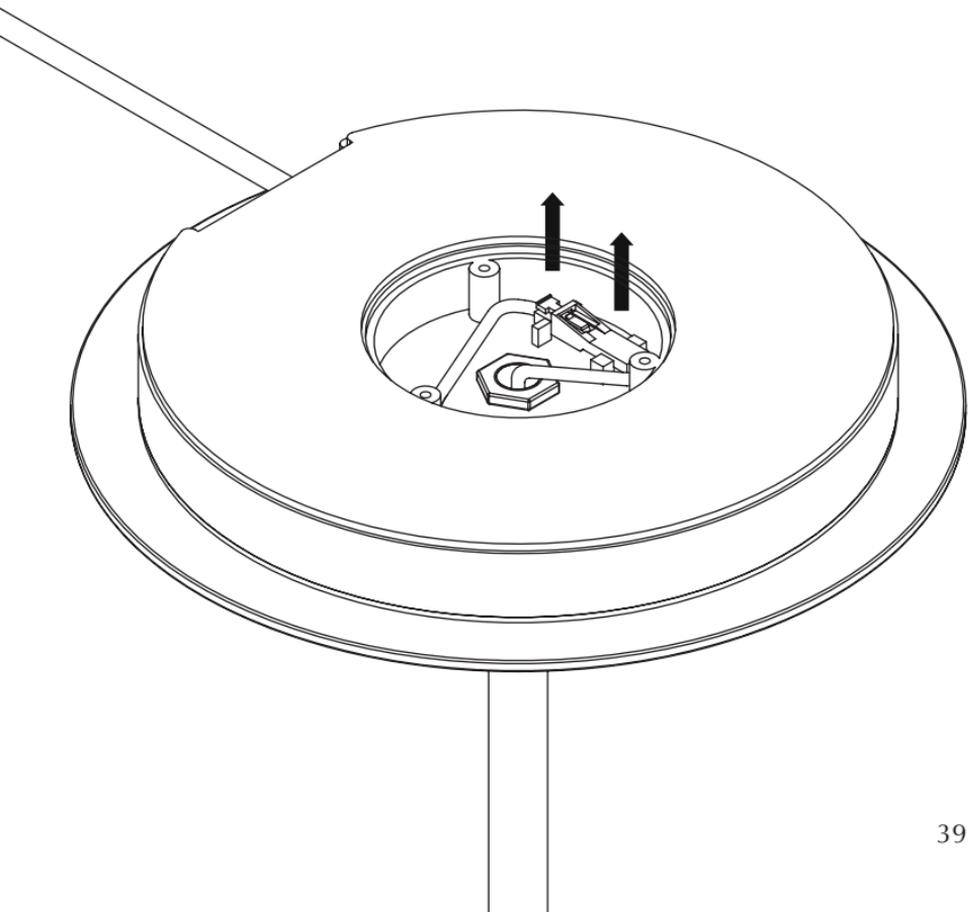


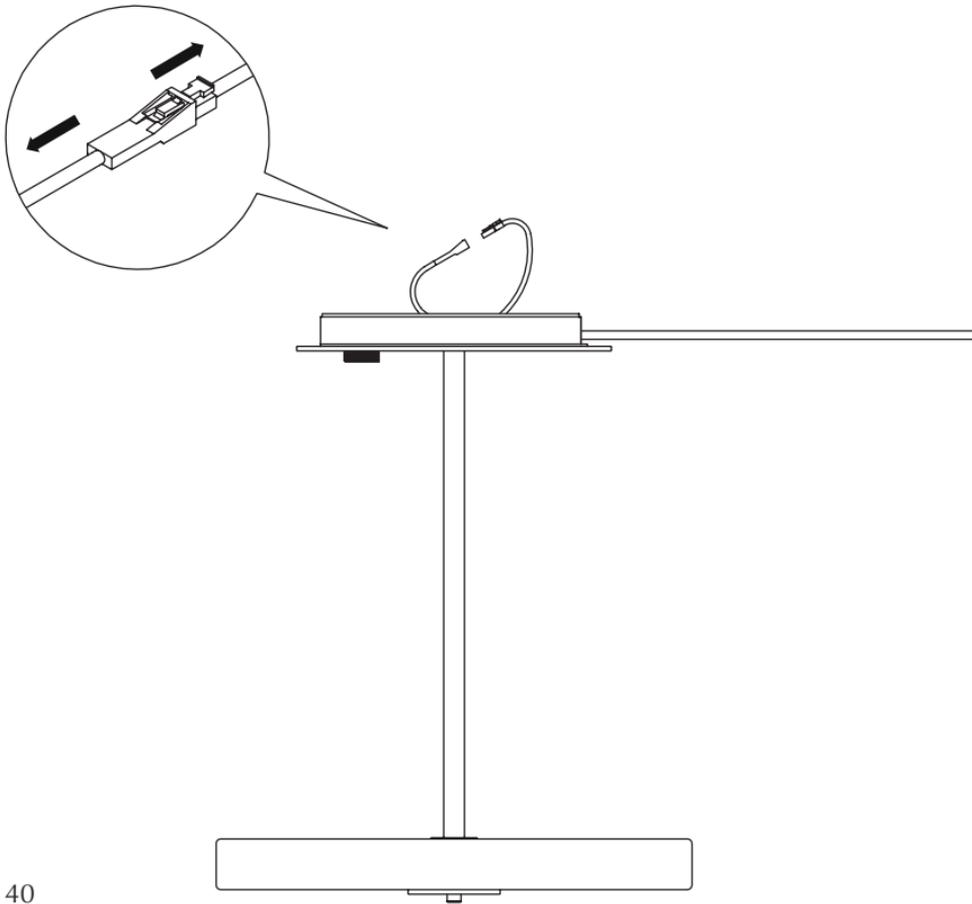



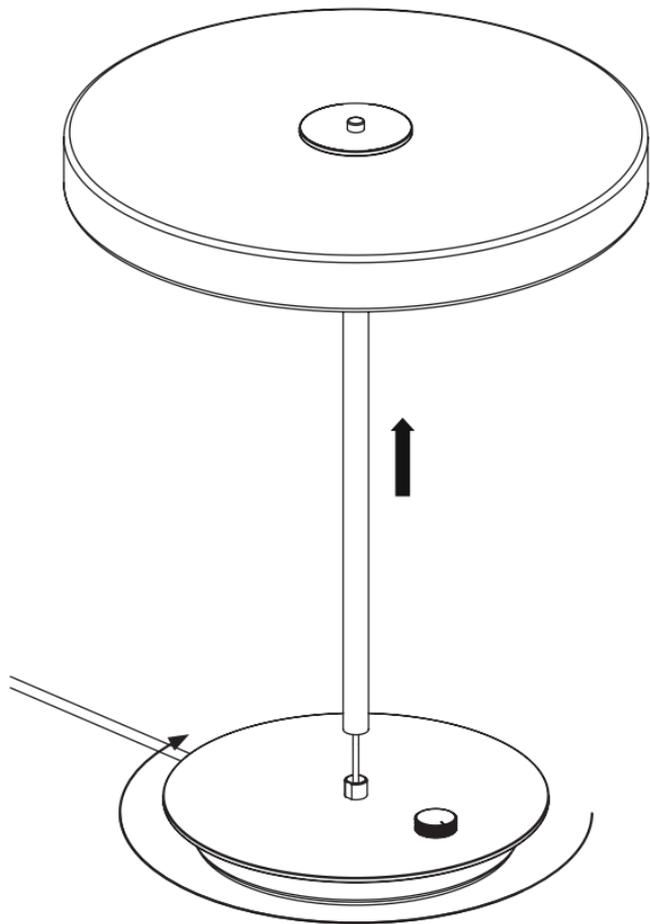


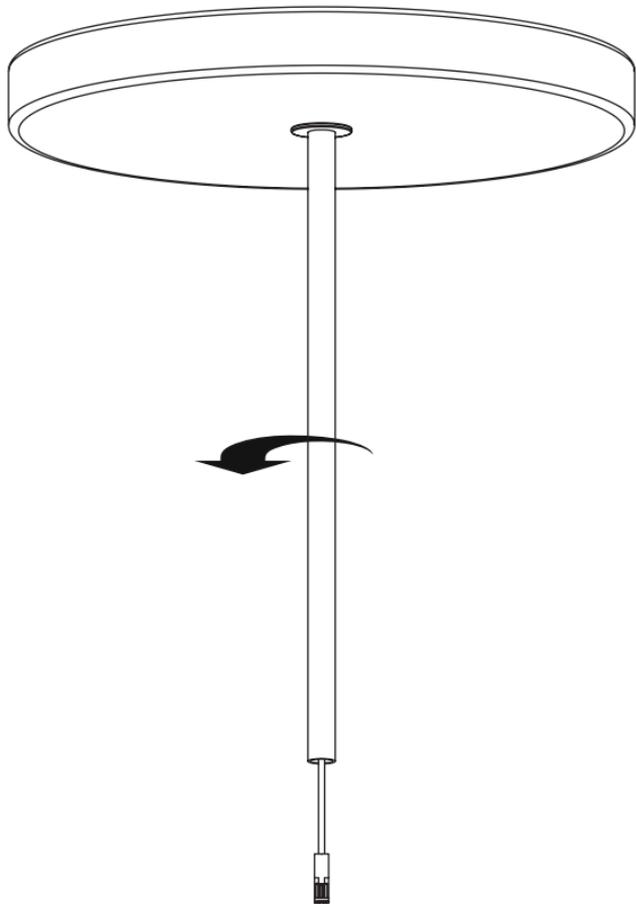


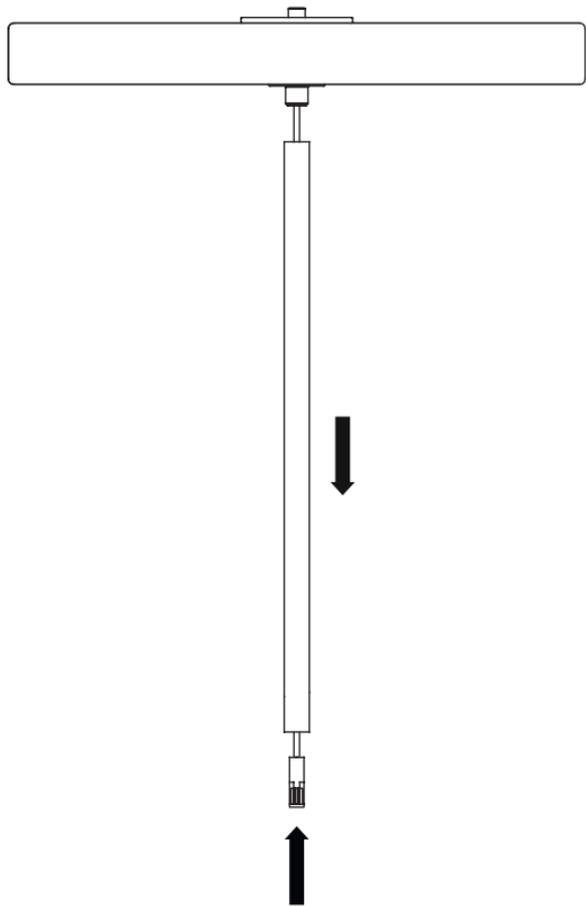


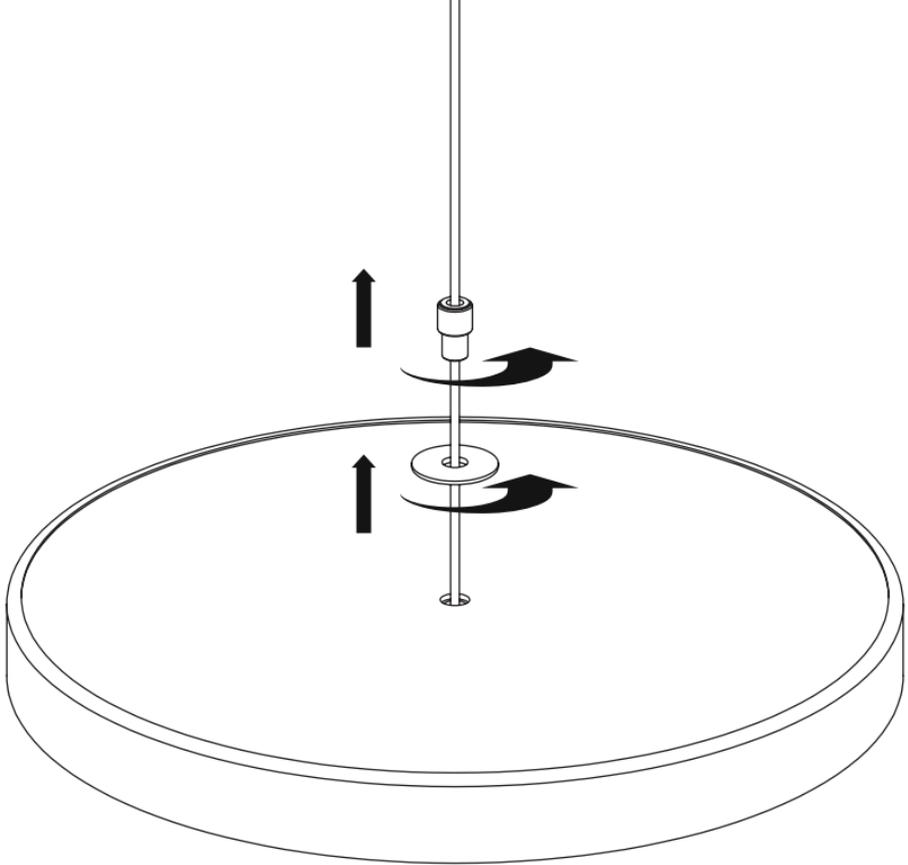


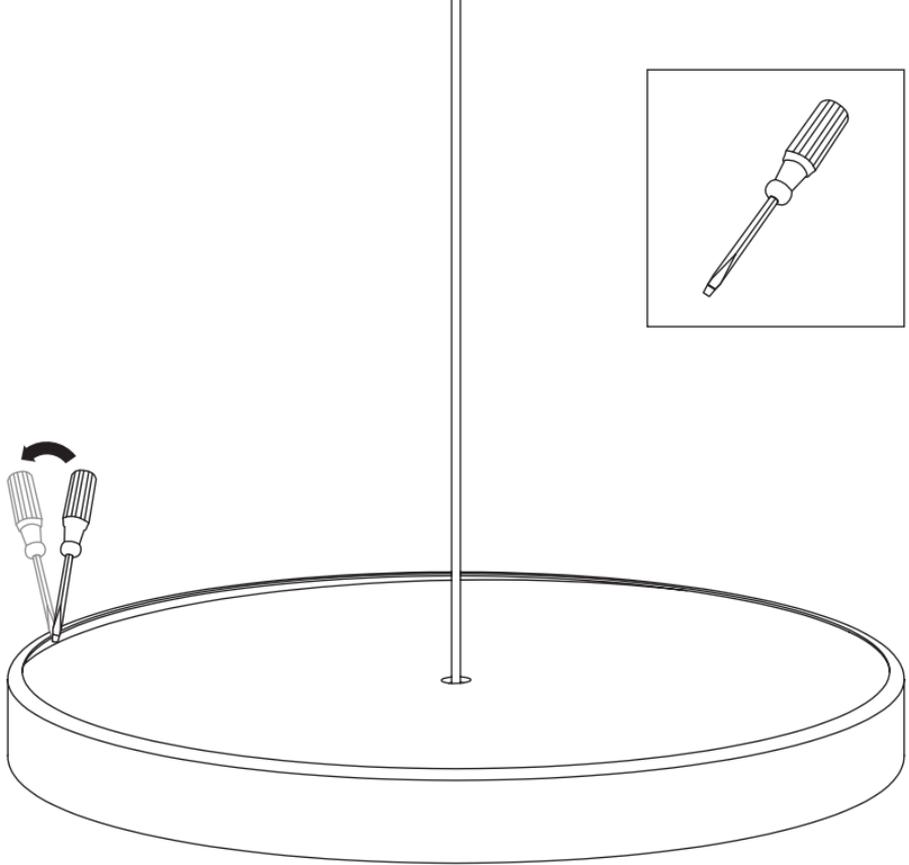


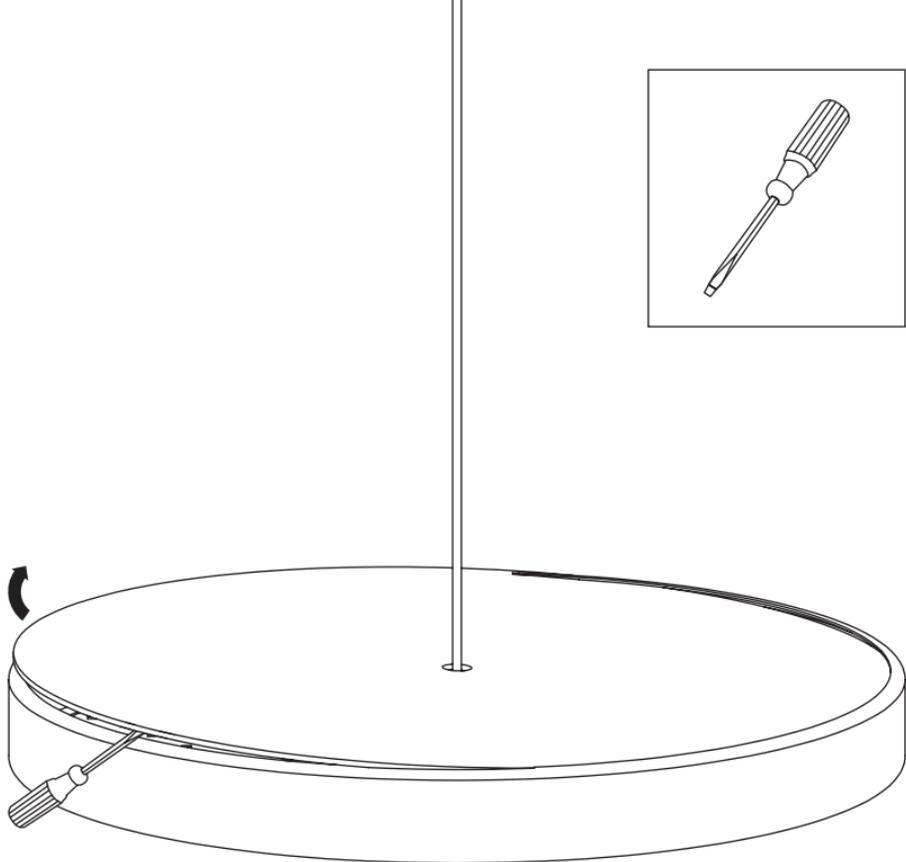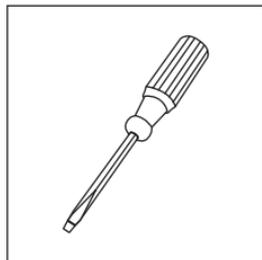


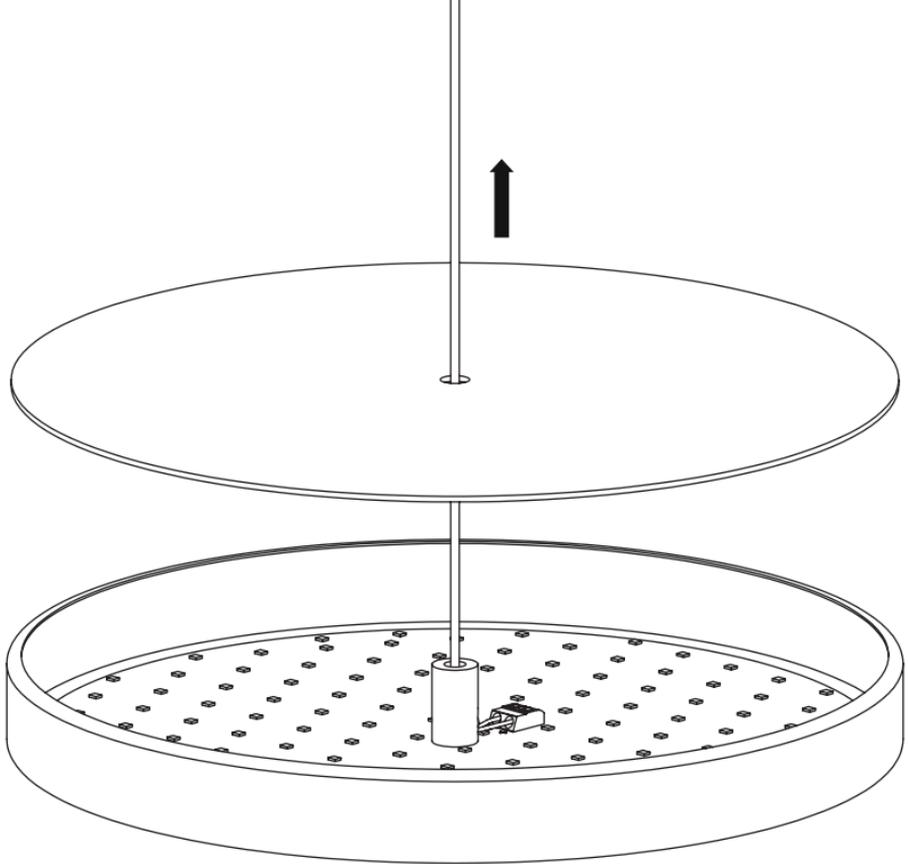

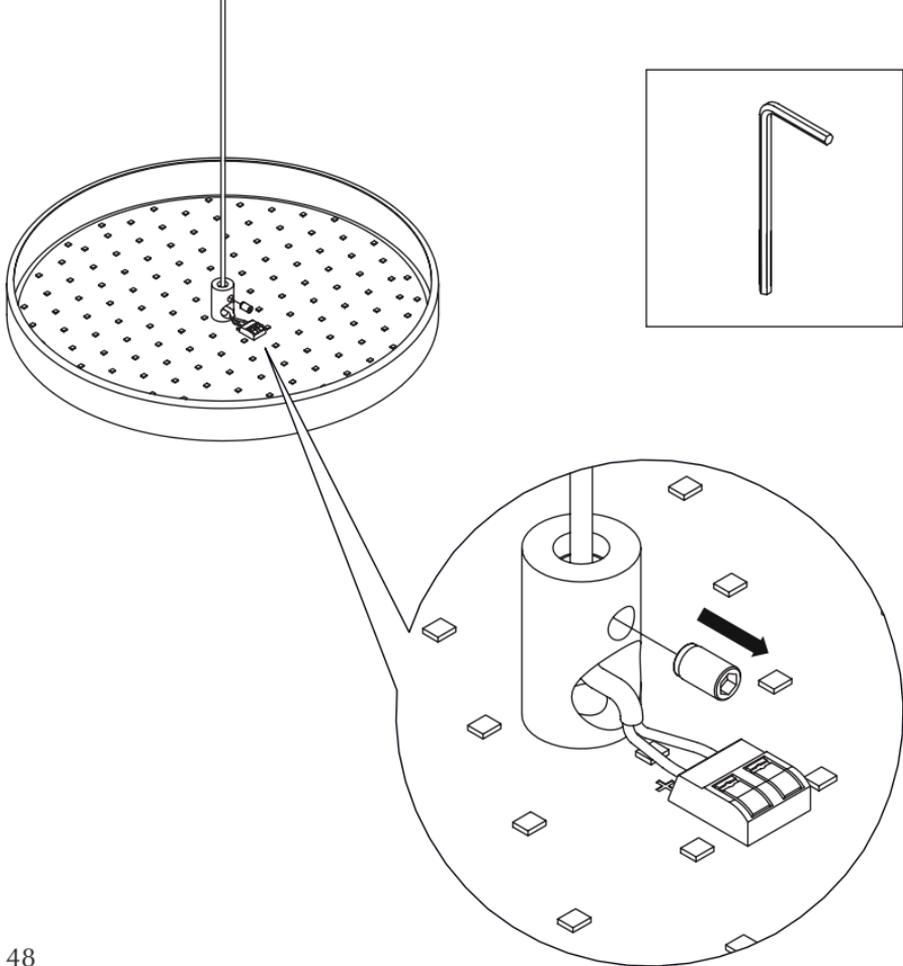

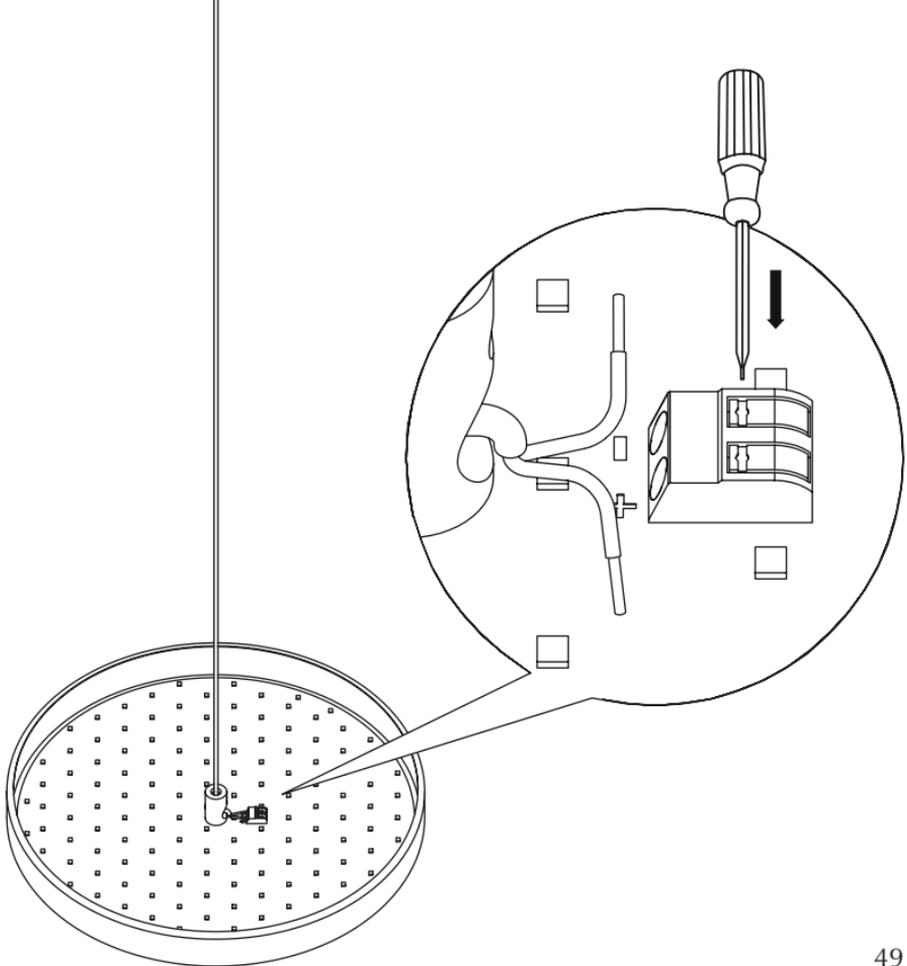

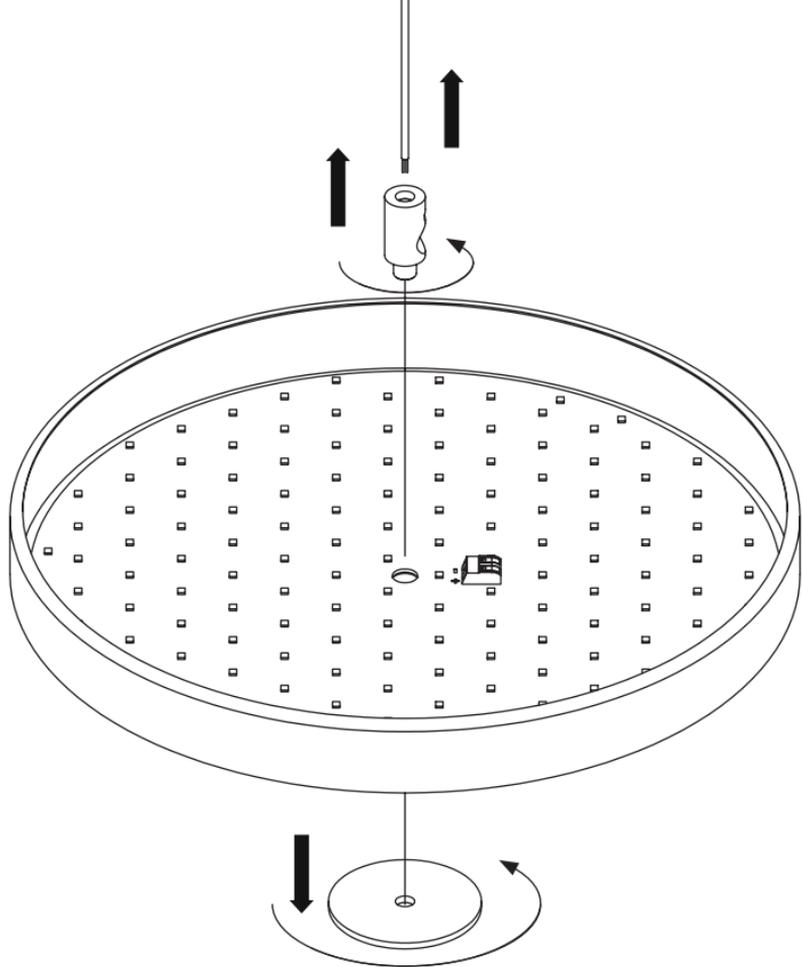

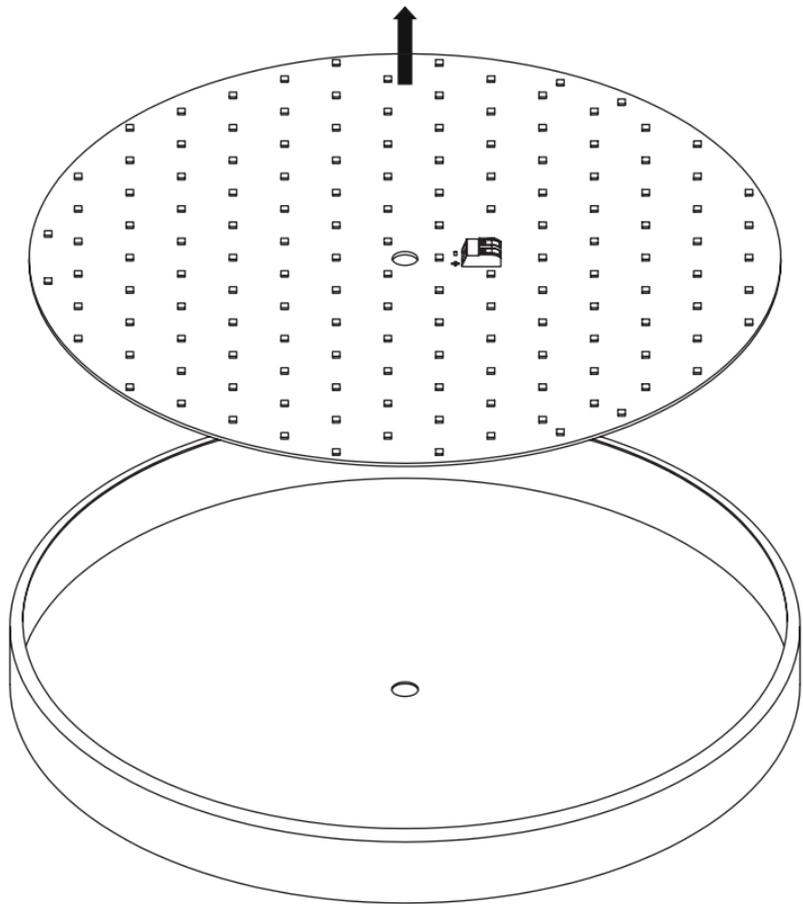

FOLLOW US ON SOCIAL MEDIA



@umagedesign | #umagedesign | umage.com



UMAGE



22.05.23