


INSTRUCTION MANUAL MANUEL D'UTILISATION

Zéli

Car seat 360° rotation Isofix 0/36 kg Group 0+, I, II, III.
From 0 to 12 years.

Siège auto pivotant à 360° Isofix 0/36 kg Groupe 0+, I, II, III.
De 0 à 12 ans.

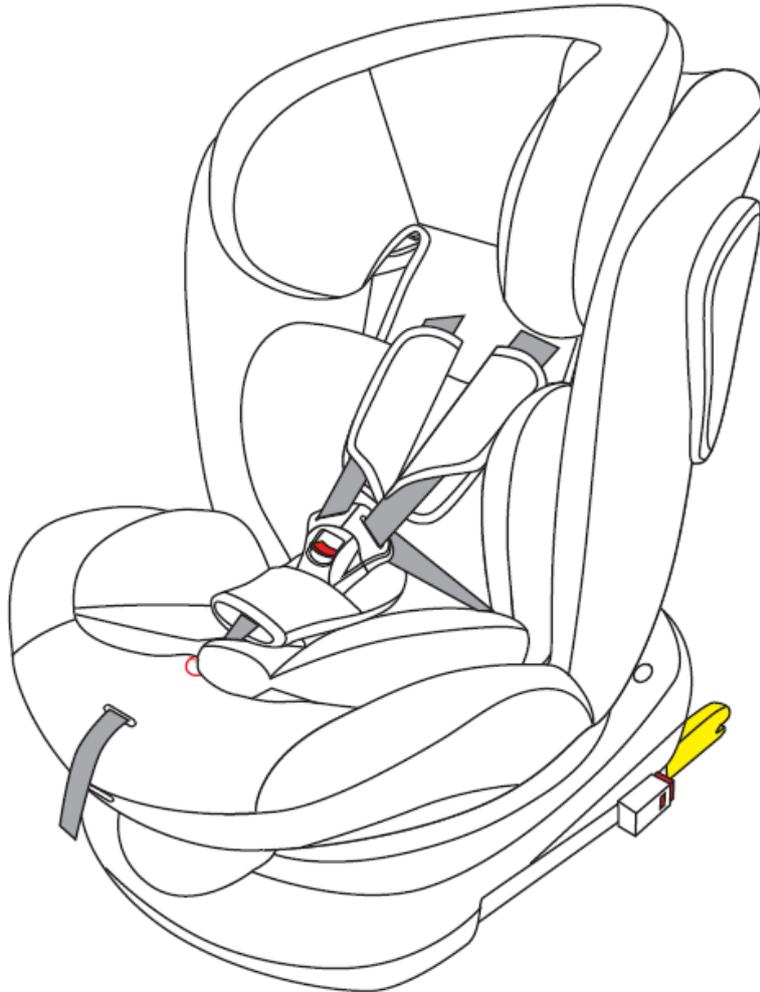

The distributor of BB-BOOM brand :
 MonMobilierDesign
 Lieu-dit l'Usine
 42430 Saint-Just-en-Chevalet

Please read the instruction manual carefully before use . If you have any questions concerning the use of this child seat, please do not hesitate to contact us.

NOTICE

Notice regarding Semi-universal ISOFIX child restraint system (in Group 0+, I)

1. This is an ISOFIX CHILD RESTRAINT SYSTEM. It is approved to Regulation No. 44, 04 series of amendments for general use in vehicles fitted with ISOFIX anchorages systems.

2. It will fit vehicles with positions approved as ISOFIX positions (as detailed in the vehicle handbook), depending on the category of the child seat and of the fixture.

3. This mass group and the ISOFIX size class for which this device is intended is : Group 0+, I: D

Notice regarding Semi-universal category (Group 0+, I, II, III)

This child restraint is classified for "(Semi-universal)" use and is suitable for fixing into the seat positions of the following cars:

CAR	FRONT	REAR
refer to vehicle list	Outer	Centre
	Yes	Yes No

Seat positions in other cars may also be suitable to accept this child restraint. If in doubt, consult either the child restraint manufacturer or the retailer.


Only suitable if the approved vehicles are fitted with 3 point with retractor safety-belts, approved to UN/ECE Regulation No. 16 or other equivalent standards.

NOT TO USE REARWARD FACING SYSTEMS IN SEATING POSITIONS WHERE THERE IS AN AIRBAG INSTALLED.

For group 0+ I II III, the child seat must be installed using ISOFIX anchorage, approved to UN/ECE. Regulation NO.16 or the equivalent standards.

EXTREME HAZARD
 Do not use in passenger seats equipped with airbags (SRS)

1. Structure

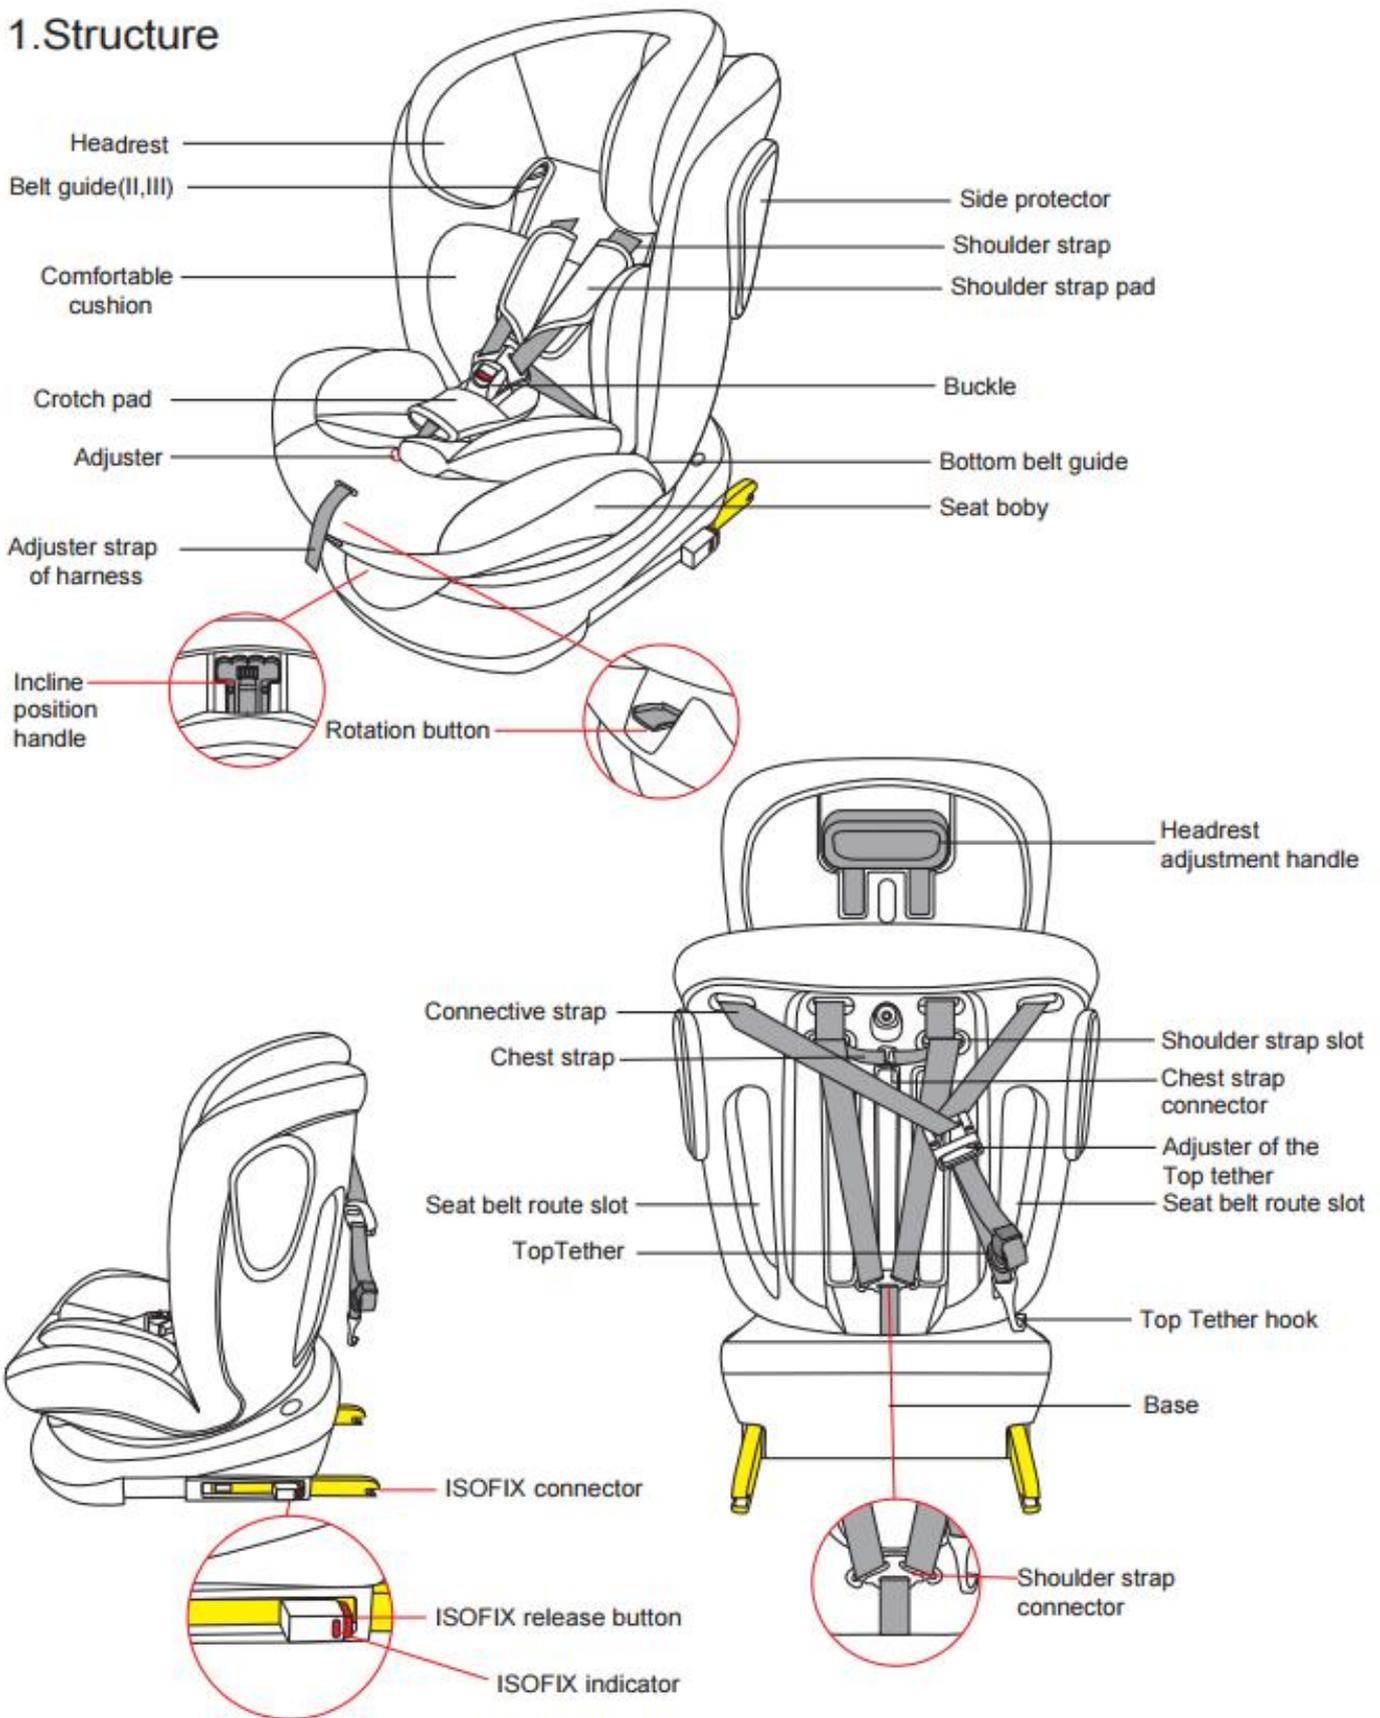

2. Feature

1. This product equips with advanced automatic-telescopic ISOFIX system, installed on the car seat using ISOFIX anchorage which is more convenience, more steady and safer. This product also equips with the top tether which intended to limit the rotation of the restraint during a frontal impact.
2. The headrest and the shoulder strap height have 8 adjustable height according to different height of the child .
3. This child seat can be used rearward-facing with harness for children less than 18kg in weight (approx. from birth to 4 years old) ,only can be installed with ISOFIX and Toptether.
4. This child seat can be used forward-facing with harness for children of 9- 18kg in weight (approx. from 9 months to 4 years old) ,only can be installed with 3-piont belt and ISOFIX.
5. This child seat can be used without harness for children of 15- 36kg in weight (approx. from 3 to 12 years old) , only can be installed with 3-piont belt and ISOFIX.
6. This child seat can be rotated 360°. The child seat must be in the forward facing or rearward facing direction.

3. Safety warning

For your child's safety, please read these instructions carefully before use and keep them for future reference. Failure to follow the instructions contained in this manual could result in serious injury to your child.

1. This child seat can only be used with the harness for children less than 18kg in weight (group 0+, less than 13kg; group I , 9-18kg). This child seat can be used without harness for children of 15- 36kg in weight (group II, III).
3. This child seat can be installed forward-facing for group I, II, III using 3-point belts and ISOFIX anchorage.
4. For ISOFIX installation: Make sure you read the car manufacturer's handbook.
5. This instruction manual can be retained in the special space of the child seat for its life period
6. This child seat can be rotated 360 . The child seat must be in the forward facing or rearward facing direction
7. Do not leave your child unattended in the seat at any time.
8. It shall be recommended that the device should be replaced when it has been subject to violent stresses in an accident.
9. For the reason of safety , the child seat must be fixed inside the vehicle using ISOFIX anchorage and Top tether for group 0+, I and using 3-point belts and ISOFIX anchorage for group I, II, III, even if you do not put your child inside the child seat .
10. Any straps restraining the child should be adjusted to the child's body, and check hat the straps shall not be twisted.
11. Ensuring that any straps is worn low down, so that the pelvis is firmly engaged, shall be stressed.
12. Any luggage or other objects liable to cause injuries in the event of a collision shall be properly secured.
13. The rigid items and plastic parts of a child restraint must be so located and nstalled that they are not liable , as everyday use of the vehicle to become rapped by a moveable seat or in a door of the vehicle.
14. To prevent from the risk of fall, your child should always be fastened.

15. It is dangerous to make any alteration or additions to the device without the approval of the competent authority, and a danger of not following closely the installation instructions provided by the child restraint manufacturer.
16. This child seat is designed for children from 0kg to 36kg .Never overload the child seat more than one child or with other loads.
17. The child restraint must not be used without the cover.
18. The seat cover should not be replaced with any other than the one recommended by the manufacturer, because the cover constitutes an integral part of the restraint performance.
19. Before you adjust any movable or adjustable parts of your child seat , you must remove your baby from the child seat.
20. The child seat should be kept away from sunlight if the seat is not provided with a textile, otherwise it may be too hot for the child's skin.
21. Never use a second-hand product , as you can never be certain what was happened to it.
22. If position of the adult safety-belt buckle relative to the main load bearing contact points on the child safety seat is unsatisfactory. Please contact the manufacturer if in doubt about this point.
23. Not to use any load bearing contact points other than those described in the instructions and marked in the child restraint
24. Please read the car manufacturer's handbook before installing this ISOFIX child safety seat.

4. Usage

4.1 Install position of the child seat in vehicle


 Correct fitting/suitable



This child seat is suitable for fixing into the seat positions of the cars equipped ISOFIX anchorage that are fitted in accordance with European standard (ECE44 or equivalent standard).

Important:

The child seat must be installed using ISOFIX anchorage for group 0+, I and using ISOFIX anchorage and 3-point belts for group I, II, III.

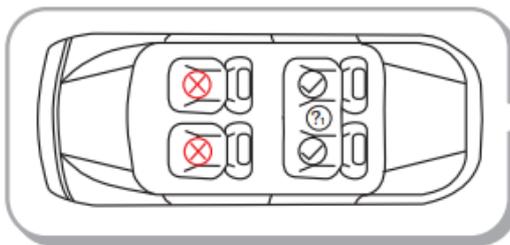

 Only use on this seat if ISOFIX anchorage is equipped.

4.2 Checking the shoulder strap height



NO-Too low



NO-Too high



Yes -Correct

Always check that the shoulder straps are at the correct height for your child. The child's shoulders should always be thread through the slots in the cover and seat shell that are closest to the top of your child's shoulders.

4.3 Usage of buckle



To use the buckle accurately ,please proceed as follows:

Step1. Put the two metal sections of the buckle connector together.

Step2. Slot the two buckle connectors into the slot in the buckle until they “click” place.

Step3. Check the harness is correctly locked by pulling the shoulder straps upwards.

To release the connectors ,you can press the red button of the buckle downwards, the two metal sections will be pop up .

4.4 Adjust and use the harness

L oosen the harness



The harness is slackened by pressing the adjuster (under the seat cover) on the front of the seat.

Press down the adjuster as you grip the two shoulder straps with your another hand. Pull the shoulder straps towards you to loosen the harness.

Tighten the harness




Pull the shoulder straps upwards to remove the slack from the lap sections of the harness then pull the adjuster strap until the harness is fully tightened.

The harness should be adjusted as tightly as possible without causing discomfort to your child.

A loose harness can be dangerous. Check the harness adjuster and tighten each time the child is placed in the seat.

4.5 Adjust the child seat to different incline positions

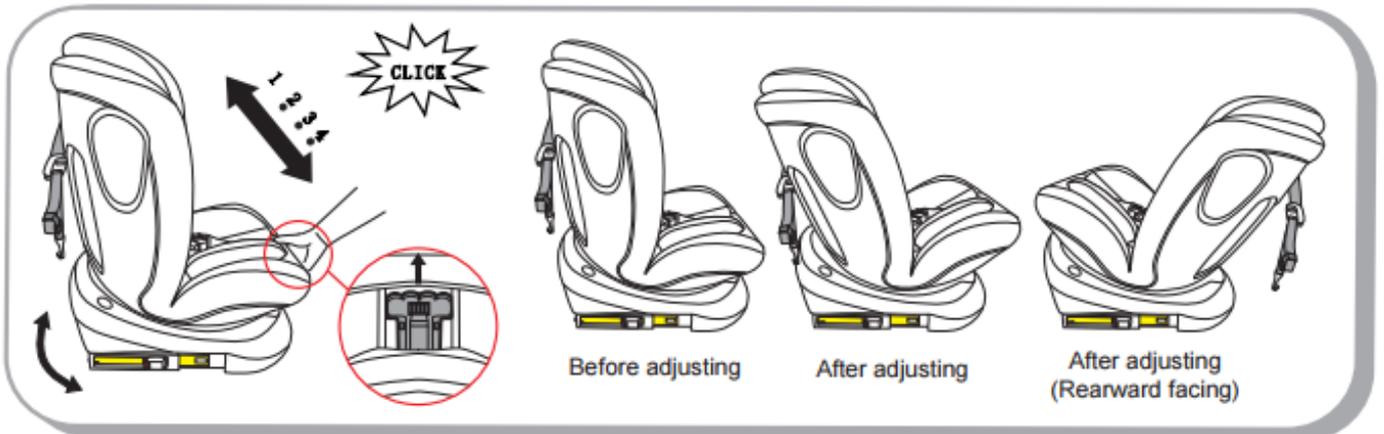


The child seat can be adjusted to 5 positions-rearward position, position1,position2, position3, position4. If installed rearward-facing(group0+,I) , only rearward position can be used. If installed forward-facing(group I) ,position1 and position2 and position3 and position4 can be used. If installed forward-facing(group II or III) , only position1 can be used .Press and adjuster and loosen shoulder harness .Pull the incline handle under the front of the seat upwards, and then pull or push the seat forwards or backwards. Release the incline handle once in the desired position and push until you hear a “click”.

Important: Check to make sure the child seat is securely locked in the desired position by pulling the incline handle.

4.6 Rotation the direction of the child seat.

To change the direction of the child seat, press the rotation handle and rotate the seat body to the desired direction.

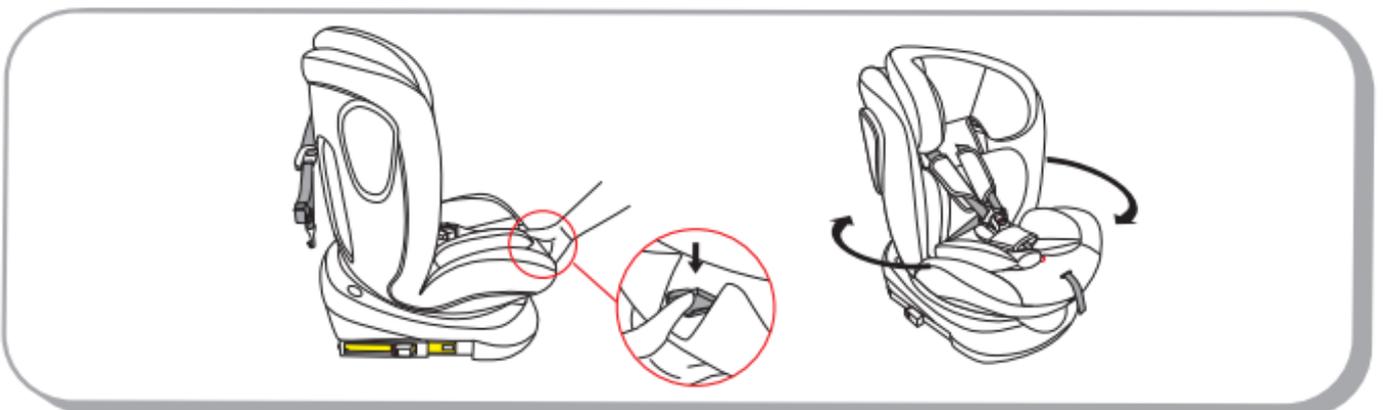

Release the incline handle once it is engaged in the desired direction until you hear a “click” .



Important: Check to make sure the child seat is securely locked in the desired direction by shaking the seat body in clockwise direction or counter-clockwise direction .



DANGER! Before making any car journey, ensure that the rotating part of the child safety seat is fully engaged by trying to rotate the child safety seat in both directions.
 Warning: Do not drive unless the child seat is in the forward facing or rearward facing direction.

Warning: Do not place rearward-facing child seat on front seat with airbag.


Important-Do not use the child safety seat facing forwards if the child's weight exceeds 9kg.



Rearward-facing
Only for group 0+, I



Forward-facing
Only for group I, II, III

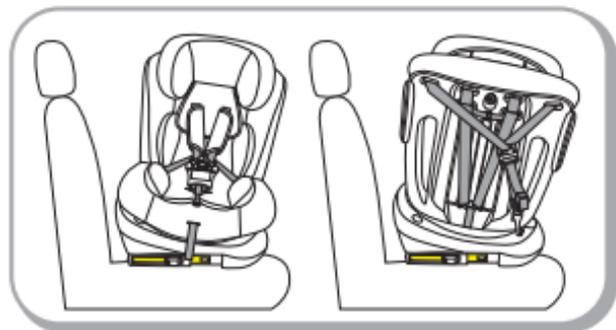

Lateral(two sides)


Press the rotation handle, rotate the seat body 90 towards the vehicle door, now it is convenient for you to put your child in or take him or her out easily .

4.7 Removal the shoulder straps ,shoulder pads, crotch strap and crotch pad and buckle.


Step1:Adjust the child seat to position4, press the adjuster and loosen shoulder harness, slide shoulder straps off its connector from the back of the child seat .



Step2:Pull shoulder straps through the shoulder strap slots from the front of the child seat. Pull the shoulder straps off the shoulder pads, now you can hide the shoulder pads behind the cover of the headrest .

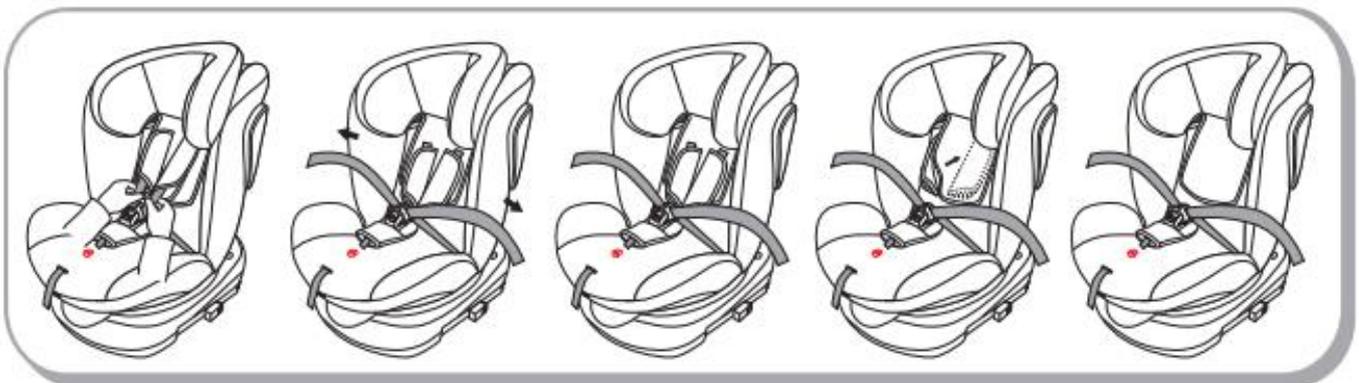



Step3:Slide the shoulder strap off the belt locking clip as photos, now you remove the shoulder straps.

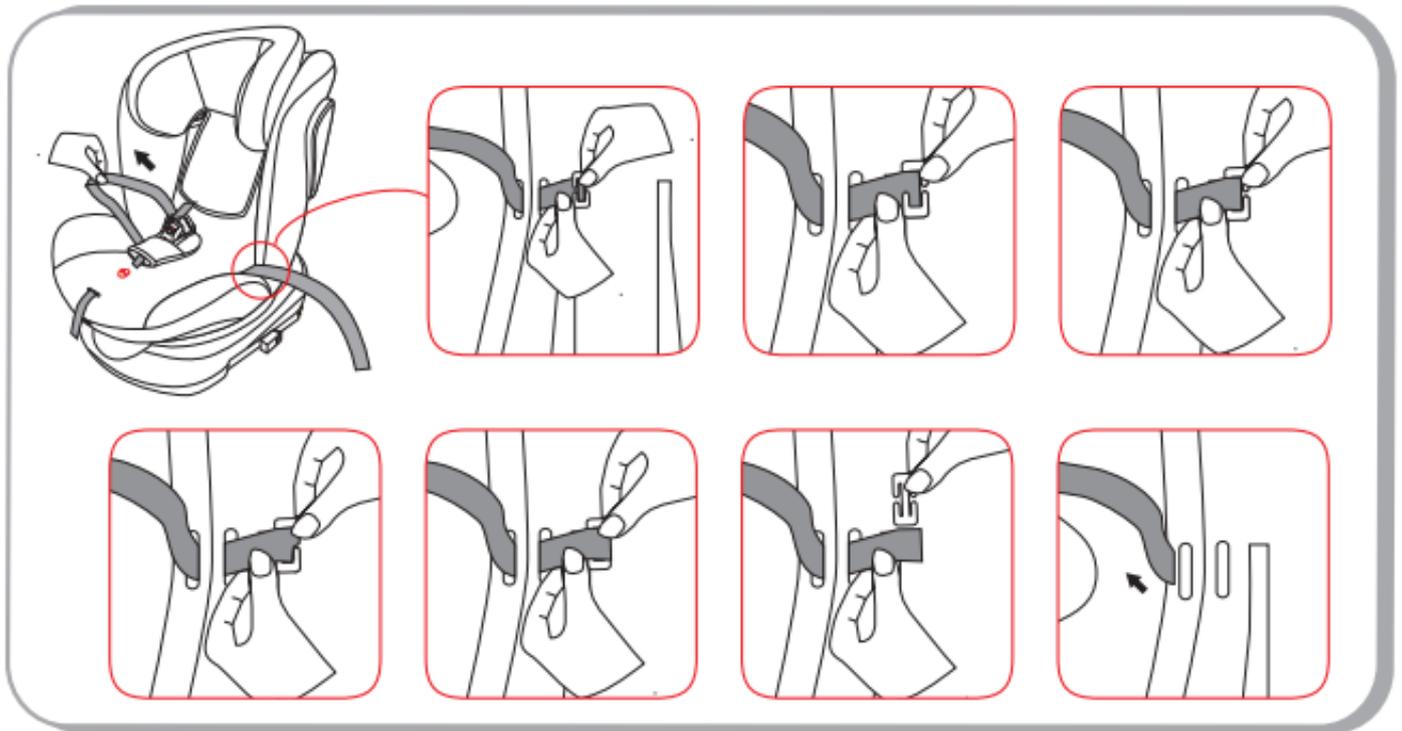



Step4: Slide the crotch strap off the belt locking clip as photos, now you remove the crotch pad ,crotch strap , buckle.



Step5: Adjust the child seat to incline position 1, pull the harness adjuster strap, now the car seat can be used without harness for children 15kg to 36 kg in weight (group II,III)

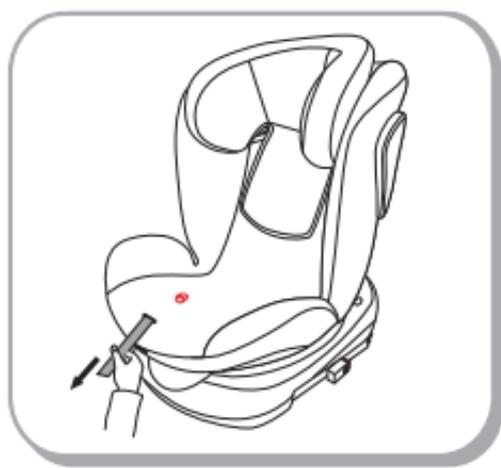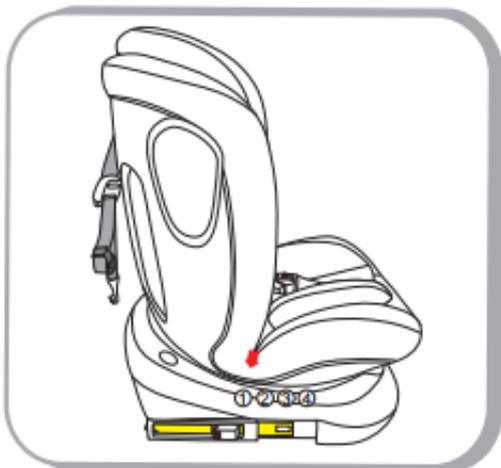


4.8 Adjust the shoulder strap height

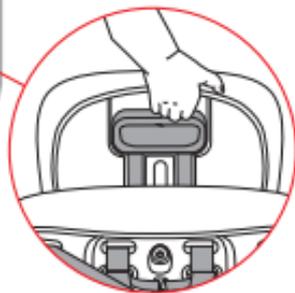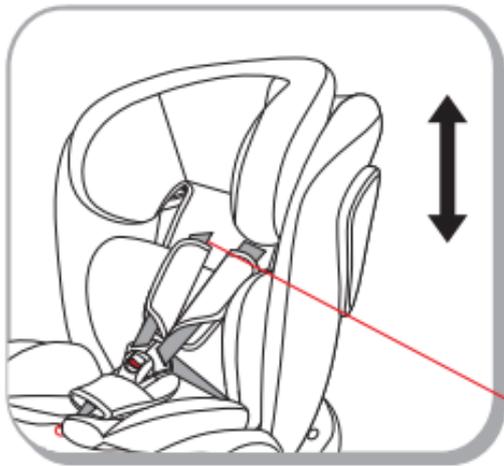

If the height of the shoulder belts is not fit for your child, adjust the height, please proceed as follows: Pull the headrest adjustment handle of the back of the headrest together with headrest up and down to the desired position according to the height of your child, release the handle ,the shoulder straps reach the desired height and you will hear a “click”.

4.9 Headrest adjustment method

The height of the headrest can be adjusted from position 1 to position 8 . According to children’s different height, the headrest can be adjusted up and down. Adjust the headrest by pulling the headrest adjustment handle on the back of the headrest ,raise or lower according to your child’s height. The harness strap should be level with your child’s shoulders.

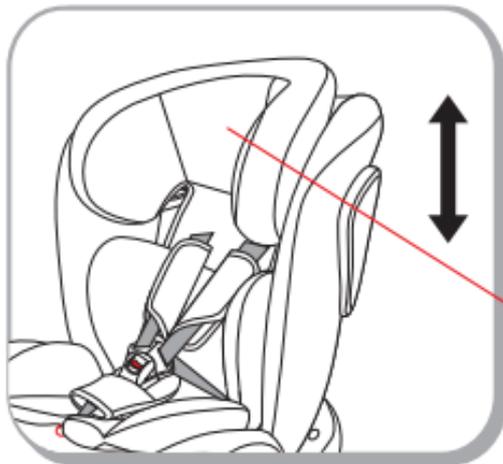


5.0 Installation of the child seat

5.1 Rearward-facing installation the child seat with ISOFIX and Top Tether for group 0+, I from birth to 4 years old (less than 18kg).

Important: First please check if there are 2 ISOFIX anchorages in the perpendicular intersection of the vehicle seat back and seat cushion, and the user-ready top tether anchorage behind the vehicle seat.

The user-ready tether anchorage usually permanently installed on the inner rear luggage shelf or on the vehicle floor. Details you could read your vehicle guidelines or contact the vehicle manufacturer.


Step1: Place the child seat on the car seat forward-facing and press the ISOFIX release button on both sides of the seat and push the ISOFIX connectors forward and make the ISOFIX connectors fully extended. This ensures that both hooks on the ISOFIX connectors are open and ready to use, now the ISOFIX indicator of ISOFIX release button show red color.

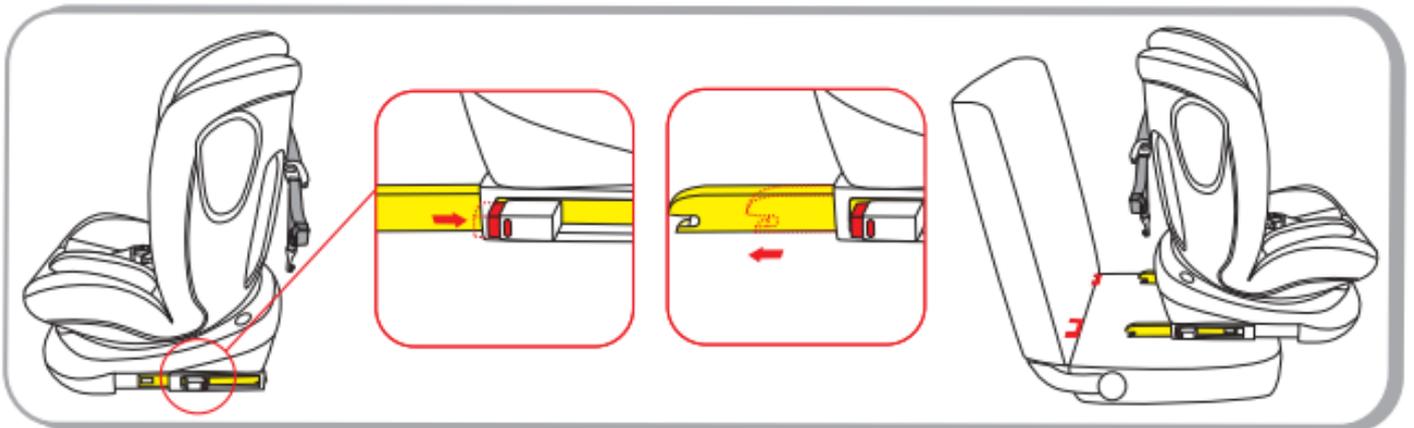

Step2: Push the ISOFIX connectors directly into the anchorages until heard an audible sound "click". Now the ISOFIX indicator of ISOFIX release button show green color .Ensure the child seat firmly pressed against the car seat's backrest.




Step3: Grasp the seat body and base to check the seat if it is fastened tightly or shakes. If the seat shakes and the ISOFIX connectors are pulled out, please repeat the above steps and install it again. Release the incline handle once it is engaged in the desired direction until you hear a "click".

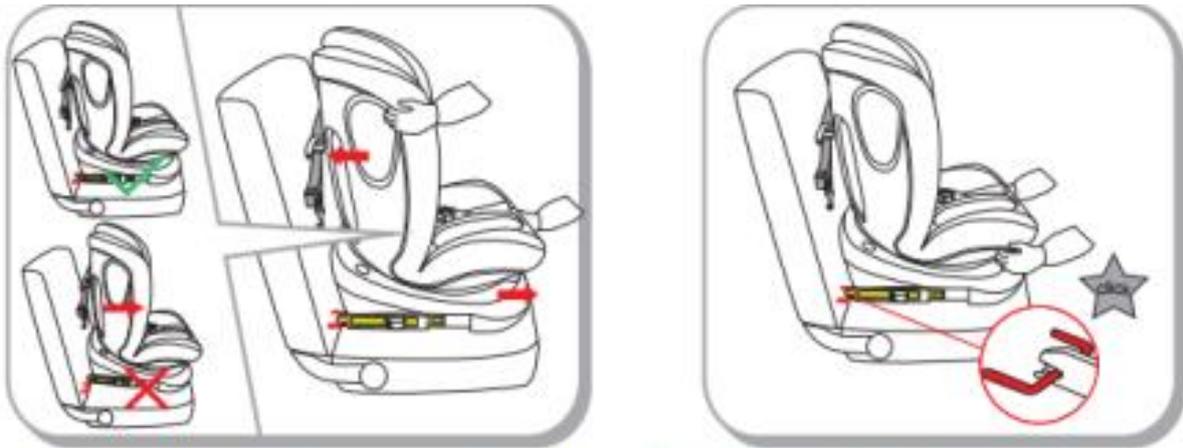


Step4. Press the rotation handle and rotate the body to the rearward facing direction. Release the rotation handle until you hear a "click". Pull or push the incline handle under the front of the seat to the rearward position, until you hear a "click"




Step5: Slide the upper straps along two sides of the headrest, Pull out the top tether and press the tether strap release button to extend the strap until it is long enough to hook the user-ready tether anchorage behind .

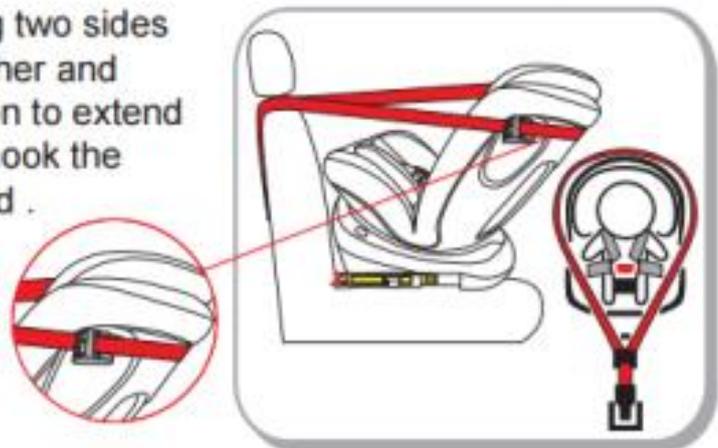

Step6: Hook the tether strap hook onto the user-ready anchorages. Check there maybe are 3 anchorages for the hook, please find one in your favor .

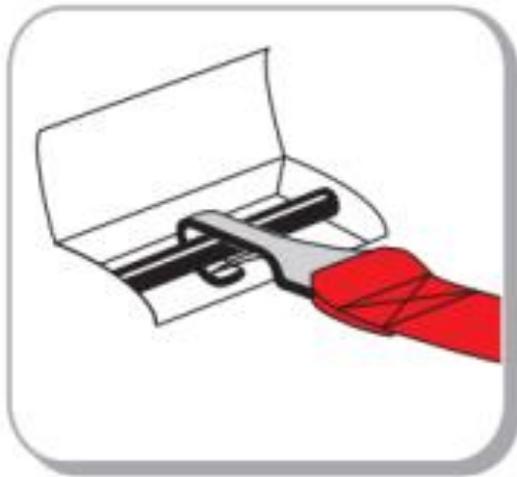


Step7: Pull the tether strap on another end back to tighten the top tether .
Important: If the upper strap and the top tether is tightened favorably and correctly , a green mark will turn up on the other end of the strap release button , please do check it .

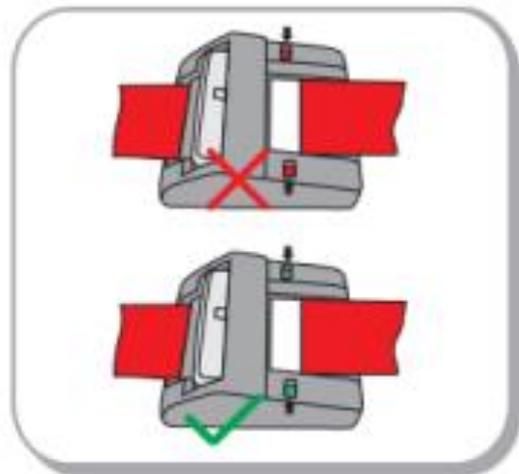


Step8: Place your child into the child seat. Adjust the child seat to desire of incline position. Check the height the shoulder straps on the correct position and fasten the buckle. Check that the harness has not become twisted and also check that the cover is not impeding the movement or fit of the harness in any way.



To disassemble your baby and the child seat, repeat the above prescribed procedures in reverse order.

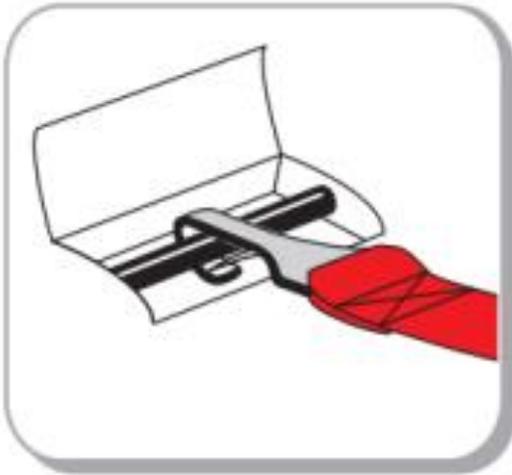

Step7: Pull the tether strap on another end back to tighten the top tether .
Important: If the upper strap and the top tether is tightened favorably and correctly , a green mark will turn up on the other end of the strap release button , please do check it .

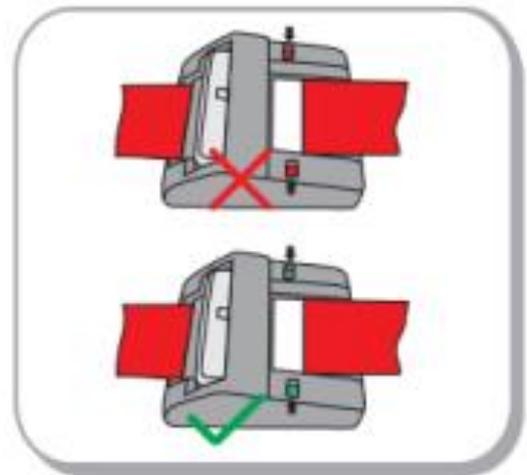

Step8: Place your child into the child seat. Adjust the child seat to desire of incline position. Check the height the shoulder straps on the correct position and fasten the buckle. Check that the harness has not become twisted and also check that the cover is not impeding the movement or fit of the harness in any way.




To disassemble your baby and the child seat, repeat the above prescribed procedures in reverse order.

5.2 Forward-facing installation of the child seat for group I in weight 9-18kg with 3 - point lap & diagonal seat belt.

Important: First please check if there are 2 ISOFIX anchorages in the perpendicular intersection of the vehicle seat back and seat cushion, and the user-ready top tether anchorage behind the vehicle seat.


The user-ready tether anchorage usually permanently installed on the inner rear luggage shelf or on the vehicle floor. Details you could read your vehicle guidelines or contact the vehicle manufacturer.

Step1: Place the child seat on the car seat forward-facing and press the ISOFIX release button on both sides of the seat and push the ISOFIX connectors forward and make the ISOFIX connectors fully extended. This ensures that both hooks on the ISOFIX connectors are open and ready to use, now the ISOFIX indicator of ISOFIX release button show red color.

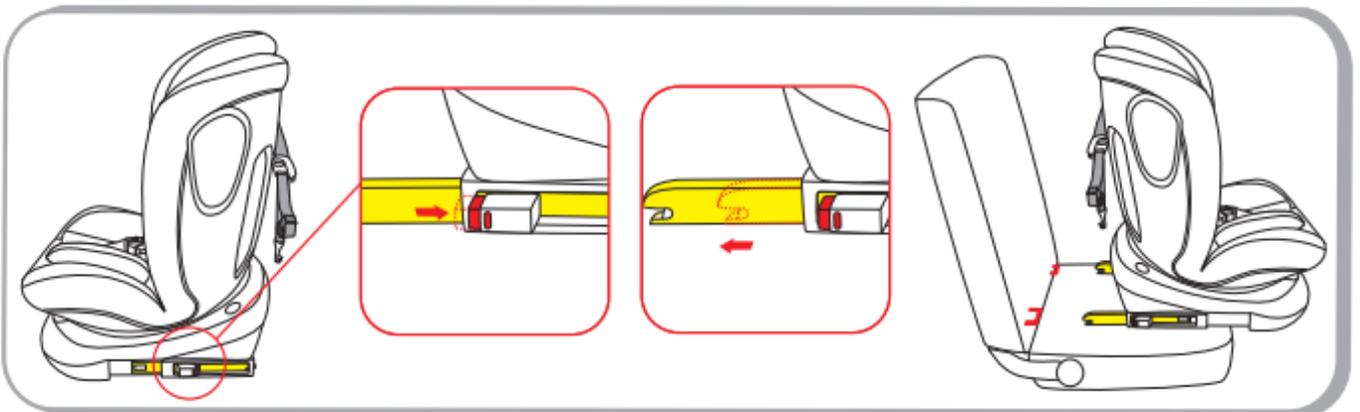

Step2: Push the ISOFIX connectors directly into the anchorages until heard an audible sound "click". Now the ISOFIX indicator of ISOFIX release button show green color. Ensure the child seat firmly pressed against the car seat's backrest.



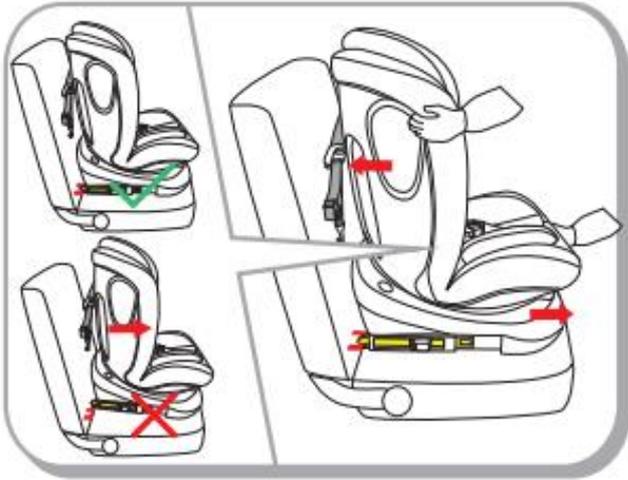


Step3: Grasp the seat body and base to check the seat if it is fastened tightly or shakes. If the seat shakes and the ISOFIX connectors are pulled out, please repeat the above steps and install it again .


Step4. Place your child into the child seat. Adjust the child seat to the desired incline position. Check the height of the shoulder straps on the correct position and fasten the buckle. Check that the harness has not become twisted and also check the cover is not impeding the movement or fit of the harness in any way.



Step5. Pull out the vehicle belt, thread the belt tongue (incl. vehicle belt) through one seat belt route slot to the rear and through the backrest, through the other seat belt route slot on the buckle side of the vehicle and allow it to lock in place .

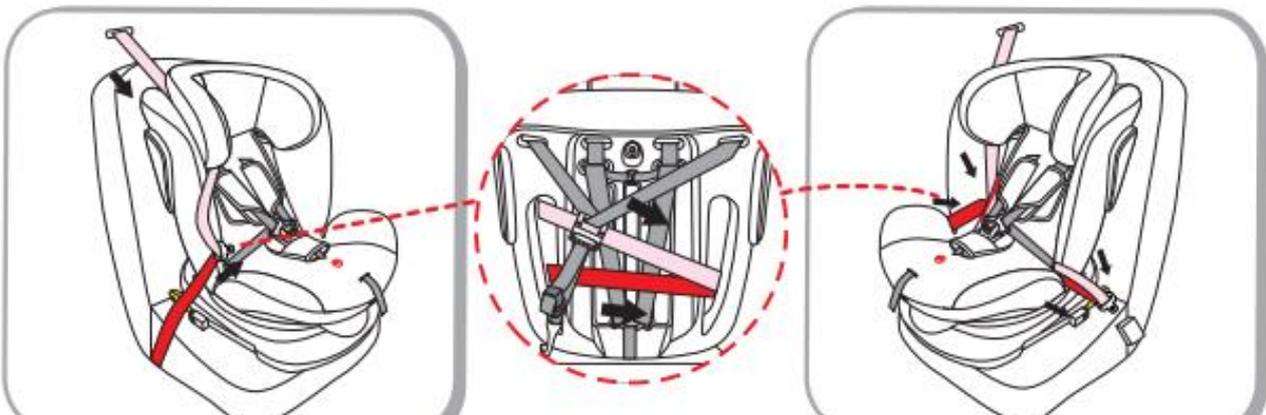

Step6: Insert diagonal belt and lap belt into the vehicle buckle hear "click" .Check the vehicle belt buckle is correctly locked by pulling the seat belt -upwards.

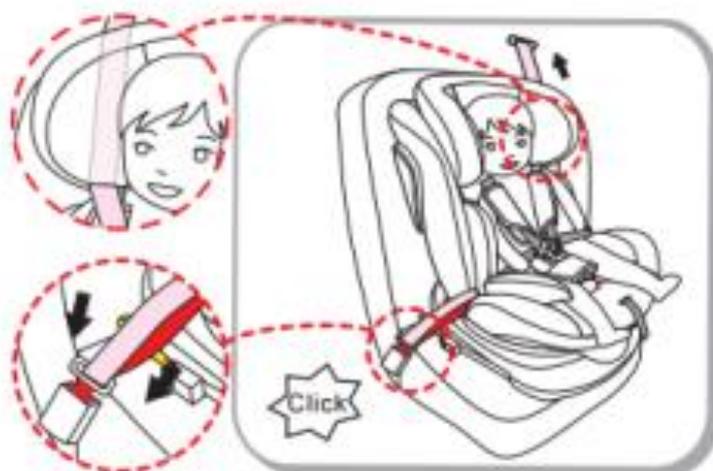

Step7: Check that the diagonal belt and lap belt have not become twisted and also check that the cover is not impeding the movement in any way.

Main load point must be up car seat buckle. The satisfactory position of the adult safety-belt buckle relative to the child car seat is as photo. If in doubt about this point, please contact us .




Make sure the seat belt has not become twisted. Also check that the cover is not impeding the movement or fit of the seat belt strap in any way .


To disassemble your baby and the child seat, repeat the above prescribed procedures in reverse order.

5.3 Forward-facing installation the child seat with ISOFIX and the 3-point lap & diagonal seat belt use for group II,III from approx. 3 years to 12 years (15-36).


Step1: Remove the crotch pad and buckle, shoulder straps, ,shoulder pad before installing for children 15kg to 36 kg in weight (group II,III) as follows :

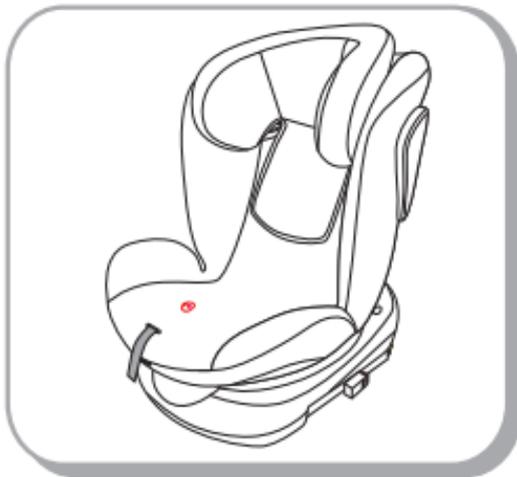

Step2: Place the child seat on the car seat forward-facing and press the ISOFIX release button on both sides of the seat and push the ISOFIX connectors forward and make the ISOFIX connectors fully extend. This ensures that both hooks on the ISOFIX connectors are open ready to use, now the ISOFIX indicator of ISOFIX release button show red color.

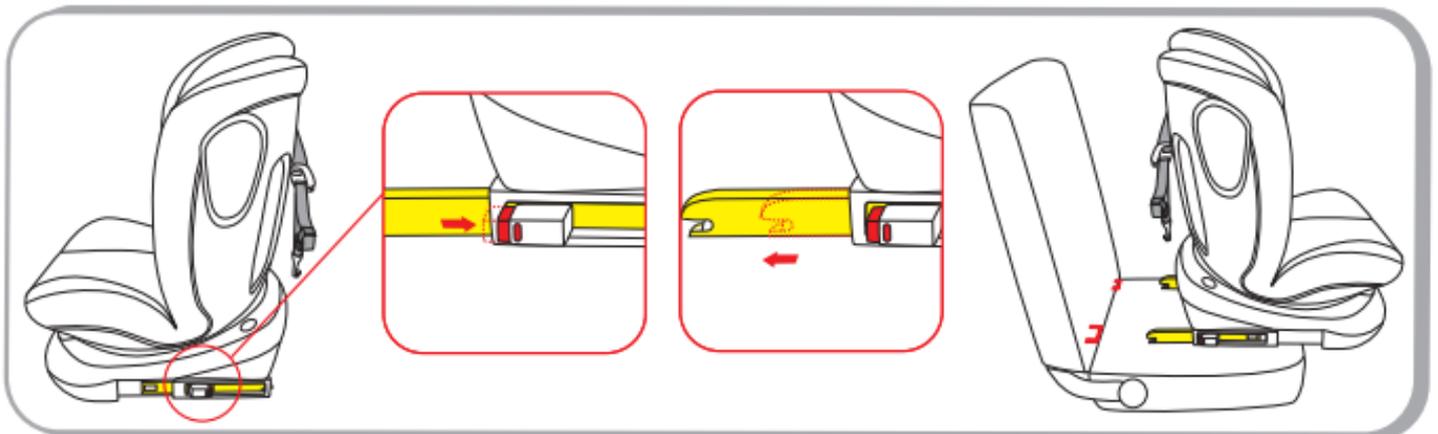


Step3: Push the ISOFIX connectors directly into the anchorages until heard an audible sound "click". Now the ISOFIX indicator of ISOFIX release button show green color .

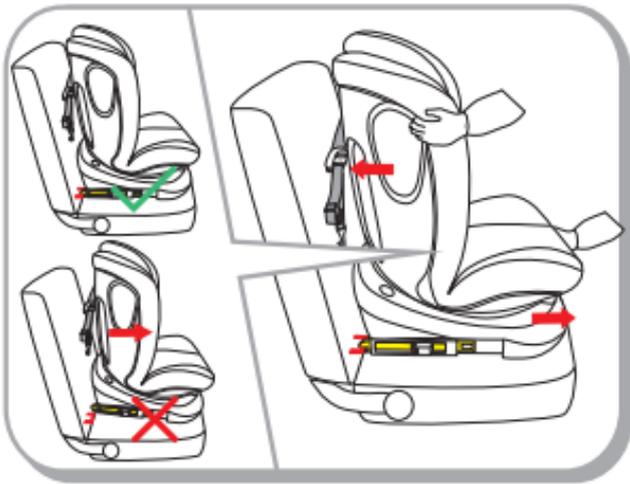


Step4: Grasp the seat body and base to check the seat if it is fastened tightly or shakes. If the seat shakes and the ISOFIX connectors are pulled out, please repeat the above steps and install it again .

Step5:Place your child into the child seat . Adjust the headrest height according to the height of your child if necessary .Guide the diagonal belt into the top belt guide hook under the headrest near to the side of the car seat belt automatic roll-up device. Guide lap belt through both belts guide hook's of on the both sides of the seat body.


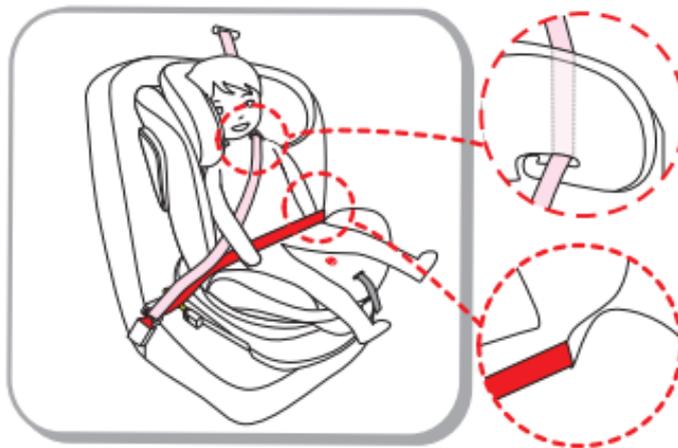


Step6: Insert diagonal belt and lab belt into the vehicle buckle hear "click" .Check the vehicle beltbuckle is correctly locked by pulling the seat belt -upwards.

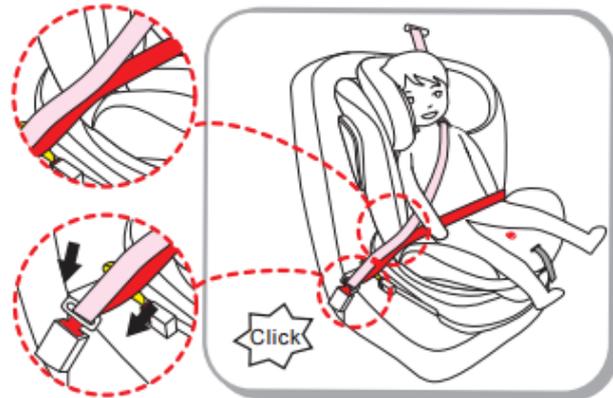

Step7: Check that the diagonal belt and lap belt have not become twisted and also check that the cover is not impeding the movement in any way.

Main load point must be up car seat buckle. The satisfactory position of the adult safety-belt buckle relative to the child car seat is as photo. If in doubt about this point, please contact us .

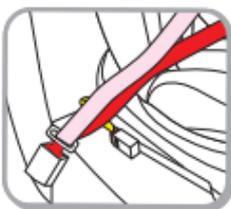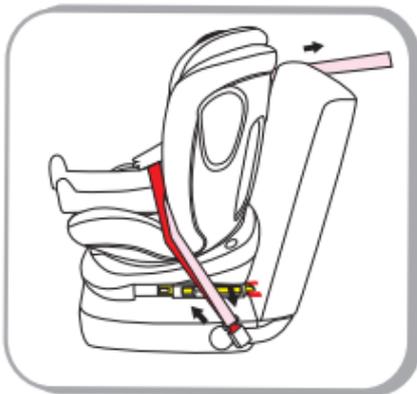

Make sure the seat belt has not become twisted. Also check that the cover is not impeding the movement or fit of the seat belt webbing in any way .

To release your child unfasten the seat belt in the normal way .


6. Maintenance and cleaning

6.1 Daily maintenance

1. In daily use, check periodically the child seat. The child seat should be replaced after an accident.
2. Please keep this child seat in dry and ventilated place to avoid damp moldy
3. If the child seat becomes dusty, clean the seat belt and the plastic pieces by swiping them with a damp sponge and let it dry under ambience.
4. If food or drink drop accidentally on the buckle, disassemble the seat belt from the child seat and rinse it gently by warm water. Leave it dry under ambience .
5. For cleaning the entire child seat fabric cover, please refer to the 6.2 washing instruction.

6.2 Washing instruction

Never use any solvent, chemical detergent or lubricant on any part of your child seat.

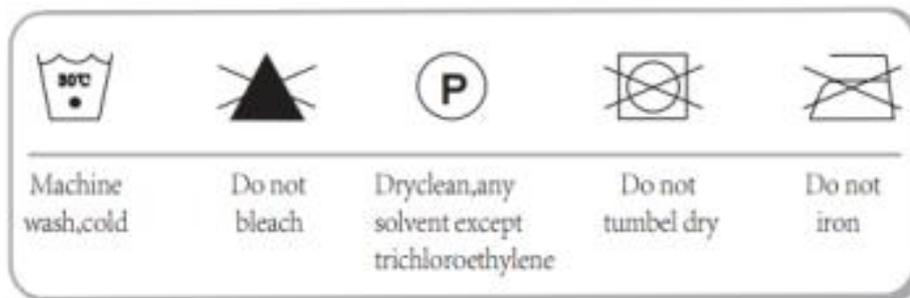

If you are in doubt about using or fitting of this product or you require any replacement parts ,please contact our customer hot-line.

European safety child seat is sweeping the whole world now



European safety standard

Le distributeur de la marque BB-BOOM :
MonMobilierDesign
Lieu-dit l'Usine
42430 Saint-Just-en-Chevalet

Veuillez lire attentivement le manuel d'instructions avant utilisation. Si vous avez des questions concernant l'utilisation de ce siège auto, n'hésitez pas à nous contacter.

NOTICE

Avis concernant les systèmes de retenue pour enfants ISOFIX semi-universels (dans le groupe 0+, I)

1. Ceci est un système de retenue pour enfants ISOFIX. Il est approuvé conformément à la série 04 d'amendements au Règlement No 44, pour une utilisation générale dans les véhicules équipés de systèmes d'ancrages ISOFIX.

2. Il conviendra aux véhicules dont les positions ont été approuvées comme positions ISOFIX (telles que détaillées dans le manuel du véhicule), en fonction de la catégorie du siège pour enfant et de l'équipement.

3. Ce groupe de masse et la classe de taille ISOFIX à laquelle cet appareil est destiné est: Groupe 0 +, I: D

Avis concernant la catégorie semi-universelle (groupe 0+, I, II, III)

Ce dispositif de retenue pour enfants est classé pour un usage "(Semi-universel)" et convient pour la fixation aux positions de siège des voitures suivantes:

CAR	FRONT	REAR
refer to vehicle list	Outer	Centre
	Yes	Yes No

Les positions de siège dans d'autres voitures peuvent également convenir pour accepter ce dispositif de retenue pour enfants.

En cas de doute, consultez le fabricant du système de retenue pour enfants ou le revendeur.


Convient uniquement si les véhicules homologués sont équipés d'une ceinture à 3 points, homologués conformément au Règlement no 16 de la CEE-ONU ou à une autre norme équivalente.

NE PAS UTILISER LE SIÈGE-AUTO EN POSITION ARRIÈRE SI UN AIRBAG EST INSTALLÉ.

Pour le groupe 0 + I II III, le siège enfant doit être installé avec un ancrage ISOFIX, approuvé par la CEE / ONU. Règlement n° 16 ou normes équivalentes.

DANGER EXTREME
Ne pas utiliser dans les sièges passagers équipés d'airbags (SRS)

1. Structure

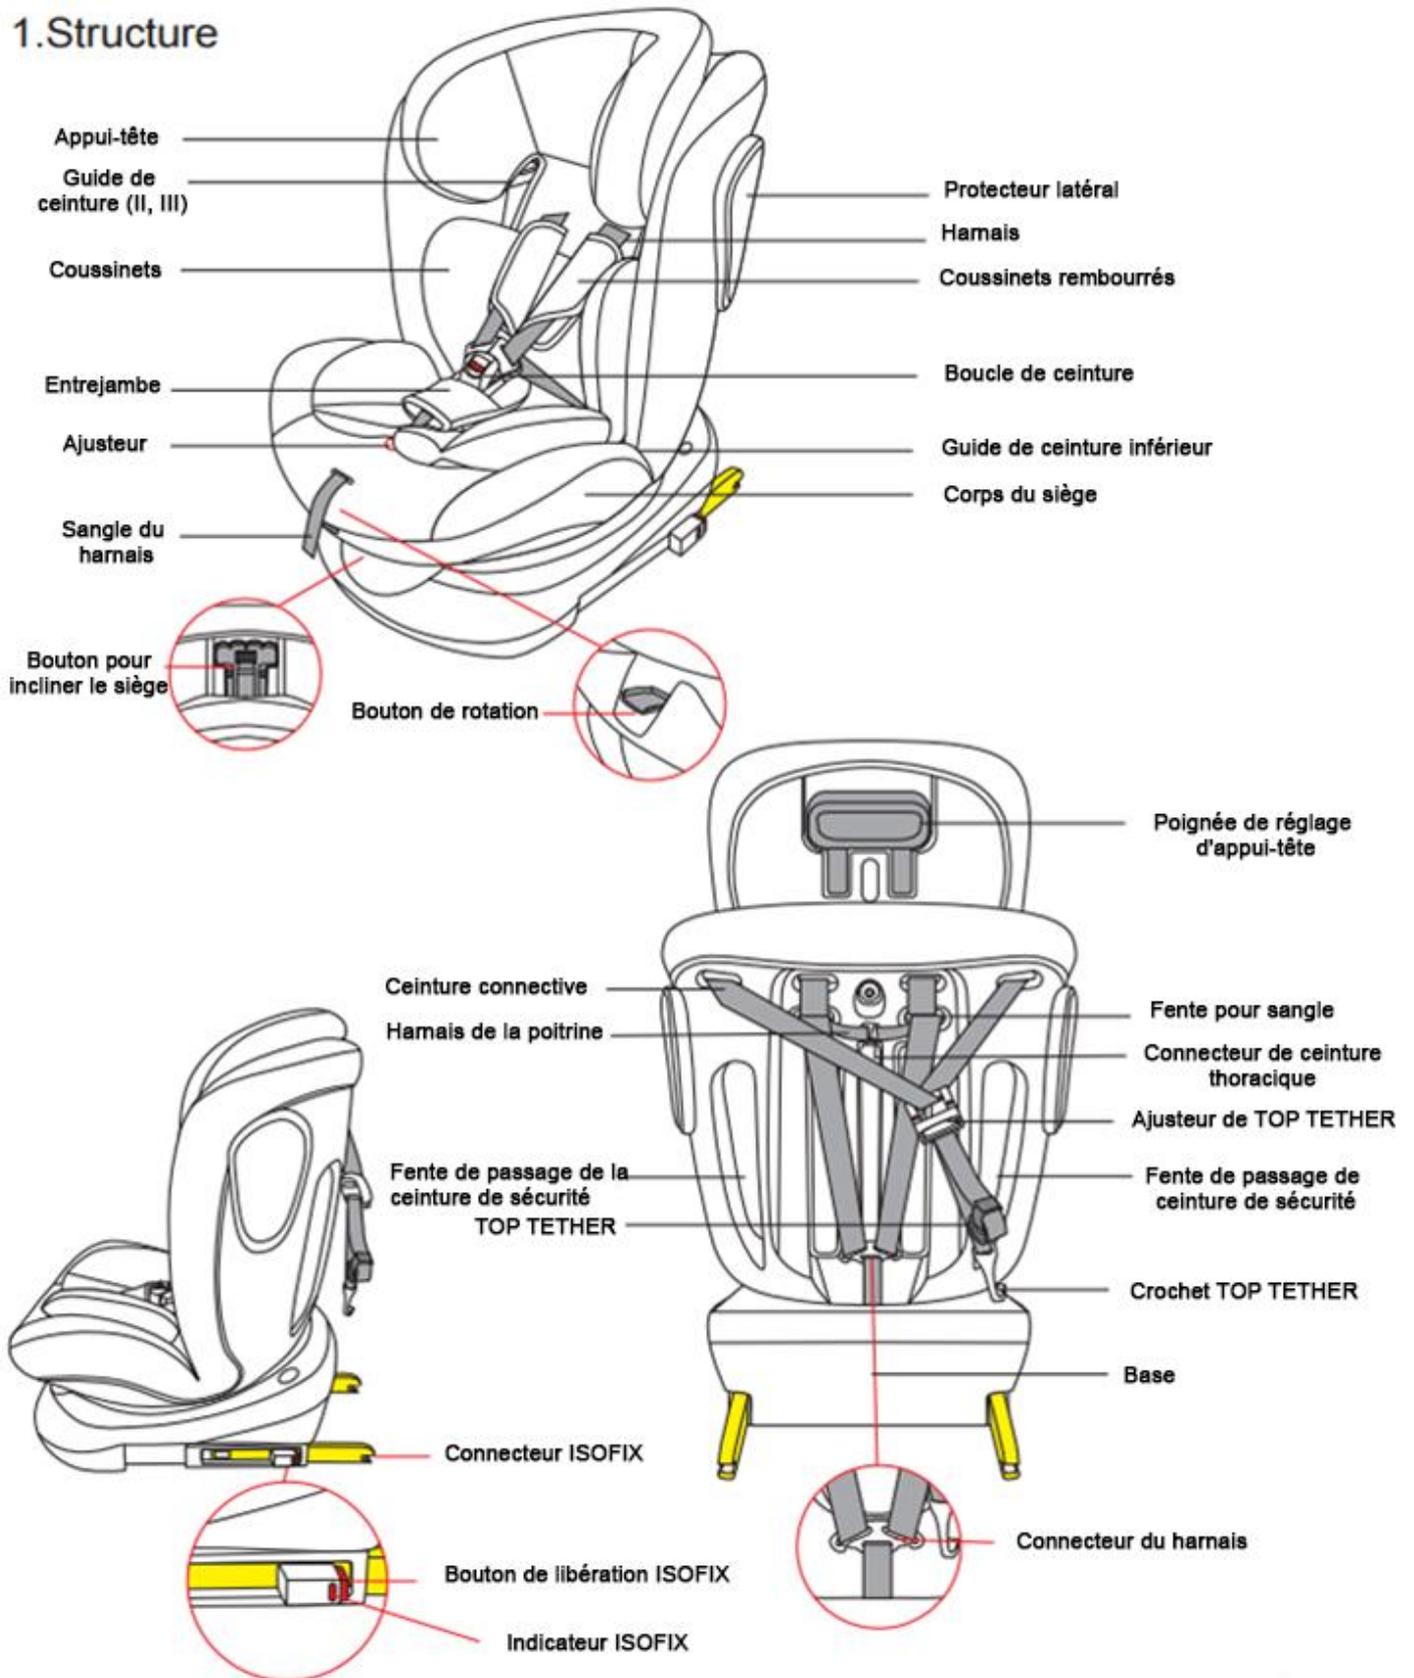

2. Caractéristiques

1. Ce produit est équipé d'un système ISOFIX automatique et télescopique avancé, installé sur le siège auto à l'aide d'un ancrage ISOFIX, qui est plus pratique, plus stable et plus sûr. Ce produit est également équipé de l'attache supérieure qui vise à limiter la rotation de la retenue lors d'un choc frontal.
2. L'appuie-tête et la hauteur de la bandoulière ont 8 hauteurs réglables en fonction de la hauteur de l'enfant.
3. Ce siège pour enfant peut être utilisé dos à la route avec harnais pour les enfants pesant moins de 18 kg (environ de la naissance à 4 ans). Il ne peut être installé qu'avec ISOFIX et Toptether.
4. Ce siège pour enfant peut être utilisé face à l'avant avec un harnais pour enfants de 9 à 18 kg (environ de 9 mois à 4 ans). Il ne peut être installé qu'avec une ceinture à 3 points et ISOFIX.
5. Ce siège pour enfant peut être utilisé sans harnais pour les enfants de 15 à 36 kg (environ de 3 à 12 ans). Il ne peut être installé qu'avec une ceinture à 3 points et ISOFIX.
6. Ce siège enfant peut pivoter à 360 °. Le siège enfant doit être orienté vers l'avant ou vers l'arrière.

3. Avertissement de sécurité

Pour la sécurité de votre enfant, veuillez lire attentivement ces instructions avant utilisation et conservez-les pour vous y référer ultérieurement.

1. Ce siège enfant ne peut être utilisé avec le harnais que pour les enfants de moins de 18 kg (groupe 0 +, moins de 13 kg; groupe, 9-18 kg). Ce siège pour enfant peut être utilisé sans harnais pour les enfants de 15 à 36 kg. poids (groupe II, III).
3. Ce siège pour enfant peut être installé face à l'avant pour les groupes I, II et III à l'aide de ceintures à 3 points et d'un ancrage ISOFIX.
4. Pour l'installation ISOFIX: Assurez-vous de lire le manuel du fabricant de la voiture.
5. Ce manuel d'instruction peut être conservé dans l'espace spécial du siège pour enfant pendant toute sa durée de vie.
6. Ce siège enfant peut être pivoté de 360. Le siège enfant doit être orienté vers l'avant ou vers l'arrière
7. Ne laissez jamais votre enfant sans surveillance dans le siège.
8. Il est recommandé de remplacer le dispositif lorsqu'il a été soumis à de violentes contraintes lors d'un accident.
9. Pour des raisons de sécurité, le siège auto doit être fixé à l'intérieur du véhicule, au moyen des ancrages ISOFIX et Top Tether pour les groupes 0 + et I, et à l'aide de la ceinture à 3 points et de l'ancrage ISOFIX pour les groupes I, II et III, même si vous le faites. ne placez pas votre enfant dans son siège.

10. Les sangles qui retiennent l'enfant doivent être ajustées au corps de l'enfant et ne doivent pas être torsadées.
11. Il faut insister sur le fait que toutes les sangles soient utilisées et que le bassin est fermement engagé.
12. Tout bagage ou autre objet susceptible de causer des blessures en cas de collision doit être correctement sécurisé.
13. Les éléments rigides et les pièces en plastique d'un dispositif de retenue pour enfants doivent être placés et installés de manière à ne pas être tenus comme un usage quotidien du véhicule d'être frappés par un siège amovible ou par une porte du véhicule.
14. Pour éviter tout risque de chute, votre enfant doit toujours être attaché.
15. Il est dangereux d'apporter des modifications ou des ajouts à l'appareil sans l'approbation de l'autorité compétente et de ne pas suivre scrupuleusement les instructions d'installation fournies par le fabricant du dispositif de retenue pour enfants.
16. Ce siège enfant est conçu pour les enfants de 0 kg à 36 kg. Ne surchargez jamais le siège enfant avec plus d'un enfant ou avec d'autres charges.
17. Le dispositif de retenue pour enfants ne doit pas être utilisé sans la housse.
18. La housse de siège ne doit être remplacée par aucune autre que celle recommandée par le fabricant, car elle fait partie intégrante de la performance du système de retenue.
19. Avant de régler des pièces mobiles ou ajustables de votre siège auto, vous devez retirer votre bébé du siège auto.
20. Le siège pour enfant ne doit pas être exposé à la lumière du soleil s'il n'est pas muni de textile, sinon il risque d'être trop chaud pour la peau de l'enfant.
21. Ne jamais utiliser un produit d'occasion, car on ne peut jamais être sûr de ce qui lui est arrivé.
22. Si la position de la boucle de la ceinture de sécurité pour adulte par rapport aux principaux points de contact portant le siège de sécurité pour enfant n'est pas satisfaisante. Veuillez contacter le fabricant en cas de doute sur ce point.
23. Ne pas utiliser de points de contact porteurs autres que ceux décrits dans les instructions et marqués dans le dispositif de retenue pour enfants


24. Veuillez lire ce manuel avant d'installer le siège-auto

4. Utilisation

4.1 Position d'installation



Ce siège auto est adapté pour être installé avec les ancrages ISOFIX de votre voiture conformes à la norme Européenne en vigueur.

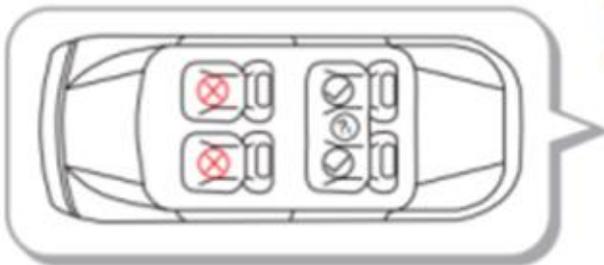

Utilisez ce siège auto uniquement si votre voiture dispose d'ancrage ISOFIX.

4.2 4.2 Vérification de la hauteur de la ceinture



NON - TROP BAS




NON - TROP HAUT



OUI - CORRECT

Vérifier toujours si la ceinture est à la bonne hauteur pour votre enfant.

4.3 Utilisation de la ceinture

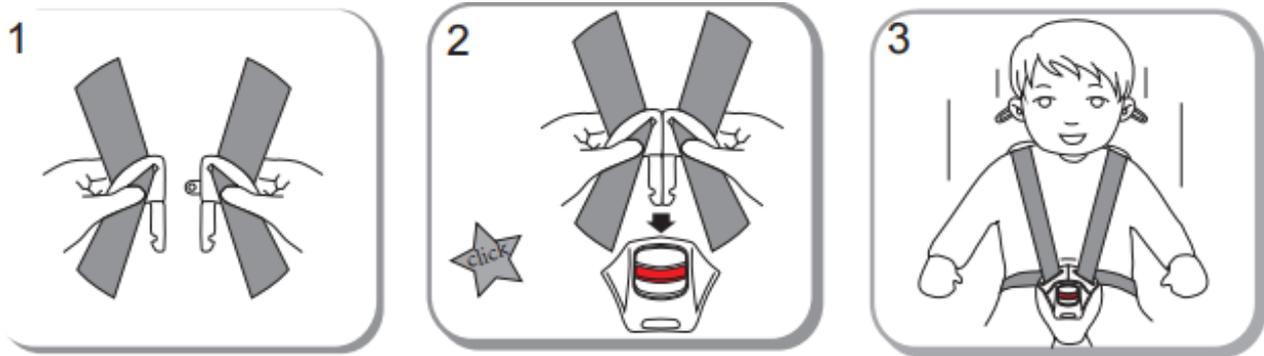

Pour utiliser le harnais avec précision, procédez comme suit :

1. Assemblez les deux parties métalliques ensemble.
2. Insérez les deux parties dans le connecteur de la boucle situé entre les cuisses de votre enfant.
3. Vérifiez que le harnais de sécurité soit bien fixé.
Pour libérer le harnais il vous suffit d'appuyer sur le bouton rouge de la boucle.

4.4 Ajustez et utilisez le harnais

Desserrer le harnais



Le harnais se détend en appuyant sur le dispositif de réglage (sous la housse du siège) situé à l'avant du siège.

Il vous suffit d'appuyer sur ce bouton et tirer les deux bretelles vers vous pour régler le harnais.


Serrer le harnais



Tirez la sangle situé à l'avant du siège auto pour serrer le harnais.

Vérifiez ce dispositif à chaque fois que vous placez l'enfant dans le siège.

4.5 Ajustez le

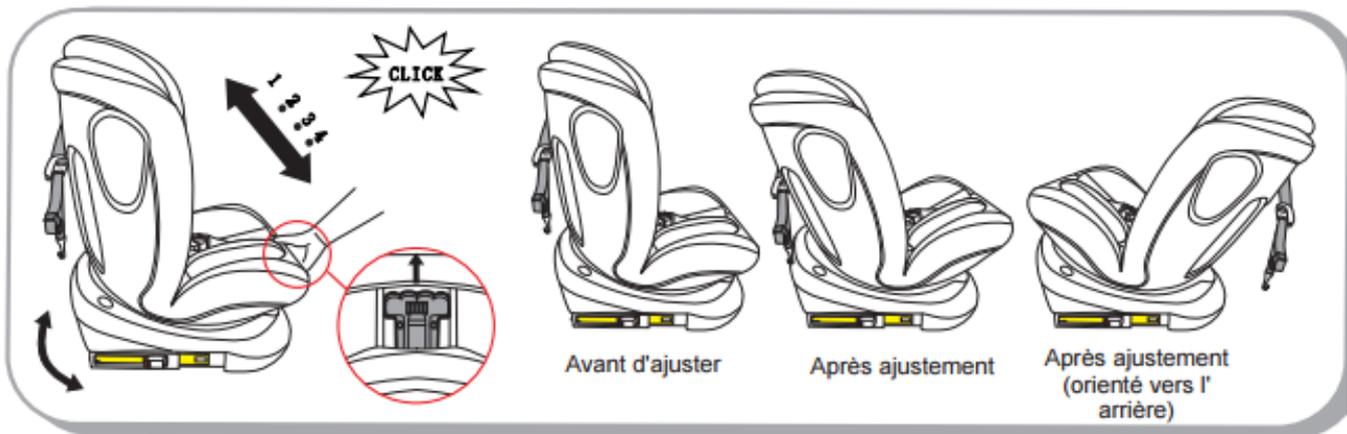


Le siège auto Zéli peut être réglé sur 5 positions.

Le siège auto peut être installé de dos seulement pour les groupes 0+ et I. Afin de tourner le siège auto il vous suffit d'appuyer sur la poignée située à l'avant en dessous du siège. Cette même poignée permet également d'incliner le siège auto d'une position semi-couchée à assis.

Afin de régler le siège en hauteur, il vous suffit d'appuyer sur la poignée située à l'arrière du siège-auto, de tirer vers le haut pour augmenter la hauteur de l'appui-tête.

4.6 Rotation du siège auto

Pour changer la position et l'inclinaison du siège auto, appuyez sur la poignée de rotation et faites pivoter le siège-auto dans la direction souhaitée.

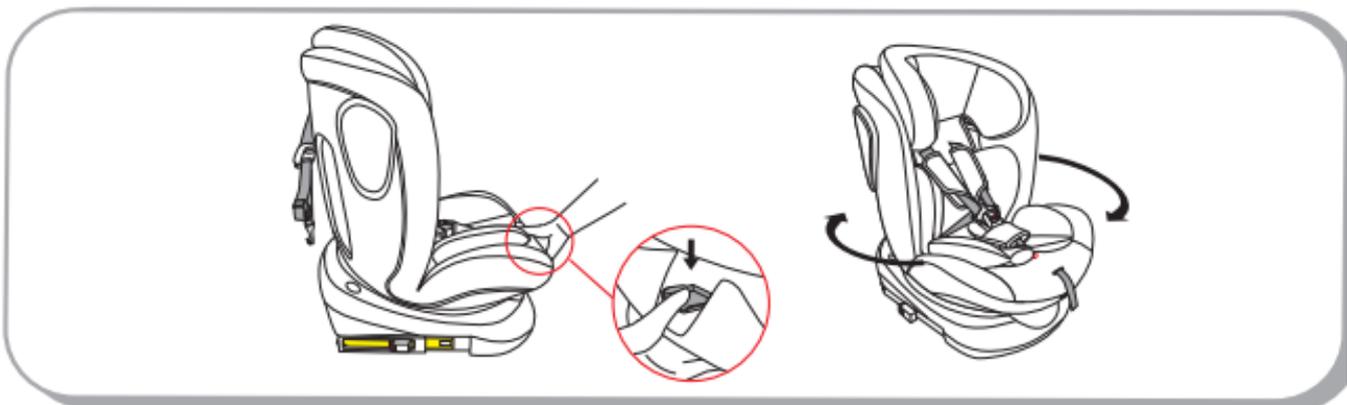

Relâcher la poignée d'inclinaison et de rotation lorsque vous avez obtenu la position souhaitée, vous entendrez alors un « clic ».



IMPORTANT : Assurez-vous que le siège auto est correctement verrouillé dans la direction souhaitée. En tournant le siège-auto dans le sens et/ou sens contraire des aiguilles d'une montre, vous entendrez alors un « clic » qui vous permettra de savoir que le siège auto est correctement verrouillé.



ATTENTION ! Avant de faire un trajet en voiture, assurez vous que votre siège auto soit correctement verrouillé face ou dos à la route (et non latéralement).
Avertissement : Ne placez pas de siège auto à l'avant lorsque les airbags sont activés.


Important : N'utilisez pas votre siège-auto dos à la route lorsque votre enfant pèse plus de 9kg.



Orientation vers l'arrière
Seulement pour les
groupe 0 +, I



Orientation vers l'avant
Seulement pour les
groupes I, II, III

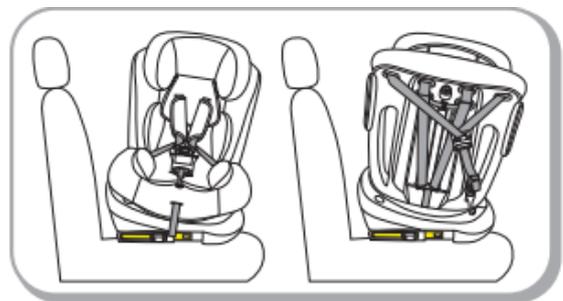

Latéral (deux côtés)


La position latérale est très pratique pour faire entrer ou sortir votre enfant du siège-auto Zéli.

4.7 Retrait des bretelles, des épaulettes, de la sangle d'entrejambe et de la boucle


Étape 1: Ajustez la position du siège auto, appuyez sur le dispositif de réglage et desserrez le harnais d'épaule, faites glisser les sangles d'épaule de son connecteur.




Étape 2: Tirez les harnais d'épaule à travers les fentes depuis l'avant du siège enfant. Tirez sur les épaulettes, vous pouvez maintenant cacher les épaulettes derrière l'appui-tête.

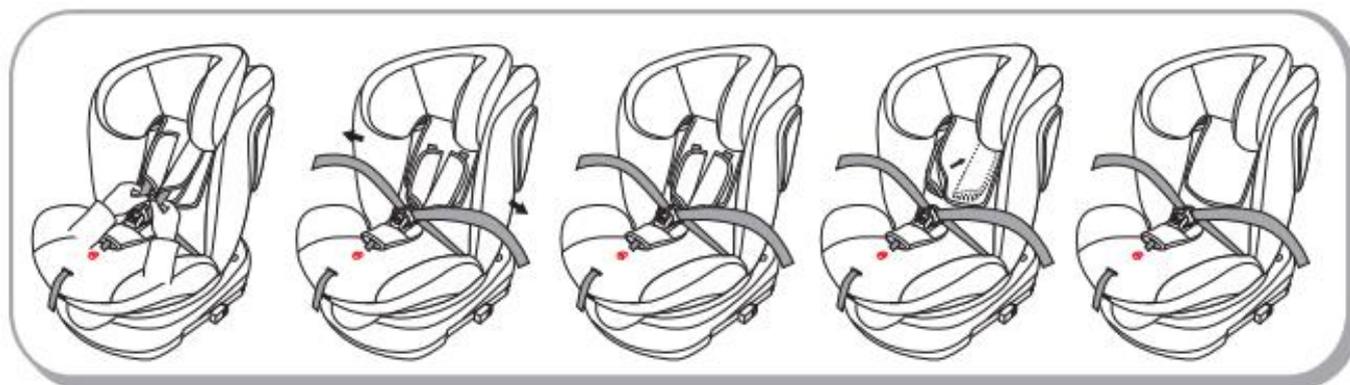


Étape 3: Faites glisser la bandoulière hors du clip de verrouillage de la ceinture comme les photos, maintenant vous pouvez retirer les bretelles.

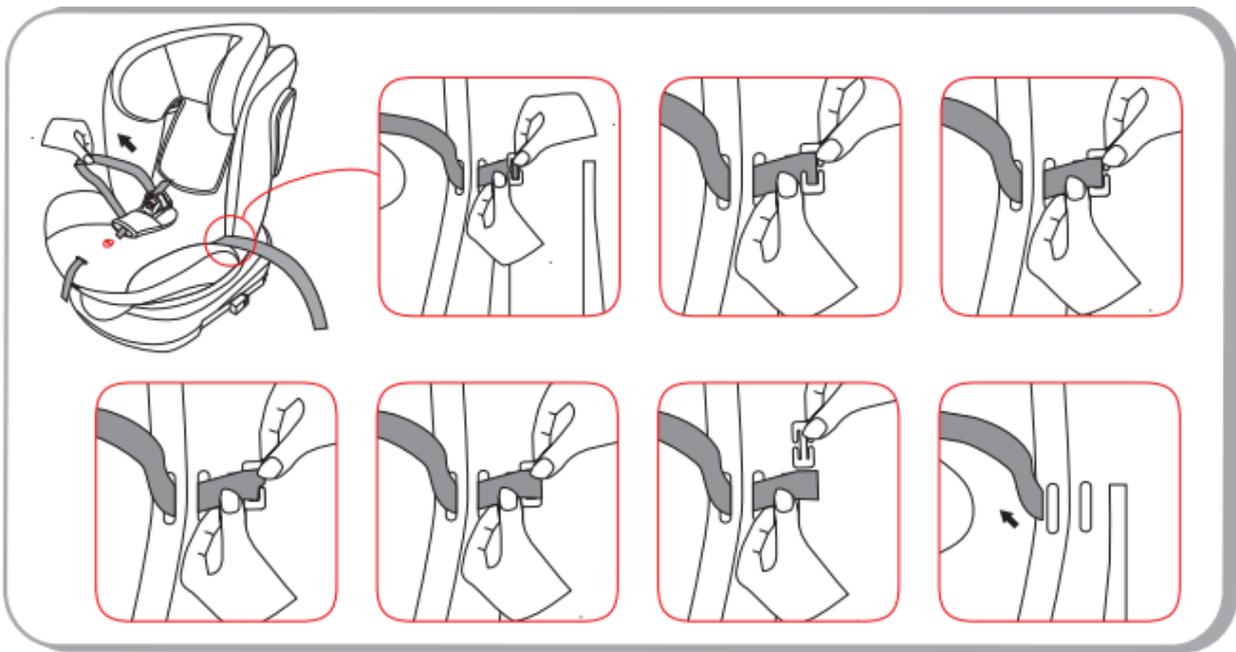



Étape 4: Faites glisser la sangle d'entrejambe comme sur la photo, puis retirez le coussin, la sangle et la ceinture.

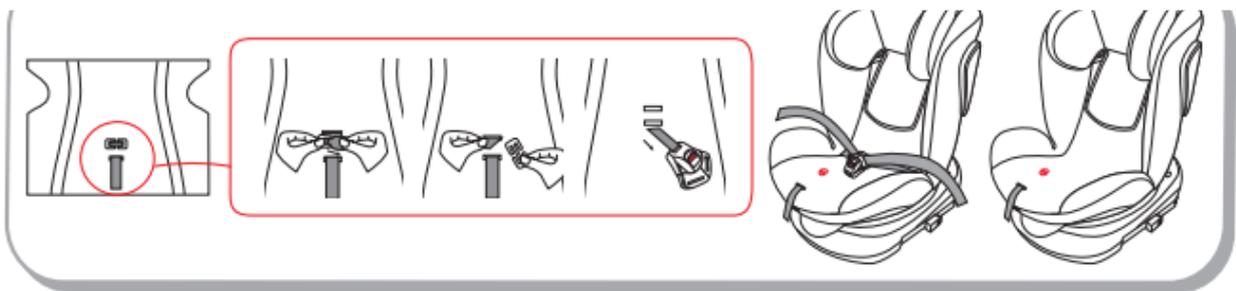

Étape 5: Réglez le siège enfant en position inclinée, tirez sur la sangle de réglage du harnais, maintenant le siège auto peut être utilisé sans harnais pour les enfants de 15 kg à 36 kg (groupe II, III)

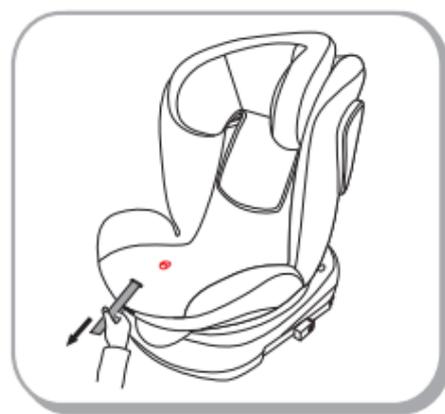



4.8 Réglage de la hauteur des harnais d'épaules

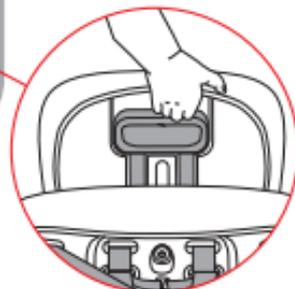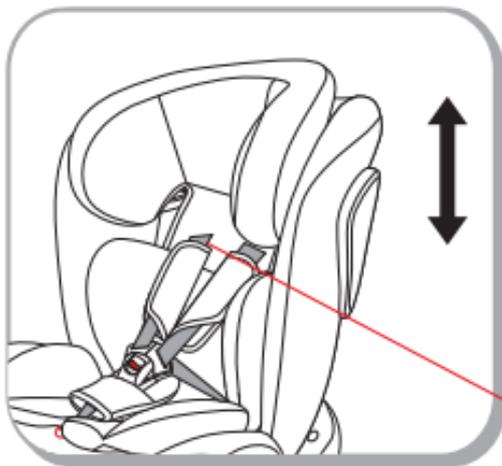

Si la hauteur des ceintures d'épaule ne convient pas à votre enfant, ajustez la hauteur, procédez comme suit: Tirez l'appui-tête avec l'appui-tête de haut en bas jusqu'à la position souhaitée selon la taille de votre enfant, relâchez la poignée, les bretelles atteignent la position souhaitée en fonction de la taille de votre enfant, relâchez la poignée, les bretelles atteignent la hauteur souhaitée et vous entendrez un "clic"

4.9 Méthode de réglage de l'appui-tête

La hauteur de l'appui-tête peut être ajustée. Selon la taille de votre enfant, l'appui-tête peut être ajusté de haut en bas. Réglez l'appui-tête en tirant sur la poignée de réglage à l'arrière de l'appui-tête, augmentez ou abaissez en fonction de la taille de votre enfant. La sangle du harnais doit être au niveau des épaules de votre enfant.

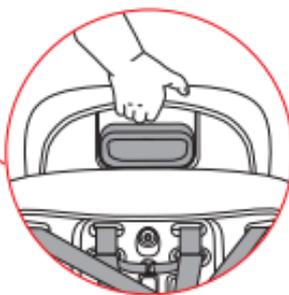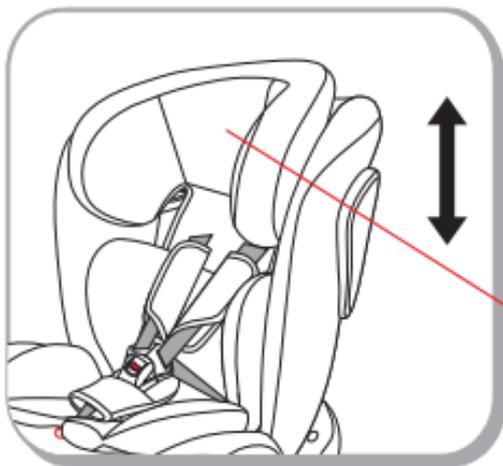


5.0 Installation du siège enfant

5.1 Installation dos à la route du siège enfant avec ISOFIX et Top Tether pour groupe 0+, I de la naissance à 4 ans (moins de 18 kg).

Important: veuillez d'abord vérifier s'il y a 2 ancrages ISOFIX à l'intersection perpendiculaire du dossier et du coussin du siège du véhicule, et l'ancrage de sangle supérieure prêt à l'emploi derrière le siège du véhicule.

L'ISOFIX est généralement installé sur la banquette arrière intérieure des bagages ou sur le plancher du véhicule. Détails, vous pouvez lire les directives de votre véhicule ou contacter le constructeur du véhicule.

Étape 1: placez le siège enfant sur le siège d'auto orienté vers l'avant et appuyez sur le bouton de déverrouillage ISOFIX des deux côtés du siège et poussez les connecteurs ISOFIX vers l'avant et assurez-vous que les connecteurs ISOFIX sont ouverts et prêts à l'emploi, maintenant l'indicateur ISOFIX d'ISOFIX le bouton de libération affiche la couleur rouge

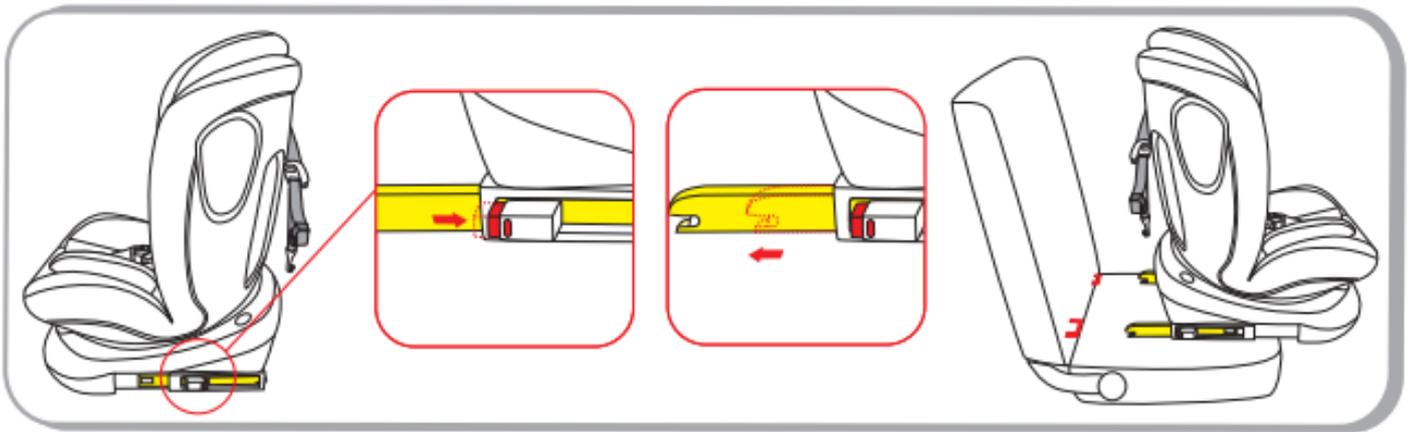

Étape 2: Poussez les connecteurs ISOFIX directement dans les ancrages jusqu'à entendre un "clic". Maintenant, l'indicateur du bouton de libération affiche la couleur verte.




Étape 3: Saisissez le corps et la base du siège pour vérifier si le siège est correctement fixé.. Si le siège n'est pas fixé et que les connecteurs ISOFIX sont retirés, veuillez répéter les étapes ci-dessus et réinstaller. Relâchez la poignée d'inclinaison une fois qu'elle est engagée dans la direction souhaitée jusqu'à ce que vous entendiez un "clic"




Étape 4: Appuyez sur la poignée de rotation et faites pivoter le siège. Relâchez la poignée de rotation et tournez jusqu'à entendre un "clac".




Étape 5: Faites glisser les sangles supérieures le long des deux côtés de l'appui-tête. Tirez la sangle supérieure et appuyez sur le bouton de déverrouillage de la sangle d'ancrage pour étendre

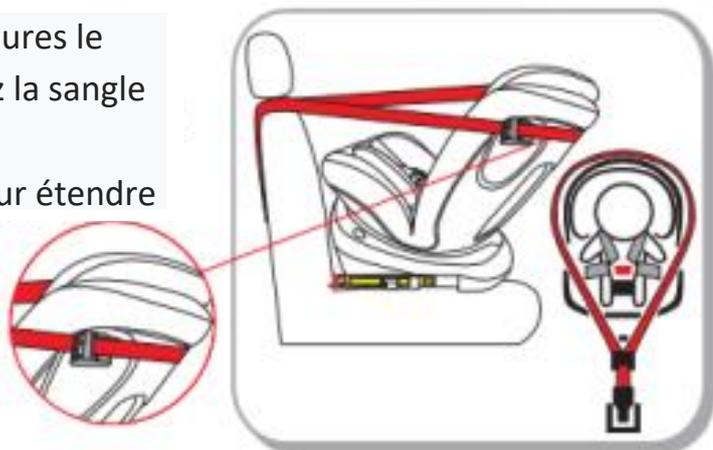

Étape 6: Accrochez le crochet de la sangle d'attache dans les ancrages.

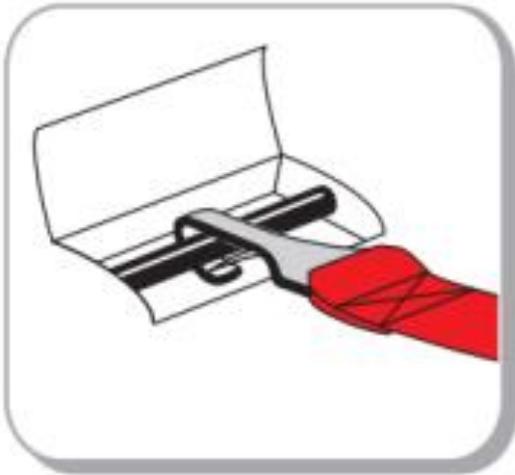

Étape 7: Tirez la sangle à une autre extrémité pour resserrer l'attache supérieure.
Important: Si la sangle supérieure et l'attache supérieure sont serrées correctement, une marque verte apparaîtra à l'autre extrémité du bouton de libération de la sangle.

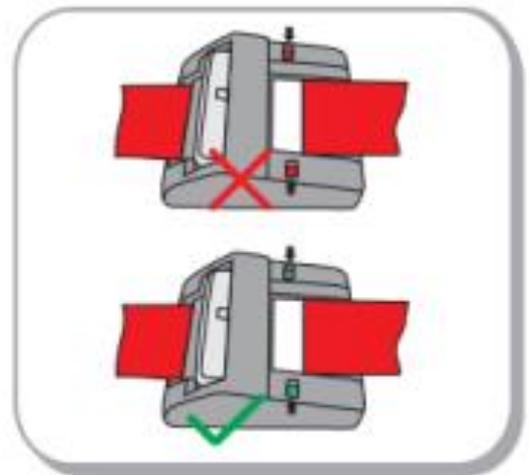

Étape 8: Placez votre enfant dans le siège.
Ajustez le siège, vérifiez la hauteur des bretelles puis attachez votre enfant. Vérifiez que le harnais ne soit pas emmêlé.




5.2 Installation face à la route du siège auto pour groupe I de plus de 9 kg avec ceinture abdominale 3 points et ceinture diagonale.


Important: veuillez d'abord vérifier s'il y a 2 ancrages ISOFIX dans votre voiture.


L'ancrage prêt à l'emploi est généralement installé sur la banquette arrière. Si vous ne trouvez pas les ancrages ISOFIX, merci de contacter le constructeur de votre véhicule.

Étape 1: Placez le siège auto orienté vers l'avant et appuyez sur le bouton de déverrouillage ISOFIX des deux côtés du siège puis poussez les connecteurs ISOFIX vers l'avant. Lorsque l'ISOFIX est fixé l'indicateur du bouton de libération affiche la couleur rouge.

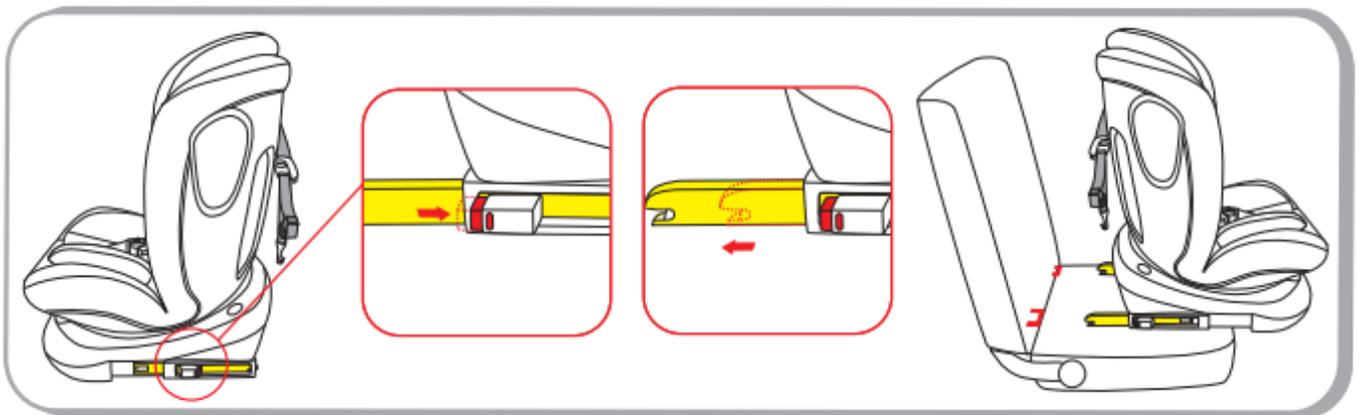

Étape 2: Poussez les connecteurs ISOFIX directement dans les ancrages jusqu'à entendre un "clic". Maintenant, l'indicateur du bouton de libération affiche la couleur verte.

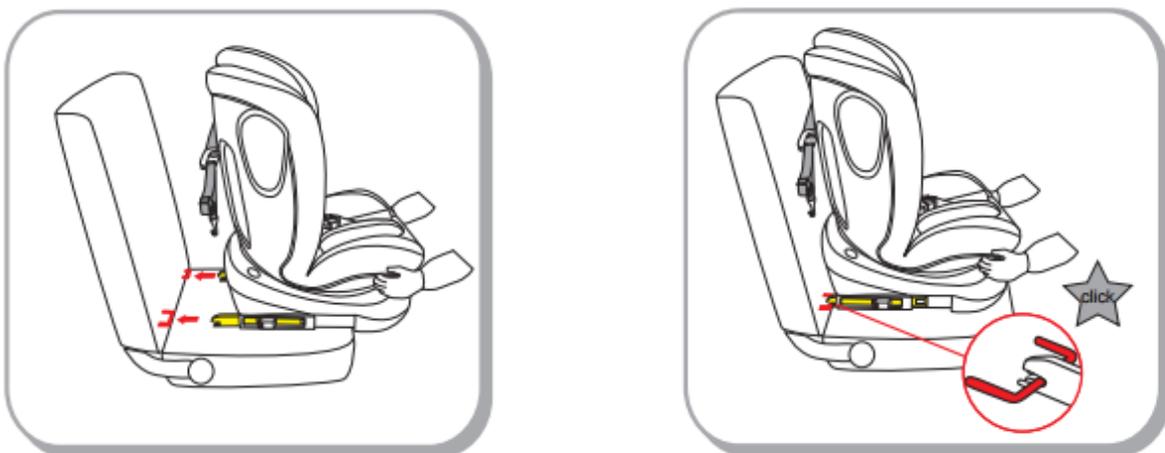

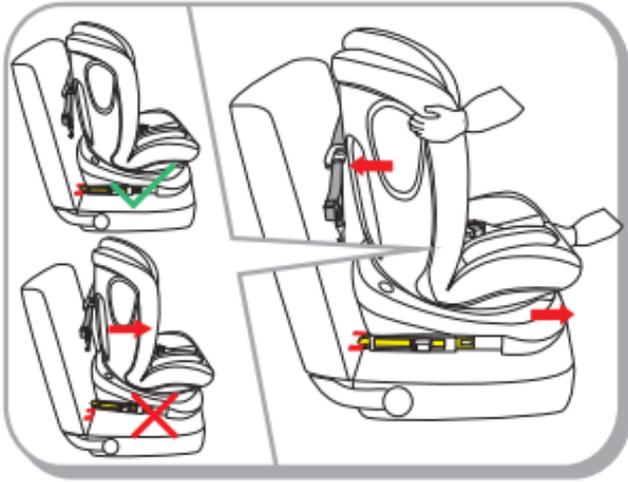


Étape 3: Saisissez le corps et la base du siège pour vérifier si le siège est correctement fixé.. Si le siège n'est pas fixé et que les connecteurs ISOFIX sont retirés, veuillez répéter les étapes ci-dessus et réinstaller. Relâchez la poignée d'inclinaison une fois qu'elle est engagée dans la direction souhaitée


Étape 4: placez votre enfant dans le siège enfant. Réglez le siège enfant dans la position d'inclinaison souhaitée. Vérifiez la hauteur des bretelles dans la bonne position et attachez la boucle. Vérifiez que le harnais n'est pas vrillé et vérifiez également que la housse n'entrave en aucun cas le mouvement ou l'ajustement du harnais.



Étape 5. Enfilez la sangle de la ceinture dans la fente de passage. Comme indiqué sur les photos ci-dessous :

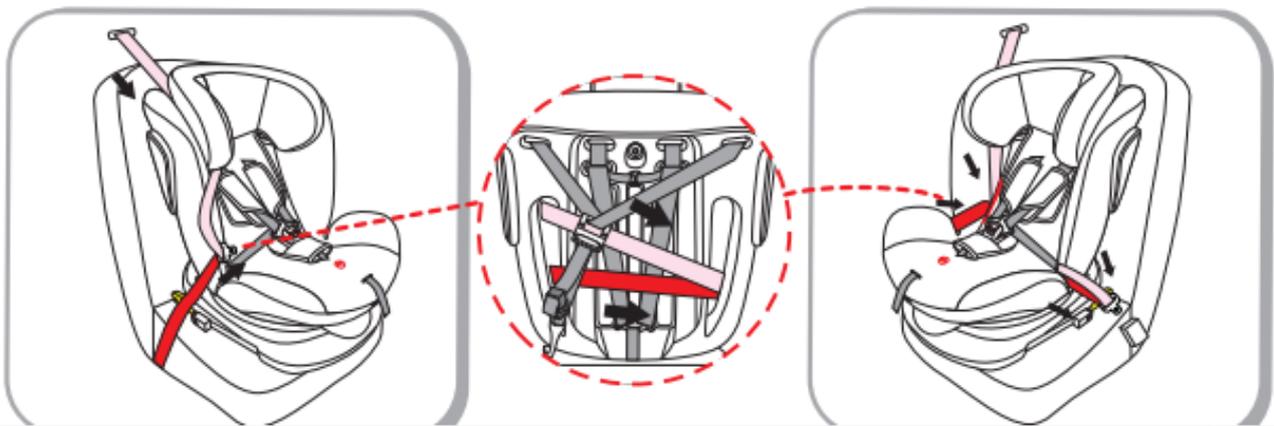

Étape 6: Insérez la ceinture diagonale et dans la boucle du véhicule.

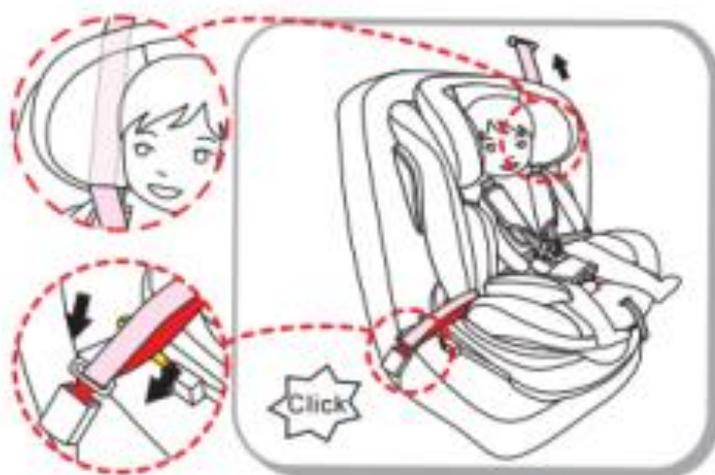

Étape 7: Vérifiez que la ceinture de la voiture et le harnais de sécurité ne soient pas emmêlés et vérifiez également que cela n'entrave en aucun cas le mouvement.




Assurez-vous que la ceinture de sécurité n'est pas tordue. Vérifiez également que la housse n'entrave en aucun cas le mouvement ou l'ajustement de la sangle de la ceinture de sécurité.


Pour démonter votre bébé et le siège enfant, répétez les procédures ci-dessus dans l'ordre de réserve.

5.3. Installation face à la route, le siège enfant avec ISOFIX et la ceinture de sécurité sous-abdominale et diagonale à 3 points pour les groupes II, III, à partir d'env. 3 ansq à 12 ans (15-36 kg).


Étape 1: Retirez le harnais de sécurité. Installer le siège-auto pour les enfants de 15 kg à 36 kg (groupe II, III) comme suit:

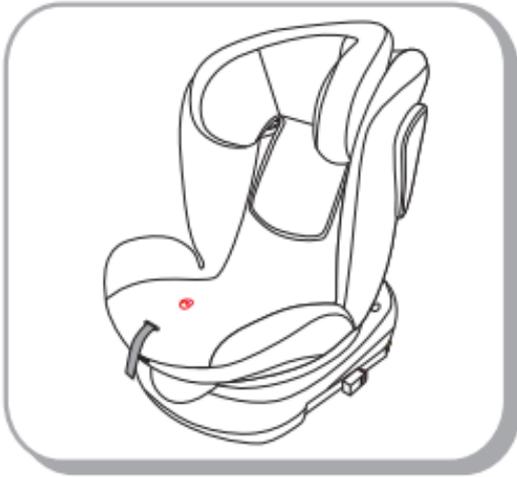

Étape 2: placez le siège enfant sur le siège d'auto orienté vers l'avant et appuyez sur le bouton de déverrouillage ISOFIX des deux côtés du siège et poussez les connecteurs ISOFIX vers l'avant et faites en sorte que les connecteurs ISOFIX soient complètement étendus. Cela garantit que les deux crochets des connecteurs ISOFIX s'étendent complètement. Cela garantit que les deux crochets des connecteurs ISOFIX sont ouverts prêts à l'emploi, maintenant

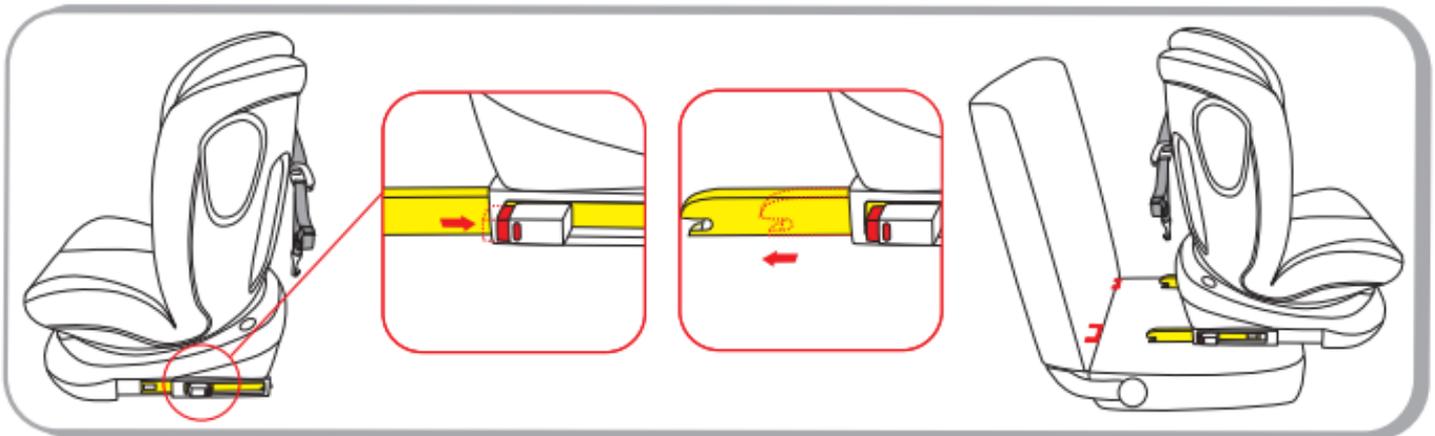


Étape 3: Poussez les connecteurs ISOFIX directement dans les ancrages jusqu'à entendre un "clic". Maintenant, l'indicateur ISOFIX du bouton de libération ISOFIX affiche la couleur verte.

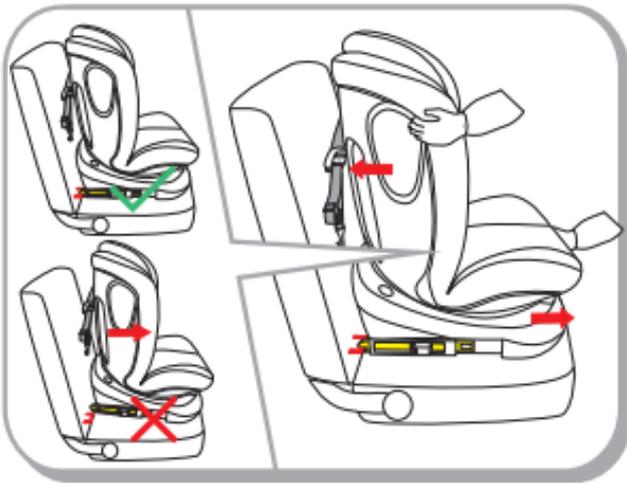


Étape 4: Saisissez le corps et la base du siège pour vérifier si le siège est correctement fixé. Si le siège tremble et que les connecteurs ISOFIX sont retirés, veuillez répéter les étapes ci-dessus et réinstaller.



Étape 5: Placez votre enfant dans le siège auto. Ajustez la hauteur de l'appui-tête à la taille de votre enfant si nécessaire. Guidez la ceinture diagonale dans le crochet de guidage de ceinture supérieur sous l'appuie-tête près du côté du dispositif d'enroulement automatique de la ceinture de sécurité. Guidez la ceinture sous-abdominale à travers les deux sangles de guidage des ceintures des deux côtés du corps du siège.

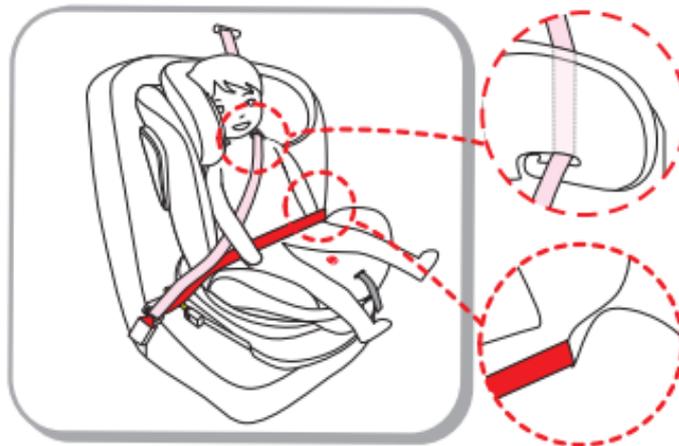

Étape 6: Insérez la ceinture dans la boucle du véhicule. Vérifiez que la boucle de ceinture du véhicule est correctement verrouillée.

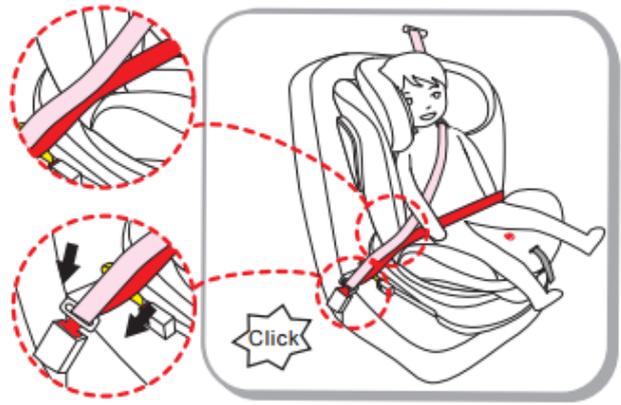

Étape 7: Vérifiez que la ceinture ne soit pas tordue. Et installez la ceinture de sécurité comme suit :

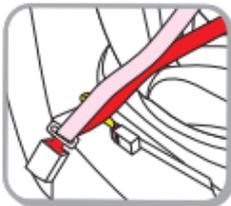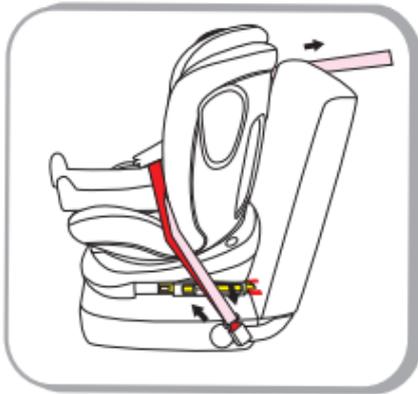

Assurez-vous que la ceinture de sécurité ne soit pas tordue. Vérifiez également que la housse du siège-auto n'entrave en aucune façon le mouvement ou l'ajustement de la sangle de la ceinture de sécurité.

Pour libérer votre enfant, détachez normalement la ceinture de sécurité.


6. Entretien et nettoyage

6.1 Entretien quotidien

1. En utilisation quotidienne, vérifiez périodiquement le siège enfant. Le siège enfant doit être remplacé après un accident.
2. Veuillez conserver ce siège enfant dans un endroit sec et aéré pour éviter les moisissures humides.
3. Si le siège enfant devient poussiéreux, nettoyez la ceinture de sécurité et les pièces en plastique en les faisant glisser avec une éponge humide et laissez-les sécher sous l'ambiance.
4. Si des aliments ou des boissons tombent accidentellement sur la boucle, démontez la ceinture de sécurité du siège enfant et rincez-la doucement à l'eau tiède. Laissez-le sec sous ambiance.
5. Pour nettoyer l'intégralité de la housse en tissu du siège enfant, reportez-vous aux instructions de lavage 6.2.

6.2 Instruction de lavage

N'utilisez jamais de solvant, de détergent chimique ou de lubrifiant sur aucune partie de votre siège enfant.

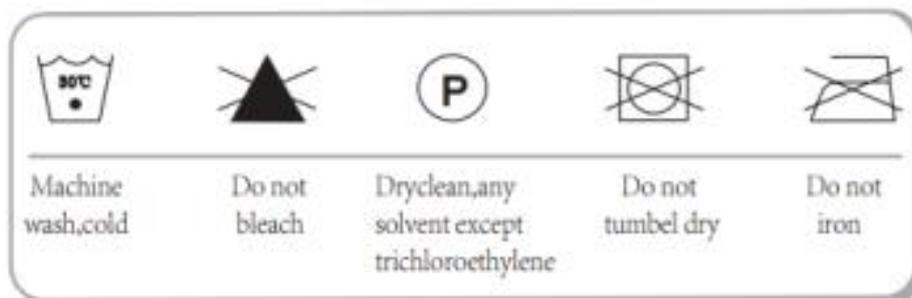

Si vous ne voulez pas utiliser ou installer ce produit ou si vous avez besoin de pièces de rechange, veuillez contacter notre service client. contact@mmd42.fr ou au 04.77.76.32.81



European safety standard