


linärie

CASTRES

LH600SVCC

ASPIRATEUR

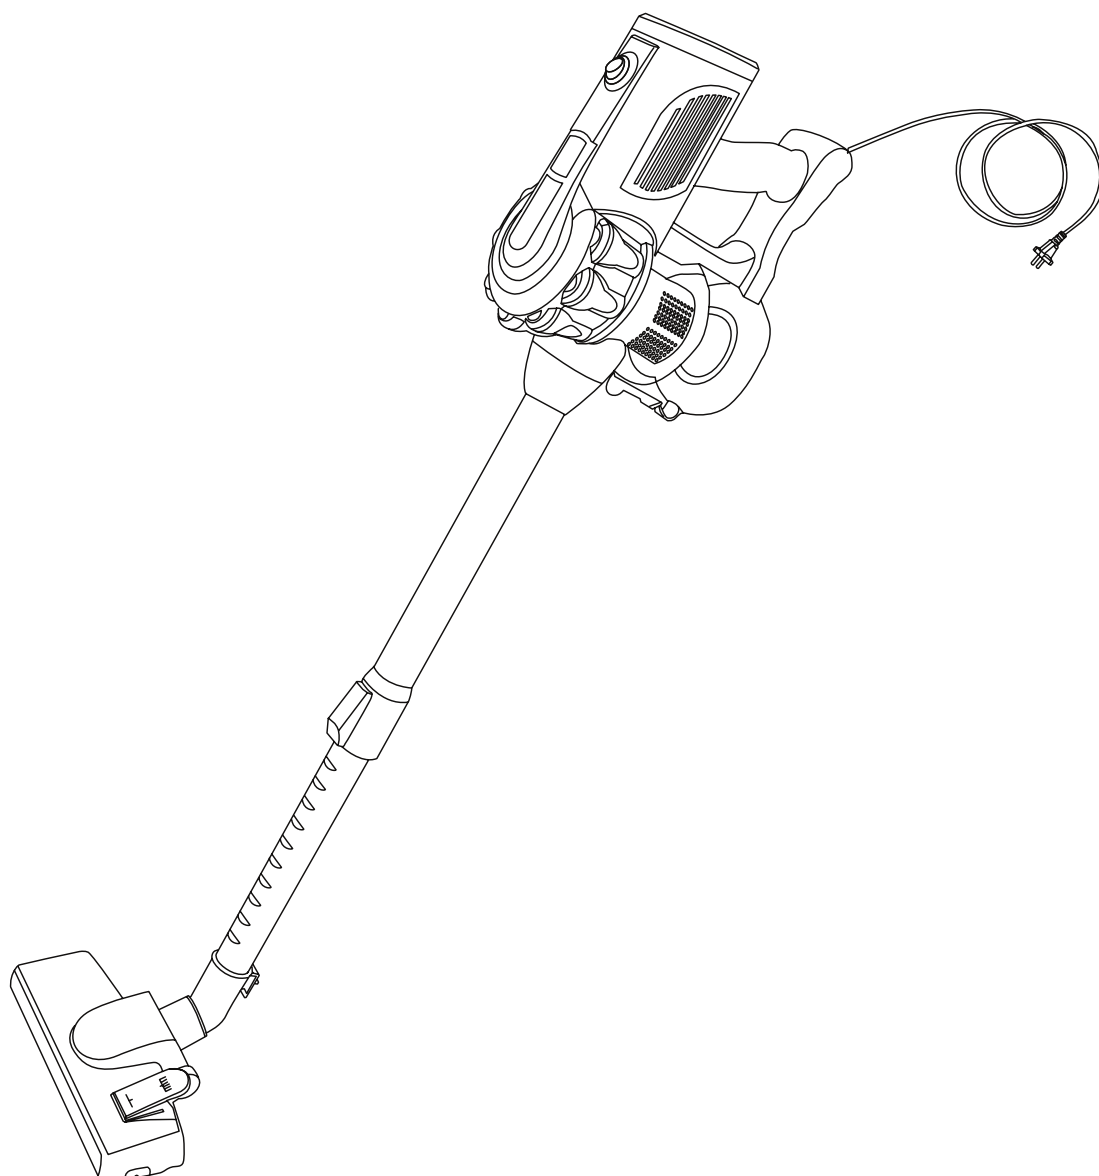

FR

Manuel d'utilisation,
d'installation et d'instructions

www.linarie.fr

Enregistrez
votre
produit
en ligne



Séparez les éléments avant de trier



CET APPAREIL EST DESTINE A UN USAGE DOMESTIQUE UNIQUEMENT!

Veuillez lire attentivement toutes les instructions avant la première utilisation et conservez-les pour une référence ultérieure.

Vous venez d'acheter notre produit et nous vous remercions. Nous apportons un soin particulier au design, à l'ergonomie et à la simplicité d'usage de nos produits. Nous espérons que cet appareil vous donnera entière satisfaction.

Dans le souci d'une amélioration constante de nos produits, nous nous réservons le droit d'apporter à leurs caractéristiques techniques, fonctionnelles ou esthétiques toutes modifications liées à leur évolution.

Remarque:

Nous nous efforçons sans cesse d'améliorer nos produits. Les caractéristiques et le mode d'emploi de ce produit peuvent être modifiés sans préavis.

Merci d'avoir choisi Linarie.

TABLE DES MATIÈRES


1. CONSIGNES DE SÉCURITÉ	3
2. DESCRIPTION DE L'APPAREIL	4
3. FONCTIONNEMENT	5
4. NETTOYAGE ET ENTRETIEN	6
5. DEPANNAGE	6
6. FICHE TECHNIQUE	6
7. PROTECTION DE L'ENVIRONNEMENT	6

Informations complémentaires sur les produits, accessoires, la garantie, les pièces de rechange et les services peuvent être trouvé sur **www.linarie.fr**

1. CONSIGNES DE SÉCURITÉ

- Lisez attentivement ce livret d'instructions.
 - Avant d'utiliser l'appareil, vérifiez que la tension secteur correspond à la tension indiquée sur la plaque signalétique.
 - Débranchez toujours la fiche de la prise de courant lorsque l'appareil n'est pas utilisé et avant le nettoyage.
 - N'utilisez jamais d'alcool à brûler ou d'autres solvants pour nettoyer l'appareil.
 - Ne laissez jamais l'appareil sans surveillance lorsqu'il est allumé.
 - N'allumez pas l'appareil s'il semble défectueux d'une manière ou d'une autre.
 - Pour les réparations ou les accessoires, contactez votre revendeur ou un centre de service agréé.
 - Cet appareil peut être utilisé par des enfants âgés de 8 ans et plus et des personnes ayant des capacités physiques, sensorielles ou mentales réduites ou un manque d'expérience et de connaissances s'ils ont reçu une surveillance ou des instructions concernant l'utilisation de l'appareil en toute sécurité et comprennent les dangers impliqués. Les enfants ne doivent pas jouer avec l'appareil. Le nettoyage et l'entretien par l'utilisateur ne doivent pas être effectués par des enfants sans surveillance.
 - Les aspirateurs sont destinés à un usage domestique uniquement. Veuillez ne pas les utiliser à des fins commerciales ou à d'autres fins.
 - Veuillez ne pas utiliser l'aspirateur pour nettoyer le détergent d'aspiration, le kérosène, les scories de verre, les aiguilles, la suie, la poussière humide, les eaux usées, les allumettes et autres objets.
 - Veuillez ne pas utiliser d'aspirateur pour nettoyer le ciment d'aspiration, la poudre de gypse, la poudre murale et d'autres petites particules, ou les jouets, boules de papier et autres objets plus gros, sinon l'aspirateur pourrait être bouché et le moteur grillé.
 - L'aspirateur n'absorbe pas la cigarette allumée
 - Veuillez garder l'aspirateur loin du feu et d'autres endroits à haute température.
 - Lorsque vous utilisez un aspirateur, veillez à ne pas obstruer l'orifice d'aspiration ou bloquer le rouleau, sinon le moteur pourrait provoquer un dysfonctionnement.
 - Ne versez pas et ne renversez pas d'eau ou d'autres liquides dans la machine, car cela éviterait un court-circuit qui brûlerait l'aspirateur.
 - Lorsque vous utilisez une batterie neuve ou une batterie qui a été utilisée pour la première fois après avoir été stockée pendant une longue période, veuillez charger complètement la batterie. Lorsque vous stockez cette machine pendant de longues périodes ou si vous ne l'utilisez pas, assurez-vous de la charger et de la décharger pendant au moins trois mois.
 - Veuillez utiliser un chiffon sec lors du nettoyage de l'aspirateur. Veuillez ne pas utiliser d'essence... Sinon, la coque se fissurera ou se décolorera.
 - Veuillez ne pas utiliser ou stocker l'aspirateur à haute température, basse température ou dans d'autres conditions défavorables, la température ambiante d'utilisation intérieure proposée est de 0 ~ 40 °C, stockez-le dans un endroit frais et sec, interdisez une exposition prolongée au soleil.
 - Ne faites pas passer l'appareil sur le câble d'alimentation lors de son fonctionnement.
 - Veuillez vous assurer que les enfants ne joueront pas avec.
-
- **Cet appareil est destiné à être utilisé dans des applications domestiques uniquement et sont exclus de la garantie :**
 - les espaces cuisine du personnel dans les magasins, bureaux et autres environnements de travail ;
 - les fermes ;
 - par les clients des hôtels, motels et autres environnements de type résidentiel ;
 - des environnements de type chambres d'hôtes.

2. DESCRIPTION DE L'APPAREIL

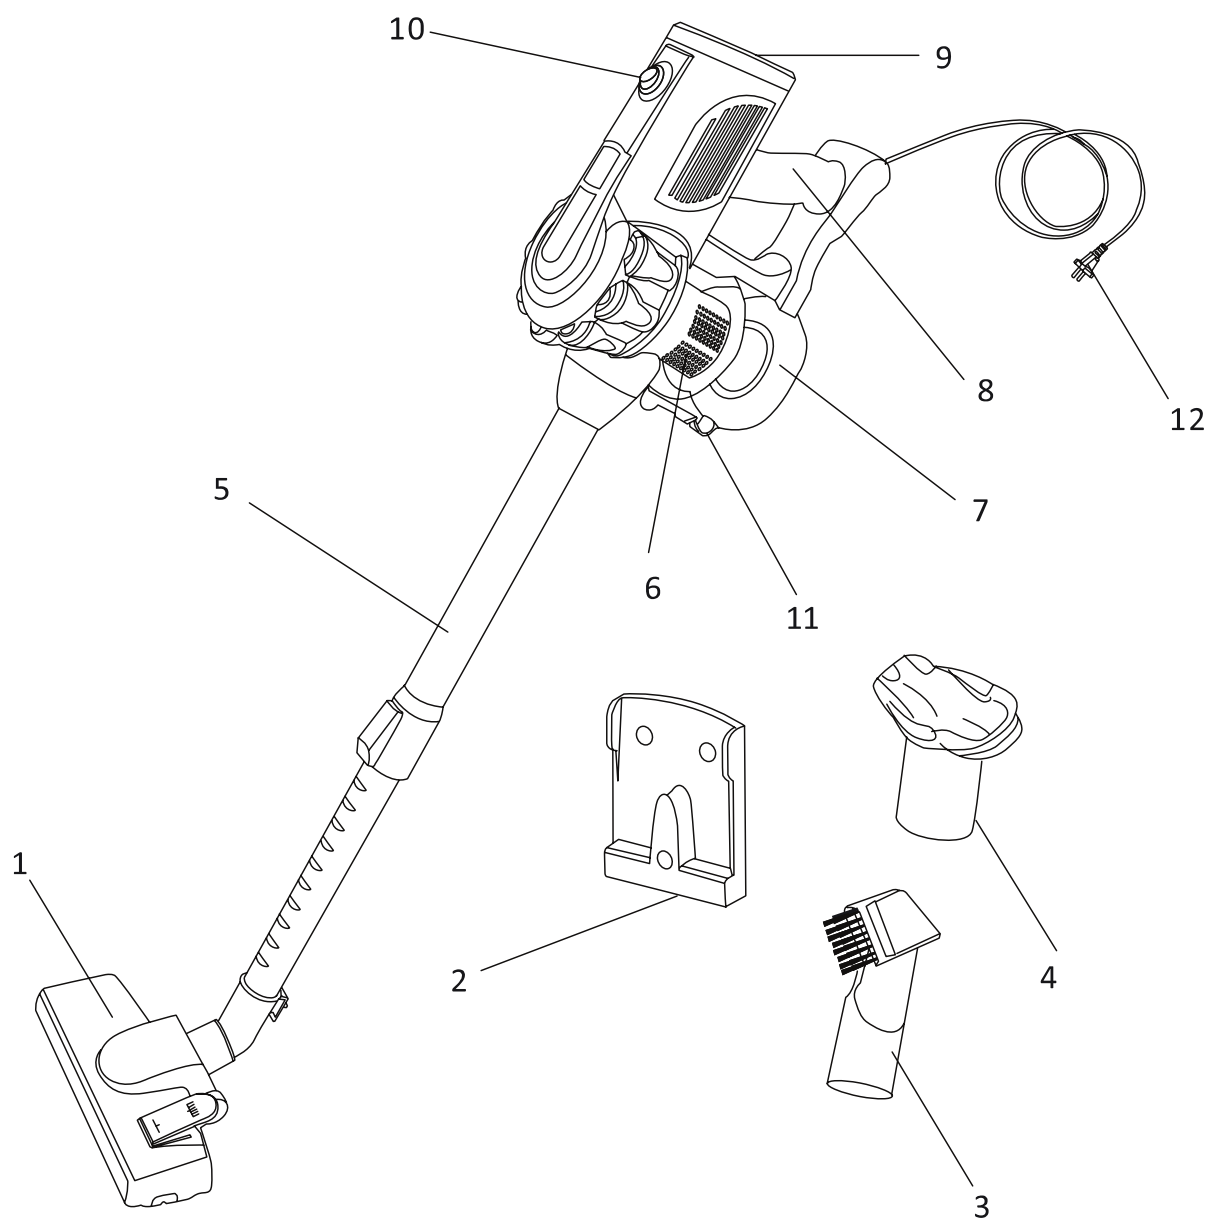


- 1 - Floor brush
- 2 - Wall mounting
- 3 - Flat nozzle
- 4 - Brush for sofa
- 5 - Telescopic tube
- 6 - Filter
- 7 - Dust cup

- 8 - Handle
- 9 - Suction head
- 10 - On/Off button
- 11 - Dust container release button
- 12 - Power cable

3. FONCTIONNEMENT


Assemblage

Débranchez toujours l'appareil avant de l'ouvrir. Vous pouvez fixer la brosse du suceur plat en la poussant dans l'orifice d'aspiration comme illustré ci-dessous, Elle permet de nettoyer les plafonds, les bouches d'aération, les cadres de fenêtres et bien plus encore.

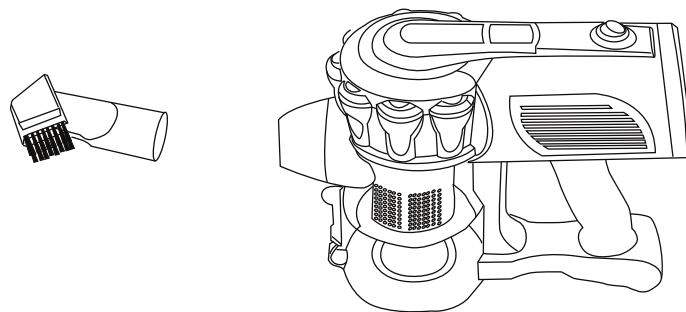

Montage

Fixez l'arrière du support de montage au mur à l'aide de 3 vis et fixez la rainure inférieure de l'aspirateur au support de montage.

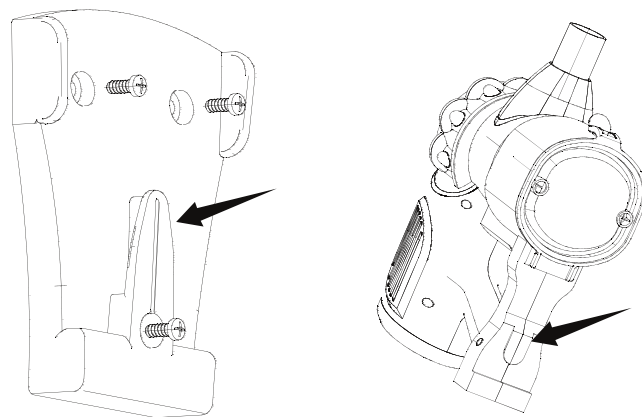

Utilisation

1. Assurez-vous que le filtre est correctement installé.
2. Assurez-vous que l'interrupteur ON/OFF est en position OFF (éteint)
3. Insérez la fiche d'alimentation dans la prise de courant.
4. Appuyez sur l'interrupteur MARCHE/ARRÊT.
5. Guidez la buse sur la surface à nettoyer, vérifiez si le niveau de remplissage maximal du bac à poussière est atteint. Si tel est le cas, il faut le vider.
6. Après utilisation, appuyez à nouveau sur l'interrupteur marche/arrêt et débranchez l'appareil.

4. NETTOYAGE ET ENTRETIEN

Débranchez l'appareil avant de nettoyer et assurez-vous qu'il a complètement refroidi. N'utilisez pas de pinceau, d'objets abrasifs ou de liquides. Seul le bac à poussière et le filtre peuvent être lavés à l'eau froide. Laissez sécher complètement les pièces avant de remonter le produit. Attention! N'utilisez jamais de sèche-linge ou de sèche- cheveux.

5. DEPANNAGE

L'aspirateur ne fonctionne pas.

- La prise électrique n'est peut-être pas alimentée ou le câble s'est débranché. Vérifiez que le câble est branché et vérifiez la prise électrique.

L'aspirateur n'aspire pas ou la puissance d'aspiration est faible.

- Le bac à poussière est plein ou le filtre doit être nettoyé ou remplacé. Videz le bac à poussière et nettoyez les filtres conformément aux instructions de cette notice.

De la poussière s'échappe à travers l'aspirateur.

- Le bac à poussière est plein ou les filtres ne sont pas installés correctement ou présentent des trous. Videz le bac à poussière et vérifiez l'installation du filtre. Vérifiez également que le filtre n'est pas endommagé.


6. FICHE TECHNIQUE

Puissance	600W
Tension	220-240V, 50/60Hz
Corde	3.2M
Capacité	0.8L

7. PROTECTION DE L'ENVIRONNEMENT

Ce symbole indique la collecte séparée d'équipements électriques et électroniques. L'objectif principal de la collecte séparée de ces résidus est de réduire la quantité à éliminer, de promouvoir la réutilisation, le recyclage et d'autres formes de valorisation en vue de diminuer leurs effets négatifs sur l'environnement.

Lorsque cet appareil est mis au rebut, il ne doit pas être jeté avec les autres résidus urbains de manière non différenciée. L'utilisateur est responsable de déposer lui-même les déchets dans les installations de collecte sélective prévues à cet effet.

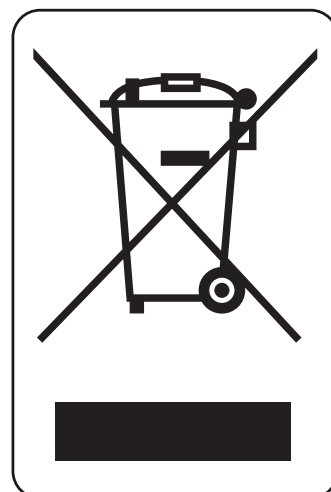

VOUS VOULEZ EN SAVOIR PLUS ?

Pour plus d'informations sur tous les appareils Linärie,
Ou pour obtenir des informations détaillées sur les
dimensions et l'installation, appelez ou envoyez un
e-mail à notre équipe du service client Ou visitez
notre site Web :

France
contact@linarie.fr
www.linarie.fr

Australia
hello@linarie.com.au
www.linarie.com.au

Follow Us
@Linarie.Appliances
  

© Linärie

Operating and installation instructions:

Original

✓ Translation

**MKZ SALES
3 IMPASSE DES JARDINIERS
77400 LAGNY SUR MARNE**

**Linärie Contact
contact@linarie.fr
www.linarie.fr**

The distribution and duplication of this document, as well as the use and disclosure of its contents are prohibited unless expressly authorised.

These operating and installation instructions have been drawn up with the greatest of care. But it cannot be ruled out that subsequent technical modifications have not yet been incorporated or the relevant content has not yet been adapted. Please accept our apologies in this eventuality. An updated version can be requested from our team. Subject to printing errors and mistakes.

© Linärie


All rights reserved.

linärie

CASTRES

LH600SVCC

VACUUM CLEANER

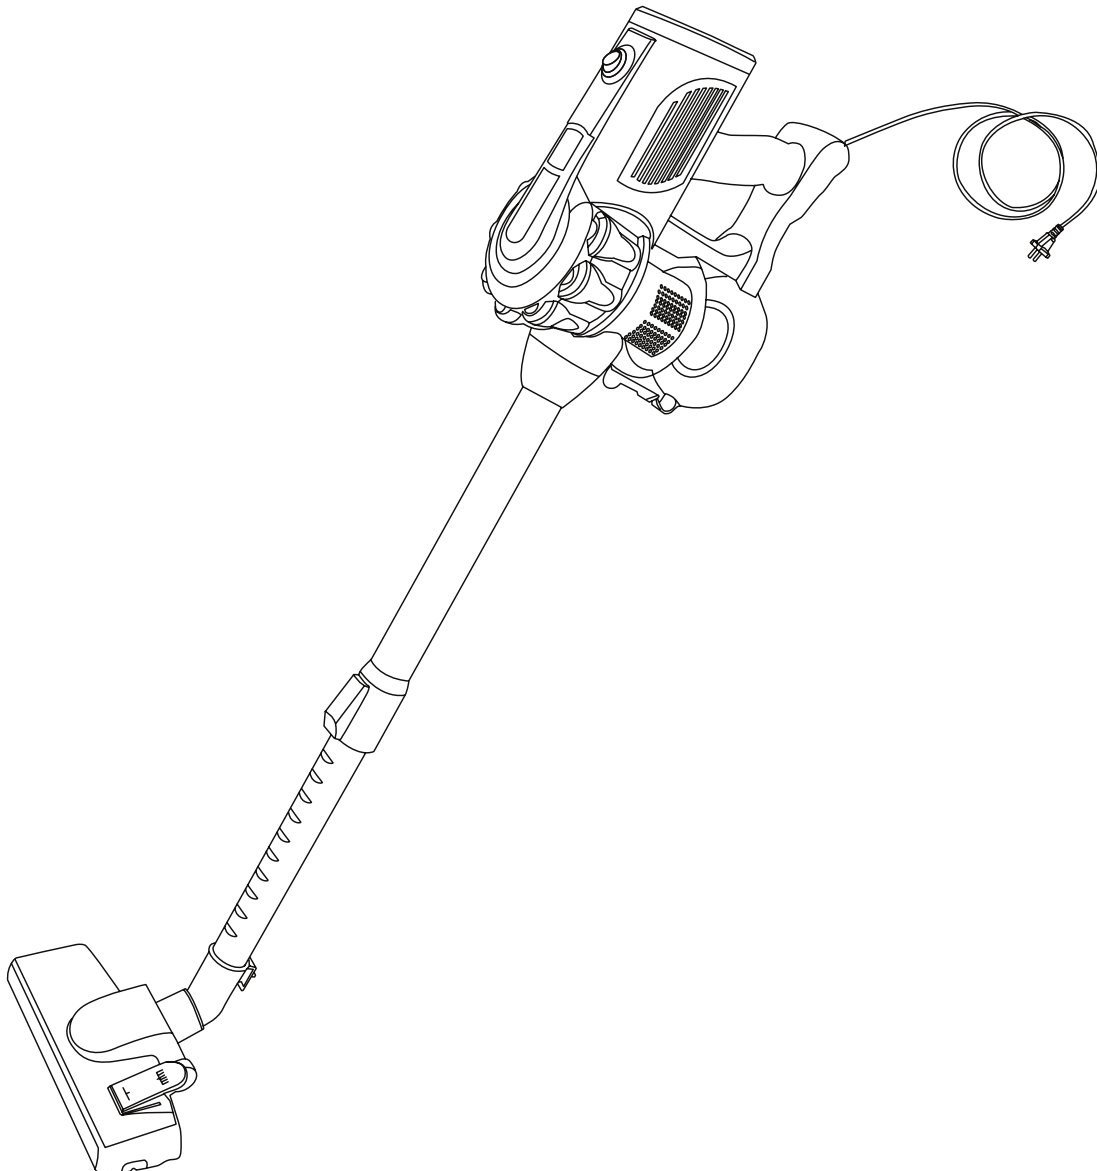

EN Operation, Installation
& Instruction Manual

www.linarie.com.au

Register
your
product
online

CONGRATULATIONS

Congratulations and thank you for choosing Linärie to introduce a new comfort in your home. We are sure you will find your new appliance a pleasure to use and a great asset to your kitchen.

This appliance complies with all relevant safety requirements in Australia. Inappropriate use can, however, lead to personal injury and damage to property.

In order to operate the unit correctly and safely, please read this instruction manual carefully before installation and usage. This user manual which provides you with all required instructions related to safety, installation, use and maintenance of the appliance.

For future reference, please store this booklet in a safe place and ensure that all users are familiar with the contents. Pass them on to any future owner of the appliance.

Record Model & Serial Number
Model:.....
Serial Number
Register your product www.linarie.com.au

 **IMPORTANT**

Adherence to the directions for use in this manual is extremely important for health and safety. Failure to strictly adhere to the requirements in this manual may result in personal injury, property damage and affect your ability to make a claim under Linärie’s manufacturer’s warranty provided with your product. Products must be used, installed and operated in accordance with this manual. You may not be able to claim on Linärie’s manufacturer’s warranty in the event that your product fault is due to failure to adhere in this manual.

- Correct Conditions of Use**
- The appliance is intended for use in the home and similar environments only. It is not intended for commercial use.
 - The appliance is not suitable for outdoor use.

 The electricity connection must be made by a qualified specialist. Installation must comply with the valid standards, regulations and laws. All safety and warning information and the operating and installation instructions must be complied with.

TABLE OF CONTENTS


1. SAFETY INSTRUCTIONS	3
2. DESCRIPTION OF THE DEVICE	4
3. OPERATION	5
4. CLEANING AND CARE	6
5. TROUBLESHOOTING	6
6. TECHNICAL SHEET	6
7. ENVIRONMENTAL PROTECTION	7
8. WARRANTY & AFTER SALE S SERVICE	7

Additional information on products, accessories, warranty, replacement parts and services can be found at www.linarie.com.au

1. SAFETY INSTRUCTIONS

- Read this instruction booklet carefully.
- Before using the appliance, check that the mains voltage corresponds to the voltage indicated on the nameplate.
- Always disconnect the plug from the electrical outlet when the appliance is not in use and before cleaning.
- Never use rubbing alcohol or other solvents to clean the device.
- Never leave the device unattended when it is switched on.
- Do not turn on the device if it appears defective in any way.
- For repairs or accessories, contact your dealer or an authorized service center.
- This appliance may be used by children aged 8 and over and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have received supervision or instruction regarding the use of the appliance. The device safely and understand the dangers involved. Children should not play with the device. Cleaning and user maintenance should not be carried out by children without supervision.
- Vacuum cleaners are intended for domestic use only. Please do not use them for commercial or other purposes.
- Please do not use the vacuum cleaner to clean suction detergent, kerosene, glass slag, needles, soot, wet dust, sewage, matches and other objects.
- Please do not use a vacuum cleaner to clean suction cement, gypsum powder, wall powder and other small particles, or toys, paper balls and other larger objects, otherwise the vacuum cleaner may be clogged and the engine burned out.
- The vacuum cleaner does not absorb the lit cigarette.
- Please keep the vacuum cleaner away from fire and other high temperature places.
- Be sure to install the HEPA filters and floor brush roller when using the vacuum cleaner.
- When using a vacuum cleaner, be careful not to obstruct the suction port or block the roller, otherwise the motor may cause a malfunction.
- Do not pour or spill water or other liquids into the machine, as this will prevent a short circuit which will burn the vacuum cleaner.
- When using a new battery or a battery that has been used for the first time after being stored for a long time, please fully charge the battery. When storing this machine for long periods of time or not using it, be sure to charge and unload it for at least three months.
- Please use a dry cloth when cleaning the vacuum cleaner. Please do not use gasoline...Otherwise the case will crack or discolor.
- Please do not use or store the vacuum cleaner in high temperature, low temperature or other adverse conditions, the suggested indoor use ambient temperature is 0~40°C, store it in a cool and dry place, prohibit prolonged exposure to the sun.
- Please ensure that children will not play with it.
- **This appliance is intended for use in domestic applications only and is excluded from warranty:**
 - staff kitchen areas in stores, offices and other work environments;
 - the farms ;
 - by guests of hotels, motels and other residential type environments;
 - guest room type environments.

2. DESCRIPTION OF THE DEVICE

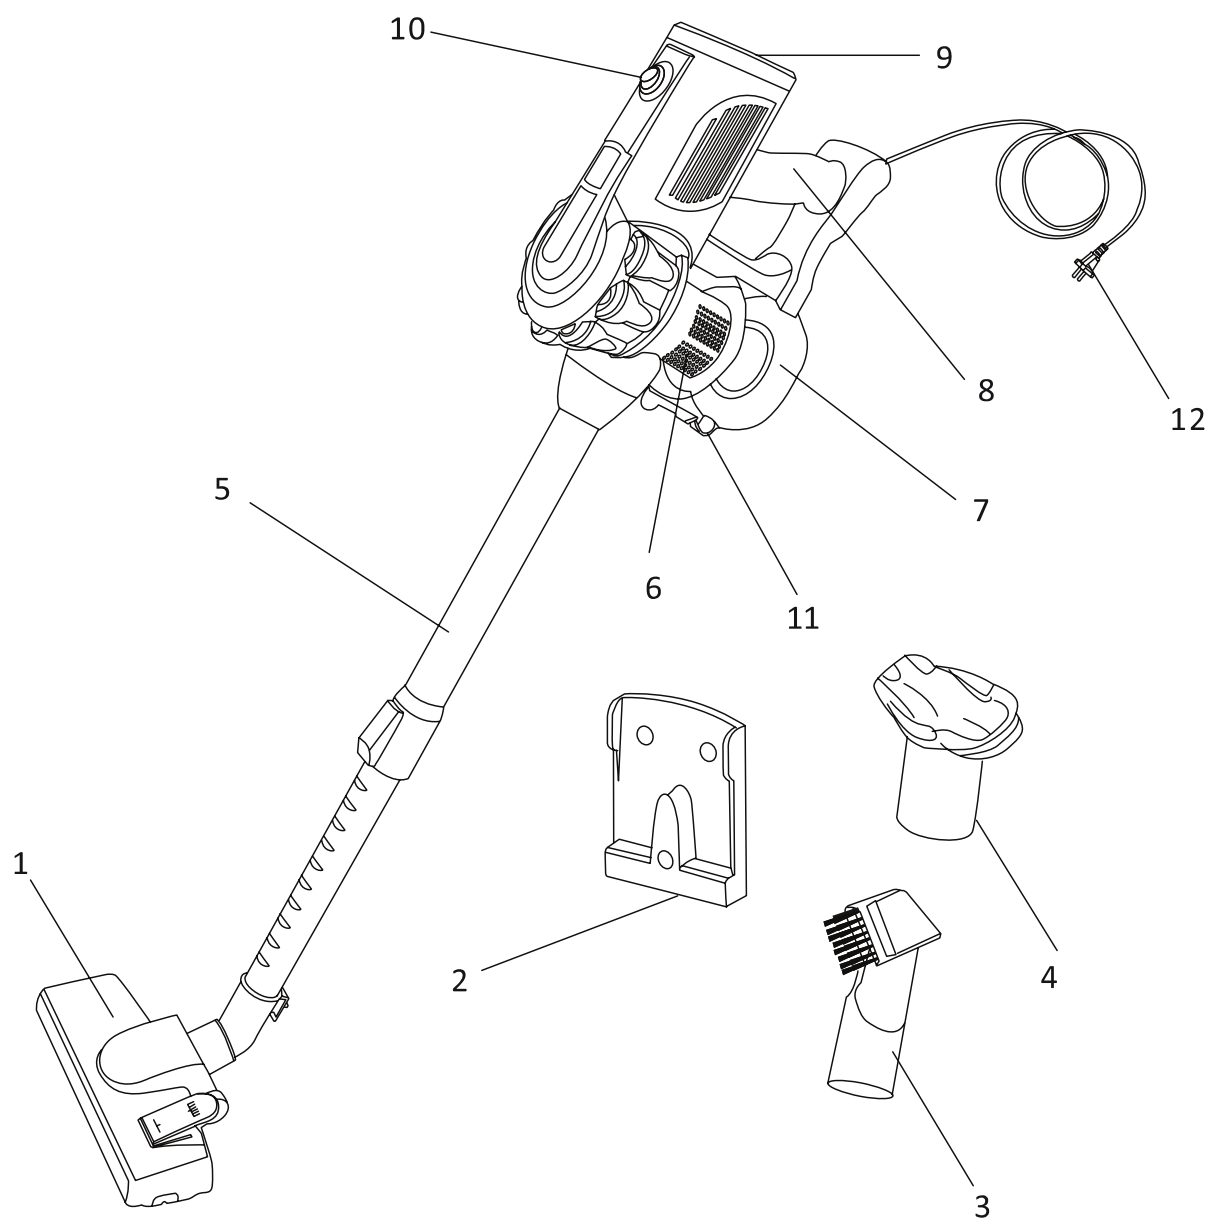


- 1 - Floor brush
- 2 - Wall mounting
- 3 - Flat nozzle
- 4 - Brush for sofa
- 5 - Telescopic tube
- 6 - Filter

- 7 - Dust cup
- 8 - Handle
- 9 - Suction head
- 10 - On/Off button
- 11 - Dust container release button
- 12 - Power cable

3. OPERATION


Assembly

Always unplug the device before opening it.
You can attach the flat tool brush by pushing it into the suction port as shown below. It can clean ceilings, air vents, window frames and much more.

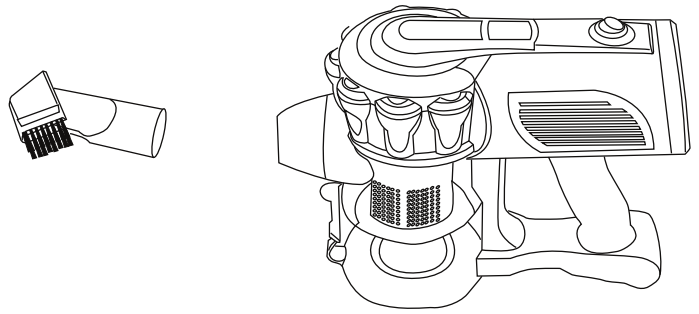

Mounting

Secure the back of the mounting bracket to the wall using 3 screws and attach the bottom groove of the vacuum cleaner to the mounting bracket.

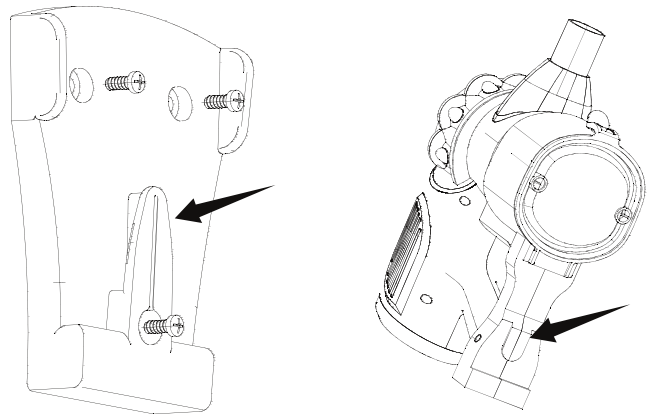

Use

1. Make sure the filter is installed correctly.
2. Make sure the ON/OFF switch is in the OFF position
3. Insert the power plug into the power outlet.
4. Press the ON/OFF switch.
5. Guide the nozzle onto the surface to be cleaned, check if the maximum filling level of the dust container is reached. If this is the case, it must be emptied.
6. After use, press the on/off switch again and unplug the device.

4. CLEANING AND CARE

Unplug the appliance before cleaning and make sure it has cooled completely. Do not use a brush, abrasive objects or liquids. Only the dust container and filter can be washed in cold water. Allow the parts to dry completely before reassembling the product.

Attention! Never use a tumble dryer or hair dryer.

5. TROUBLESHOOTING

The vacuum cleaner does not work.

- The electrical outlet may not have power or the cable may have become unplugged. Make sure the cable is plugged in and check the electrical outlet.

The vacuum cleaner does not vacuum or the suction power is weak.

- The dust container is full or the filter needs to be cleaned or replaced. Empty the dust container and clean the filters according to the instructions in this manual.

Dust escapes through the vacuum cleaner.

- The dust container is full or the filters are not installed correctly or have holes. Empty the dust container and check the filter installation. Also check that the filter is not damaged.

6. TECHNICAL SHEET

Power	600W
Voltage	220-240V, 50/60Hz
Cable	3.2M
Capacity	0.8L


7. ENVIRONMENTAL PROTECTION

Observe all safety and warning information during operation (see the "General Safety Instructions" section).

7.1 Disposal considerations

The transport and protective packaging has been selected from materials which are environmentally friendly for disposal, and can normally be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites. Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation.

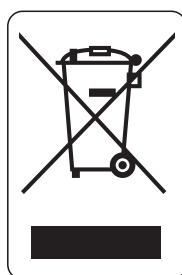

7.2 Disposing of your old appliance

Electrical devices marked with this label may not be disposed of in domestic waste at the end of their service life.

Electrical and electronic appliances often contain valuable materials. They also contain specific materials, compounds and components, which were essential for their correct function and safety. These could be hazardous to human health and to the environment if disposed of with your domestic waste or if handled incorrectly. Please do not, therefore, dispose of your old appliance with your household waste.

Please dispose of those materials by contacting your local authorities and ask for the correct method of disposal. Please ensure that your old appliance poses no risk to children while being stored prior to disposal.

By disposing of this product in accordance with the regulations, you protect the environment and the health of those around you from negative consequences.

8. WARRANTY & AFTER SALE S SERVICE

Observe all safety and warning information during operation (see the "General Safety Instructions" section).

In the event of a fault which you cannot remedy yourself, please contact Linärie.

10.1 Warranty

The manufacturer's warranty for this appliance is 2 years.

10.2 After sales service

The contact details for Linärie are given at the beginning and of these instructions.

When contacting Linärie, please quote the model and serial number of your appliance. These can be found on the data plate, after removing the grease filter.

Record model & serial number

Model:.....

Serial Number:.....

Register your product **www.linarie.com.au**

10.3 Replacement of spare parts

Incorrect components can lead to personal injury or damage to the appliance. Use only genuine original Linärie spare parts.

Modifications, additions or alterations to the appliance can lead to safety risks. If spare parts or accessories from other manufacturers are used, the warranty will be invalidated, and Linärie cannot accept liability.

Please check **www.linarie.com.au** for more information.

LIKE TO KNOW MORE?

For further information on all Linärie appliances,
or to obtain detailed dimension and installation
information, phone or email our Customer Care
team or visit our website:

Australia
hello@linarie.com.au
www.linarie.com.au

Follow Us
[@Linarie.Appliances](#)

