

ASSEMBLY INSTRUCTIONS


Please read the instructions carefully for correct and safe assembly.

Name product **CONSOLE TABLE CLASS**

Article number **2600012, 2600024, 2600025**

1

- Ⓐ TABLE TOP x1
- Ⓑ PART 1 x2
- Ⓒ PART 2 x2
- Ⓓ HANDLE (INSIDE) x2

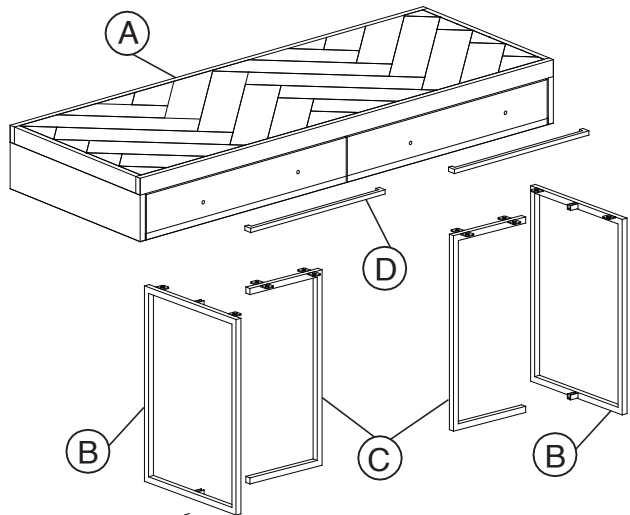

2

- | | | | |
|----|------------------|---|-----|
| 01 | ALLEN LONG BOLT |  | x12 |
| 02 | ALLEN SHORT BOLT |  | x4 |
| 03 | SPRING WASHER |  | x12 |
| 04 | FLAT WASHER |  | x12 |
| 05 | ALLEN KEY |  | x1 |

Phillips head screwdriver
tool needed (not include)



**Thank you for
purchasing this
Dutchbone product.**





DUTCH BONE

ASSEMBLY INSTRUCTIONS

Please read the instructions carefully for correct and safe assembly.

Name product **CONSOLE TABLE CLASS**

Article number 2600012, 2600024, 2600025

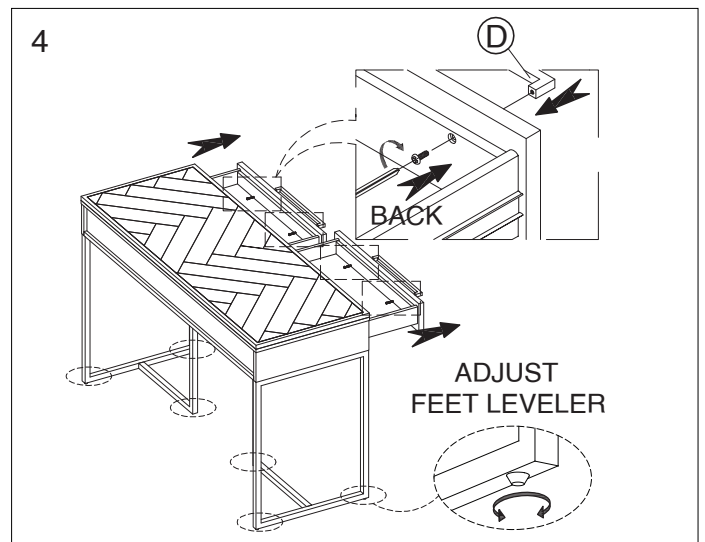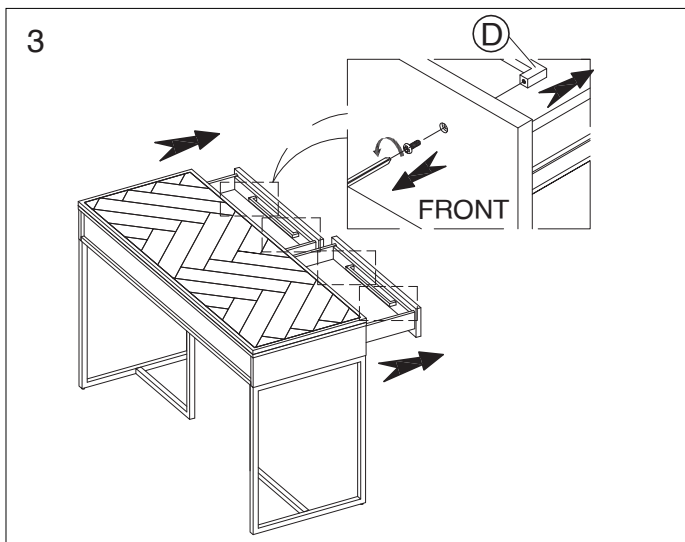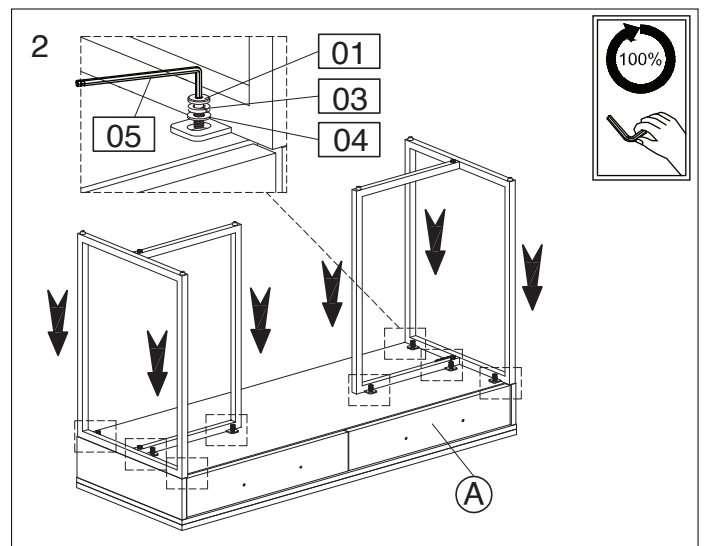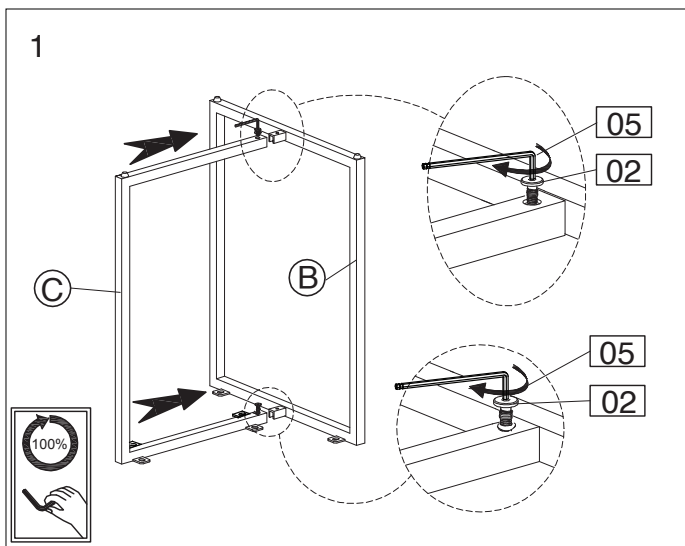

**Thank you for
purchasing this
Dutchbone product.**

FURNITURE TIPPING RESTRAINT FOR CONSOLE TABLE CLASS

Young children may be injured by tipping furniture and the use of a tipping restraint is highly recommended.

When properly installed, this restraint could provide protection against the unexpected tipping of furniture due to small tremors, bumps or climbing. We recommend mounting this restraint to a wall stud.

WARNING: This product is only a deterrent. It is not a substitute for proper adult supervision.

TIPPING KIT CHECK LIST


CODE	COMPONENT	QTY
01	PLASTIC STRAP	2
02	SCREW	4
03	NYLON WALL PLUG	4
04	PLASTIC BRACKET	2

SCREWDRIVER TOOL NEEDED
(NOT INCLUDED)

Installation Instruction:

1. Determine the final position of the furniture piece. Mark location on the wall approximately 2" below the plastic bracket (04) mounted to the back of the furniture.
2. Drill a starter hole into the wall stud. If wall stud is not available, drill a hole into the wall and insert nylon wall plug (03). Gently tap plug until the flange of the plug is flush with the wall.
3. Attach a second plastic bracket (04) by inserting and securing the screw (02) to the wall. Refer to picture B.
4. Align the two plastic brackets (04).
5. Thread the plastic strap (01) through both plastic brackets (04) and tighten until snug.
6. Check to make sure that the plastic brackets (04) are firmly installed the plastic strap (01) is secure.
7. Repeat steps 1-6 at other end of furniture piece.

A

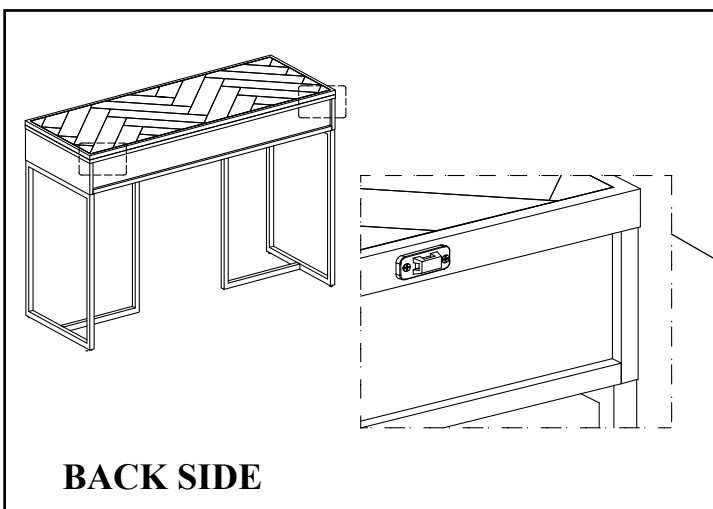

B

