

**DUTCH  
BONE**

# **ASSEMBLY INSTRUCTIONS**

Please read the instructions carefully for correct and safe assembly.


Name product SIDEBOARD BRUNEAU  
Article number 1001338

1

(A)

BODY

x1

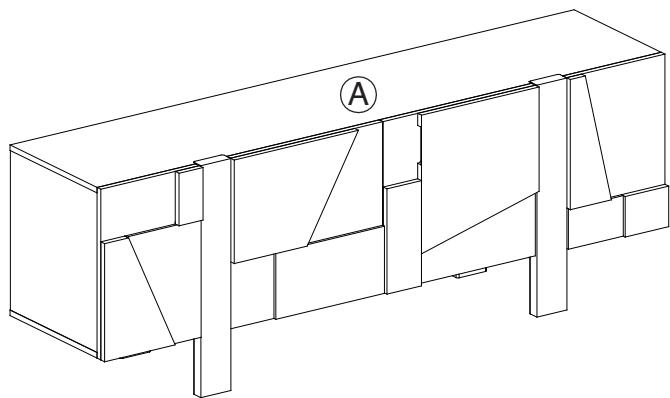

2

- 01** PLASTIC STRAP
- 02** SCREW (M4x25)
- 03** NYLON WALL PLUG
- 04** PLASTIC BRACKET



**Thank you for  
purchasing this  
Dutchbone product.**

# ASSEMBLY INSTRUCTIONS


Please read the instructions carefully for correct and safe assembly.

Name product SIDEBOARD BRUNEAU  
Article number 1001338


3

1. Attach one of the plastic brackets (04) securely near the top back edge of the furniture piece by inserting the screw (02). Refer to picture A.
2. Determine the final position of the furniture piece. Mark location on the wall approximately 2" below the plastic bracket (04) mounted to the back of the furniture.
3. Drill a starter hole into the wall stud. If wall stud is not available, drill a hole into the wall and insert nylon wall plug (03). Gently tap plug until the flange of the plug is flush with the wall.
4. Attach a second plastic bracket (04) by inserting and securing the screw (02) to the wall. Refer to picture B.
5. Align the two plastic brackets (04).
6. Thread the plastic strap (01) through both plastic brackets (04) and tighten until snug.
7. Check to make sure that the plastic brackets (04) are firmly installed the plastic strap (01) is secure.
8. Repeat steps 1-7 at other end of furniture piece.

A

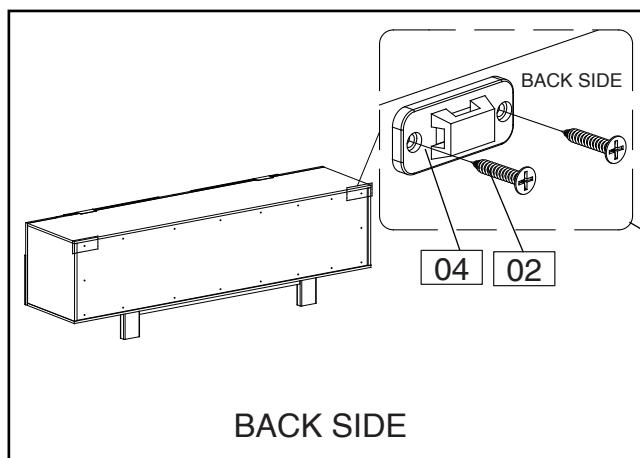

B

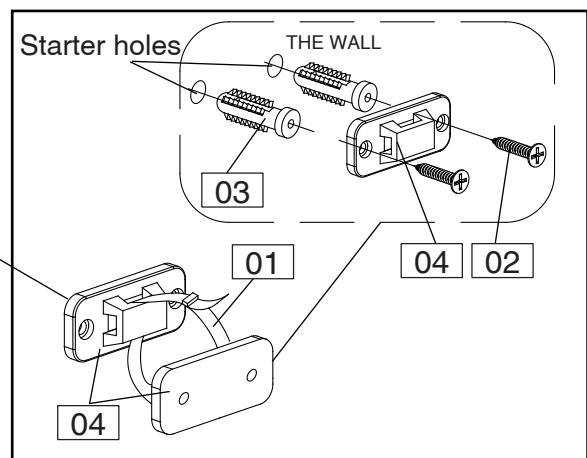

**Thank you for  
purchasing this  
Dutchbone product.**